


Axial piston units

for variable-speed drives

**A10FZO, A10VZO, A10FZG and A10VZG
series 10**

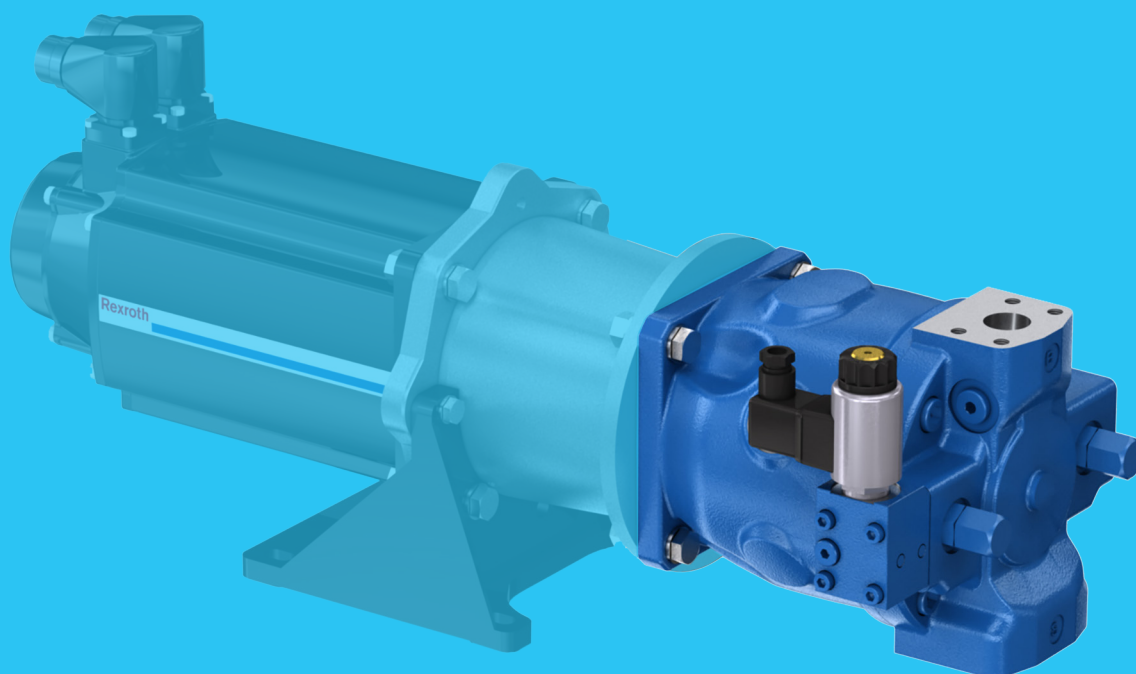

© Bosch Rexroth AG 2021. All rights reserved, also regarding any disposal, exploitation, reproduction, editing, distribution, as well as in the event of applications for industrial property rights.

The data specified within only serves to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.

The cover shows an example application. The product delivered may differ from the image on the cover.

The original instruction manual was created in German.

Contents

1	About this documentation	5
1.1	Validity of the documentation	5
1.2	Required and supplementary documentation	5
1.3	Representation of information	6
1.3.1	Safety instructions	6
1.3.2	Symbols	6
1.3.3	Designations	7
1.3.4	Abbreviations	7
2	Safety instructions	8
2.1	About this chapter	8
2.2	Intended use	8
2.3	Improper use	8
2.4	Personnel qualifications	9
2.5	General safety instructions	10
2.6	Product-specific safety instructions	11
2.7	Personal protective equipment	14
3	General instructions on property damage and product damage	15
4	Scope of delivery	18
5	About this product	20
5.1	Performance description	20
5.2	Product description	20
5.2.1	Axial piston unit layout	21
5.2.2	Functional description	22
5.3	Product identification	24
5.4	Direction of rotation and pin assignment A10FZO	24
5.5	Flow direction A10VZO	25
5.6	Flow direction A10FZG and A10VZG	25
6	Transport and storage	26
6.1	Transporting the axial piston unit	26
6.1.1	Transport by hand	27
6.1.2	Transport with lifting devices	27
6.2	Storing the axial piston unit	28
7	Installation	31
7.1	Unpacking	31
7.2	Installation conditions	31
7.3	Installation position A10FZO, A10VZO	33
7.3.1	Below-reservoir installation (standard)	33
7.3.2	Inside-reservoir installation	34
7.3.3	Above-reservoir installation	36
7.4	Installation position A10FZG, A10VZG	38
7.4.1	Below-reservoir installation (standard)	38
7.4.2	Above-reservoir installation	40
7.5	Installing the axial piston unit	41
7.5.1	Preparation	41
7.5.2	Dimensions	42
7.5.3	General instructions	42
7.5.4	Installation with a coupling	42
7.5.5	Remove the spacer (for version with through drive)	43
7.5.6	Completion of assembly	44

7.5.7	Hydraulically connecting the axial piston unit	45
7.5.8	Electrically connecting the axial piston unit	52
7.6	Performing flushing cycle	53
8	Commissioning	54
8.1	Initial commissioning	54
8.1.1	Filling the axial piston unit	54
8.1.2	Testing the hydraulic fluid supply	56
8.1.3	Performing a functional test	56
8.2	Running-in phase	57
8.3	Recommissioning after standstill	57
9	Operation	58
10	Maintenance and repair	58
10.1	Cleaning and care	58
10.2	Inspection	58
10.3	Maintenance	59
10.4	Repair	59
10.5	Spare parts	60
11	Removal and replacement	61
11.1	Required tools	61
11.2	Preparing for removal	61
11.3	Performing the removal	61
11.4	Preparing the components for storage or further use	61
12	Disposal	62
13	Extension and conversion	63
14	Troubleshooting	64
14.1	How to proceed for troubleshooting	64
14.2	Malfunction table	65
15	Technical data	69
16	Alphabetical index	70

1 About this documentation

1.1 Validity of the documentation

This documentation applies to the following products:

- Axial piston units A10FZO, A10VZO, A10FZG and A10VZG series 10 (standard version)

This documentation is intended for machine/system manufacturers, assemblers and service engineers.

This documentation contains important information on the safe and proper transport, assembly, commissioning, operation, maintenance, removal and simple troubleshooting of the axial piston unit.

- Read this documentation completely, in particular chapter 2 "Safety instructions" on page 8 and chapter 3 "General instructions on property damage and product damage" on page 15 before you start work with the axial piston unit.

1.2 Required and supplementary documentation

- Only commission the axial piston unit if the documentation marked with the book symbol  is available to you and you have understood and observed it.

Tabelle 1: Required and supplementary documentation

Title	Document number	Document type
 Order confirmation Contains the order-related technical data for your axial piston unit A10FZO, A10VZO, A10FZG and A10VZG	–	Order confirmation
 Installation drawing Contains the outer dimensions, all connections and the hydraulic circuit diagram for your axial piston unit A10FZO, A10VZO, A10FZG and A10VZG.	Please request the installation drawing from your contact at Bosch Rexroth.	Installation drawing
 Axial piston units A10FZO, A10VZO, A10FZG and A10VZG Contains the permissible technical data, ports, main dimensions and circuit diagrams of standard versions.	91485	Data sheet
 Hydraulic fluids based on mineral oils and related hydrocarbons Describes the requirements for mineral oil-based hydraulic fluids and related hydrocarbons for operation with Rexroth hydraulic components and provides support for selection of suitable hydraulic fluids for the hydraulic system.	90220	Data sheet
 Bosch Rexroth Fluid Rating List for Rexroth hydraulic components (pumps and motors) Contains the hydraulic fluids positively evaluated by Bosch Rexroth.	90245	Data sheet
Information on the application of hydrostatic drives at low temperatures Contains additional information on the application of Rexroth axial piston units at low temperatures.	90300-03-B	Manual
Storage and preservation of axial piston units Contains additional information on storage and preservation.	90312	Data sheet

1.3
Representation of information

Uniform safety instructions, symbols, terms and abbreviations are used throughout this documentation to ensure safe and proper use of the product. For clarification, they are explained in the sections below.

1.3.1
Safety instructions

This documentation contains safety instructions in chapter 2.6 "Product-specific safety instructions" on page 11 and in chapter 3 "General instructions on property damage and product damage" on page 15, as well as before a sequence of actions or an instruction for action involving a risk of personal injury and property damage. Always follow the measures for danger prevention associated with the use of this product.

Safety instructions are set out as follows:


SIGNAL WORD

Type and source of danger!
 Consequences of non-compliance
 ► Danger prevention measures

- **Warning sign:** draws attention to the danger
- **Signal word:** identifies the degree of the danger
- **Type and source of danger:** indicates the type and source of the danger
- **Consequences:** describes the consequences of non-compliance
- **Precautions:** states how the danger can be avoided

Tabelle 2: Hazard classes as defined in ANSI Z535.6

Warning sign, signal word	Meaning
 DANGER	Identifies a dangerous situation that will result in death or serious injury if it is not avoided.
 WARNING	Identifies a dangerous situation that may result in death or serious injury if it is not avoided.
 CAUTION	Identifies a dangerous situation that may result in minor to moderate injury if it is not avoided.
NOTICE	Property damage: The product or surrounding area may be damaged.

1.3.2
Symbols

The following symbols indicate notices that are not safety-relevant but increase understanding of the documentation.

Tabelle 3: Meaning of symbols

Symbol	Meaning
	If this information is disregarded, the product cannot be used and/or operated to its full extent.
►	Single, independent action
1. 2. 3.	Numbered instruction: The numbers indicate that the actions must be completed in order.

1.3.3 Designations

This documentation uses the following designations:

Tabelle 4: Designations

Designation	Meaning
A10FZO	Axial piston fixed displacement unit, open circuit
A10VZO	Axial piston variable displacement unit, open circuit
A10FZG	Axial piston fixed displacement unit, open and closed circuit
A10VZG	Axial piston variable displacement unit, open and closed circuit
Threaded plug	Metal screw, pressure-resistant
Protective plug	Made out of plastic, not pressure-resistant, only for transportation

As a generic term for "axial piston units for variable-speed drives A10FZO, A10VZO, A10FZG and A10VZG", the designation "axial piston unit" will be used hereinafter.

1.3.4 Abbreviations

This documentation uses the following abbreviations:

Tabelle 5: Abbreviations

Abbreviation	Meaning
ANSI	A merican N ational S tandards I nstitute is an organization that coordinates the development of voluntary standards in the United States
ATEX	EC directive on explosion protection (A tmosphere e xplosible)
DIN	D eutsches I nstitut für N ormung (German Institute for Standardization)
DG	Two-point control, d irectly c ontrolled
DR	D ruckregler (pressure controller), hydraulic
EZ	T wo point control e lectric
ISO	I nternational O rganization for S tandardization
JIS	J apan I ndustrial S tandard
LA	Torque controller
RE	R exroth document in the E nglish language
VDI 2230	Guideline for the systematic calculation of heavy-duty threaded connections and cylindrical screw joints from the VDI (V erein D eutscher I ngenieur e - Association of German Engineers)

2 Safety instructions

2.1 About this chapter

The axial piston unit has been manufactured to generally accepted engineering standards. There is still, however, a risk of personal injury or property damage if this chapter and the safety instructions in this documentation are not observed.

- ▶ Read this documentation completely and thoroughly before working with the axial piston unit.
- ▶ Keep this documentation in a location where it is accessible to all users at all times.
- ▶ Always include the required documentation when you pass the axial piston unit on to third parties.

2.2 Intended use

Axial piston units are hydraulic components, meaning that in their application area they are classified neither as complete nor as partly completed machinery in the sense of the EC Machinery Directive 2006/42/EC. The component is exclusively intended to form partly completed machinery or complete machinery together with other components. The component should only be commissioned after it has been installed in the machine/system for which it is intended, and the safety of the entire system has been established in accordance with the Machinery Directive.

This product is intended for the following use:

The A10FZG axial piston unit is only approved for hydrostatic, variable-speed drives in open and closed hydraulic circuits.

The A10VZG axial piston unit is only approved for hydrostatic, variable-speed drives in open and closed hydraulic circuits.

The A10FZO and A10VZO axial piston units are only approved for hydrostatic, variable-speed drives in open hydraulic circuits.

- ▶ Observe the technical data, the application and operating conditions and the performance limits as specified in the data sheet 91485 and in the order confirmation. Information about approved hydraulic fluids can be found in data sheet 91485.

The axial piston unit is only intended for commercial use and not for private use. Intended use includes having fully read and understood this documentation, especially chapter 2 "Safety instructions" on page 8.

2.3 Improper use

Any use other than that described as intended use is considered improper.

Bosch Rexroth AG is not liable for damage resulting from improper use. The user is solely responsible for any risks arising from improper use.

The following foreseeable forms of faulty usage are also considered improper (this list is not exhaustive):

- Use outside the operating parameters approved in the data sheet and in the order confirmation (unless specifically approved by the customer)
- Use of non-approved fluids, e.g. water or polyurethane components
- Changes to factory settings by unauthorized persons
- Use of assembled parts (e.g. attachment filter, control unit, valves) other than specified Rexroth components

- Use of the axial piston unit with assembled parts under water at a depth of more than 10 meters without the necessary additional measures, e.g. pressure equalization. Units with electrical components (e.g. sensors) must not get into contact with water, depending on the IP protection class. Observe the IP protection class of the relevant product in data sheet 91485. Axial piston units may only be used on a case-by-case basis for this application.
- The maximum permissible case pressure specified in the data sheet must not be exceeded.
- Application of the axial piston unit in explosive environments unless the component or machine/system has been certified as compliant with the ATEX Directive 2014/34/EU
- Use of the axial piston unit in a corrosive atmosphere
- Use of the axial piston unit in aircraft or spacecraft

2.4 Personnel qualifications

The activities described in this documentation require a basic understanding of mechanics, electricity and hydraulics, as well as familiarity with associated technical terms. For transporting and handling the product, knowledge regarding the use of lifting devices and lifting accessories is required. In order to ensure safe use, these activities should only be performed by skilled personnel or an instructed person under the direction and supervision of skilled personnel. Skilled personnel refers to persons who possess the professional training, knowledge and experience, as well as the understanding of the regulations relevant to the work to be done that are necessary to recognize possible dangers and take the appropriate safety measures. Skilled personnel must follow the rules relevant to their field and have the necessary hydraulic expert knowledge.

Hydraulic expert knowledge includes:

- Being able to read and fully understand hydraulic circuit diagrams
- In particular, fully understanding the relationships with regard to safety devices
- Knowledge regarding the function and interaction of hydraulic components.



Bosch Rexroth offers training support for specialized fields. You can find an overview of the training contents on the Internet at:

www.boschrexroth.com/training.

2.5 General safety instructions

- Observe the country-specific accident prevention and environmental protection regulations.
- Observe the safety regulations of the country in which the product is used/operated.
- Use Rexroth products only when they are in good working order.
- Observe all notices on the product.
- Do not assemble, operate, remove or maintain Rexroth products if under the influence of alcohol, drugs or medication that may affect your reaction time.
- Only use genuine Rexroth accessories and spare parts to ensure there is no hazard to persons from unsuitable spare parts.
- Observe the technical data and ambient conditions specified in the product documentation.
- If unsuitable products are installed or used in safety-relevant applications, unexpected operating conditions may occur in the application, which could result in personal injury or property damage. For this reason, only use the product in safety-relevant applications if this use is expressly indicated and approved in the product documentation, e. g. in explosion protection areas or in safety-related parts of a control system (functional safety).
- Only commission the product if it has been determined that the end product (e.g. machinery/system) in which the Rexroth products are installed complies with the country-specific provisions, safety regulations and standards for the application.
- Use tools appropriate for the work being performed and wear appropriate protective clothing to prevent punctures and cuts (e.g. when removing protective covers, disassembly).
- There is a risk of entanglement when operating the axial piston unit with a bare shaft end. Check whether or not your machine requires additional safety measures for your application. If necessary, make sure these are appropriately implemented.
- Depending on the type of control used, electromagnetic effects can be produced when using solenoids. Applying a direct voltage signal (DC) to solenoids does not create electromagnetic interference (EMI) nor is the solenoid affected by EMI. Potential electromagnetic interference (EMI) exists if the solenoid is energized with a modulated direct current (e.g. PWM signal). The machine manufacturer should conduct appropriate tests and take appropriate measures to ensure that other components or operators (e.g. with a pacemaker) are not affected by this potentiality.

2.6 Product-specific safety instructions

The following safety instructions apply to chapters 6 to 14.

WARNING

Danger due to excessive pressure!

Risk of death or injury, or property damage!

Improperly changing the factory pressure settings can result in a pressure increase beyond the permissible maximum pressure.

Operating the unit above the maximum permissible pressure can cause components to burst and hydraulic fluid to escape under high pressure.

- ▶ Changes to the factory settings may only be made by Bosch Rexroth specialists.
- ▶ In addition, a pressure relief valve is required in the hydraulic system as back-up. If the axial piston unit is equipped with a pressure cut-off and/or pressure controller, this is not an adequate safeguard against pressure overload.

Danger due to suspended loads!

Risk of death or injury, or property damage!

Improper transportation may cause the axial piston unit to fall down and lead to injury, e.g. crushing or fracture, or damage to the product.

- ▶ Make sure that the load bearing capacity of the lifting device is sufficient to safely bear the weight of the axial piston unit.
- ▶ Never step or grip under suspended loads.
- ▶ Ensure a stable transport position.
- ▶ Use your personal protective equipment (e.g. safety goggles, safety gloves, suitable working clothes, safety shoes).
- ▶ Use suitable lifting devices for transport.
- ▶ Observe the prescribed position of the lifting strap.
- ▶ Observe the national laws and regulations on occupational health and safety, and transportation.



WARNING

System/machine under pressure!

Risk of death or serious injury when working on unsecured machines/systems!
Property damage!

- ▶ Switch off the relevant machine/system part and secure it against reactivation according to the parameters by the machine/system manufacturer.
- ▶ Ensure that all relevant components of the hydraulic system are depressurized. For this purpose, observe the parameters indicated by the machine/system manufacturer.
- ▶ Please note that the hydraulic system might still be pressurized even after separation from the actual pressure supply.
- ▶ Do not disconnect any line connections, ports or components as long as the hydraulic system is under pressure.

Escaping hydraulic fluid mist!

Risk of explosion and fire hazard, health hazard, risk of environmental pollution!

- ▶ Depressurize the relevant machine/system component and repair the leak.
- ▶ Only perform welding work when the machine/system is depressurized.
- ▶ Keep open flames and ignition sources away from the axial piston unit.
- ▶ If axial piston units are located in the vicinity of ignition sources or powerful thermal radiators, a shield must be erected to ensure any escaping hydraulic fluid cannot be ignited, and to protect hose lines from premature aging.

Escaping hydraulic fluid due to leakage of machine/system components!

Risk of burning and risk of injury due to escaping hydraulic fluid jet!

In case of leakage at the axial piston unit, high-pressure fluid jets may escape.

- ▶ Depressurize the relevant machine/system component and repair the leak.
- ▶ Never attempt to block or seal the leak or hydraulic fluid jet with a cloth.

Hydraulic fluid will explode when making contact with water!

Explosion and fire hazard!

- ▶ Do not bring hot hydraulic fluids in contact with water.

Electrical voltage!

Danger to life or risk of injury due to electric shock or property damage!

- ▶ Always disconnect the voltage supply to the relevant machine/system part before installing the product and/or connecting or disconnecting the connector. Protect the machine/system against being re-energized.

 WARNING**Restriction of control function!**

Risk of injury or property damage!

Under certain circumstances, moving parts in control equipment (e.g., valve spools) can get stuck in an undefined position due to contamination (e.g., impure hydraulic fluid, abrasion or residual dirt from components). As a result, the hydraulic fluid flow and the build-up of torque in the axial piston unit can no longer respond correctly to the operator's specifications. Even the use of various filter elements (external or internal flow filtration) will not rule out a fault but merely reduce the risk.

- ▶ Check whether your application requires remedial measures on your machine in order to bring the driven consumer to a safe position (e.g. safe stop).
- ▶ If necessary, make sure these are appropriately implemented.

 CAUTION**High noise development during operation!**

Risk of hearing damage or hearing loss!

The noise emission of axial piston units depends on rotational speed, working pressure and installation conditions, among other factors. The sound pressure level may rise above 70 dB (A) in certain application conditions.

- ▶ Always wear hearing protection near a running axial piston unit.

Hot surfaces on axial piston unit!

Risk of getting burnt!

- ▶ Allow the axial piston unit to cool down sufficiently before touching it.
- ▶ Wear heat-resistant, protective clothing, e.g. gloves.

Improper cable and line routing!

Risk of stumbling and property damage! Improper routing of cables and lines can cause a risk of stumbling as well as damage to equipment and components, e.g. due to lines and connectors being torn off.

- ▶ Always install cables and lines in a way that nobody can fall over them, that they are not bend or twisted, do not chafe on edges and are not guided through ducts with sharp edges without sufficient protection.

Incorrectly connected suction and pressure lines!

Risk of injury and property damage!

- ▶ Make sure that the corresponding suction and pressure port is assigned to the correct direction of rotation. Information on this can be found in data sheet 91485 and in Tabelle 7 to Tabelle 9 "Flow direction" starting on page 24.

 CAUTION**Contact with hydraulic fluid!**

Risk of adverse health effects, e.g. eye injury, skin irritation, toxication from inhalation!

- ▶ Avoid any contact with hydraulic fluids.
- ▶ When handling hydraulic fluids, the safety instructions of the lubricant manufacturer need to be observed at all times.
- ▶ Use your personal protective equipment (e.g. safety goggles, safety gloves, suitable working clothes, safety shoes).
- ▶ Immediately seek medical attention, however, if hydraulic fluid gets into your eyes or blood circuit or if you swallow it accidentally.

Danger from improper handling!

Slip hazard! Risk of slipping on wet surfaces when climbing on the axial piston unit.

- ▶ Never grab or climb onto the axial piston unit.
- ▶ Check how to safely get on top of the machine/system.

2.7 Personal protective equipment

Personal protective equipment is the responsibility of the user of the axial piston unit. Observe the safety regulations in your country.

All pieces of personal protective equipment should be intact.

3 General instructions on property damage and product damage

The following notices apply to chapters 6 to 14.

NOTICE

Danger from improper handling!

Product can be damaged!

- ▶ Do not subject the product to improper mechanical loads.
- ▶ Never use the product as handle or step.
- ▶ Do not put/place any objects on the product.
- ▶ Do not strike the drive shaft of the axial piston unit.
- ▶ Do not set/place the axial piston unit on the drive shaft or assembled parts.
- ▶ Do not strike assembled parts (e.g. sensors, solenoids or valves).
- ▶ Do not hit sealing surfaces (e.g. on the work connections).
- ▶ Leave the protective covers on the axial piston unit until you connect the lines.
- ▶ Disconnect all electrical connectors before arc welding and painting operations.
- ▶ Make sure the electronic components (e.g. sensors) do not build up electrostatic charges (e.g. during painting).

Risk of property damage due to inadequate lubrication!

Product can be damaged or destroyed!

- ▶ Never operate the axial piston unit with insufficient hydraulic fluid. Specifically, make sure that the rotary group has sufficient lubrication.
- ▶ When commissioning a machine/system, make sure that the housing area and the working lines of the axial piston unit are filled with hydraulic fluid and remain filled during operation. Avoid air inclusions in the forward drive shaft bearing, especially with the axial piston unit installed with the drive shaft upward.
- ▶ Check the hydraulic fluid level in the housing area regularly and replenish, if necessary. For above-reservoir installation, the housing area may drain out through the drain line after prolonged standstill periods (air enters through the shaft seal) or through the working line (gap leakage). This means the bearings are insufficiently lubricated when the system is turned on.
- ▶ Make sure the suction line is always filled with hydraulic fluid during commissioning and operation.
- ▶ With above-reservoir installation, an axial piston unit must be moved to full swivel angle after no more than three seconds during commissioning and recommissioning. Make sure that the axial piston unit really does suck in hydraulic fluid and build up pressure.

NOTICE

Mixing hydraulic fluids!

Product can be damaged!

- ▶ Before installation, remove all fluids from the axial piston unit to prevent mixing with the hydraulic fluid used in the machine/system.
- ▶ Any mixture of hydraulic fluids of different manufacturers and/or different types of the same manufacturer is generally not permissible.

Contamination of hydraulic fluid!

The cleanliness of the hydraulic fluid impacts the service life of the axial piston unit. Contamination of the hydraulic fluid may lead to premature wear and malfunctions!

- ▶ Always ensure a work environment in the assembly location that is free from dust and foreign particles to prevent foreign particles, e.g. welding beads or metal cuttings, from entering the hydraulic lines and lead to wear and malfunctions in the product. The axial piston unit should be clean when installed.
- ▶ Only use clean ports, hydraulic lines and assembled parts (e.g. measuring devices).
- ▶ When plugging the ports, no contamination must ingress.
- ▶ Before commissioning, ensure that all hydraulic connections are tight and that all seals and plugs of the plug-in connection are correctly installed and undamaged to prevent fluids and foreign particles from entering the product.
- ▶ Filter the hydraulic fluid when filling the system with a suitable filter system to minimize the solid particle contamination and water in the hydraulic system and to achieve the required cleanliness level.

Improper cleaning!

Product can be damaged!

- ▶ Plug all openings with appropriate protective covers in order to prevent cleaning agents from entering the axial piston unit.
- ▶ Never use solvents or aggressive cleaning agents. Use only water and, if necessary, a mild cleaning agent to clean the axial piston unit.
- ▶ Do not point a high-pressure cleaner at sensitive components, e.g. shaft seal, electrical connections and components.
- ▶ Use fiber-free cleaning cloth.

Environmental pollution due to improper disposal!

Careless disposal of the axial piston unit and its assembled parts, the hydraulic fluid and the packaging material can cause environmental pollution!

- ▶ Dispose of the axial piston unit, hydraulic fluid and packaging in accordance with the regulations in your country.
- ▶ Dispose of the hydraulic fluid in accordance with the applicable safety data sheet for the hydraulic fluid.

NOTICE

Danger from chemical or corrosive environmental conditions!

Product can be damaged! If the axial piston unit is exposed to chemical or corrosive environmental conditions, such as sea water, fertilizer or road salt, it can result in corrosion or, in extreme cases, malfunction. Leaks may lead to leakage of hydraulic fluid.

- ▶ Take appropriate measures to protect the axial piston unit from chemical or corrosive environmental conditions.

Leakage or spilling of hydraulic fluid!

Risk of environmental pollution and contamination of ground water!

- ▶ Always place a drip tray under the axial piston unit when filling and draining hydraulic fluid.
- ▶ Use a suitable binding agent to collect any leaked hydraulic fluid.
- ▶ Observe the parameters in the safety data sheet for the hydraulic fluid and the specifications provided by the machine/system manufacturer.

Danger from hot components!

Nearby products can be damaged! Components which heat up (e.g., solenoids) can cause damage to nearby products if they are too close during installation.

- ▶ When installing the axial piston unit, check the safety distances to nearby products to ensure that they are not damaged.

The warranty only applies to the machine configuration as delivered.

The warranty will be voided if the product is incorrectly installed, commissioned or operated, or if it is used or handled improperly.

4 Scope of delivery

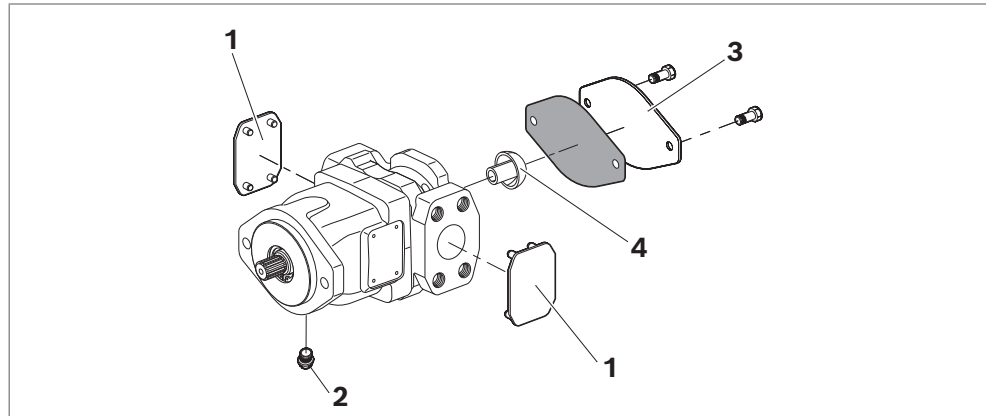


Abb. 1: Axial piston unit A10FZO

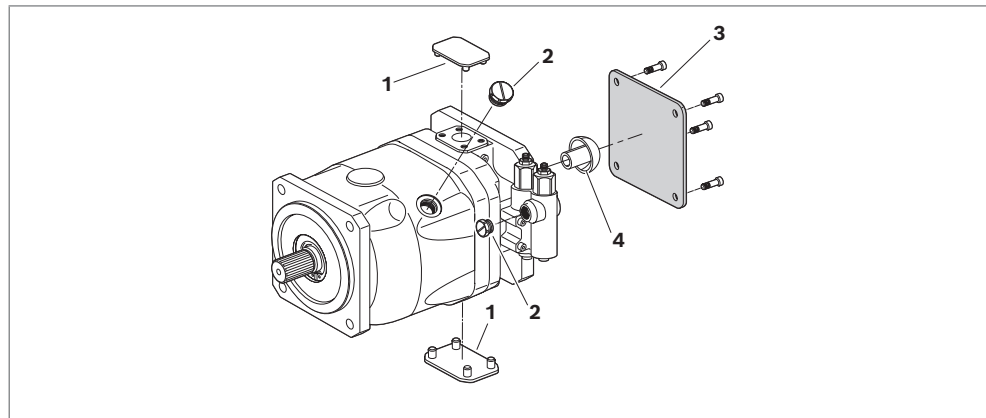


Abb. 2: Axial piston unit A10VZO

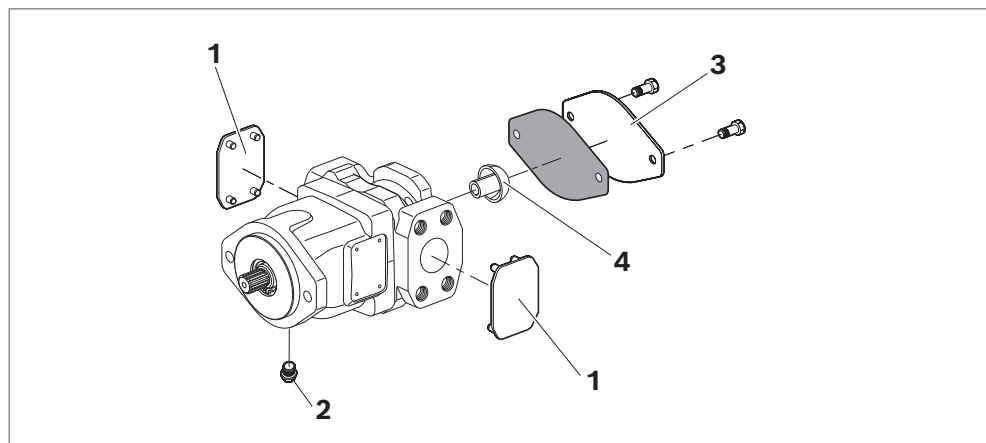


Abb. 3: Axial piston unit A10FZG

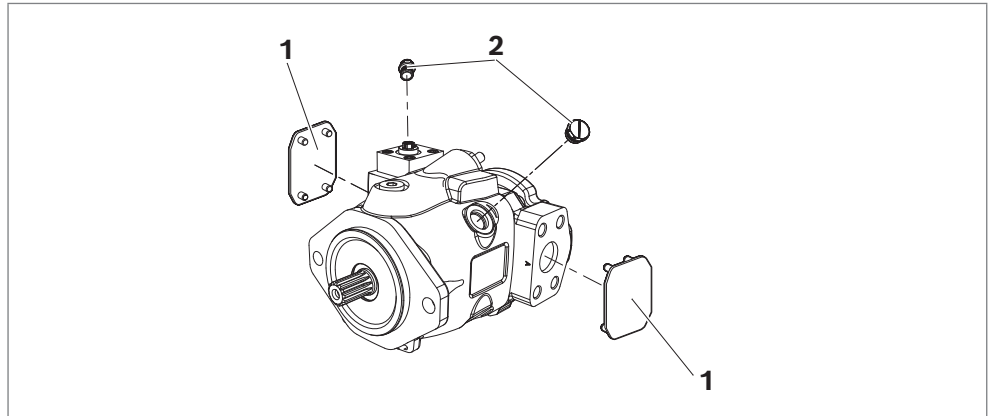


Abb. 4: Axial piston unit A10VZG

Included in the scope of delivery:

- Axial piston unit as per order confirmation

The following parts come assembled on the unit:

- Protective covers (**1**)
- Protective plug/threaded plugs (**2**)
- For version with through drive, protective cover incl. mounting bolts (**3**)
- Transport protection for the through drive (**4**)

5 About this product

5.1 Performance description

Axial piston units convert mechanical rotation into hydrostatic flow and controls or regulates it. They have been designed for the variable-speed drive with synchronous and asynchronous motors.

Refer to data sheet 91485 and the order confirmation for the technical data, operating conditions and application limits of the axial piston unit.

5.2 Product description

The axial piston unit is available as the standard version A10FZO, A10VZO for open circuit. The A10FZG and A10VZG are available for open and closed circuits. Both versions are equipped with an axial piston rotary group in swashplate design for hydrostatic drives. In axial piston units with swashplate design, the **pistons** are arranged axially relative to the **drive shaft**. The **cylinder** and **drive shaft** are interlocked. The specific torque and flow can be changed by controlling the **cradle**.


Open circuit

In an open circuit, the hydraulic fluid flows from the reservoir to the axial piston unit and from there it is fed to the consumer, e.g. hydraulic cylinder. From the consumer, the hydraulic fluid flows directly back to the reservoir. The direction of movement of the hydraulic cylinder can be changed e.g. by means of a directional valve.


Closed circuit

In the closed circuit, the hydraulic fluid flows from the axial piston unit to the consumer, e.g. hydraulic cylinder, and from there directly back to the axial piston unit.

There is a high-pressure side and a low-pressure side which alternate depending on which side is under load.

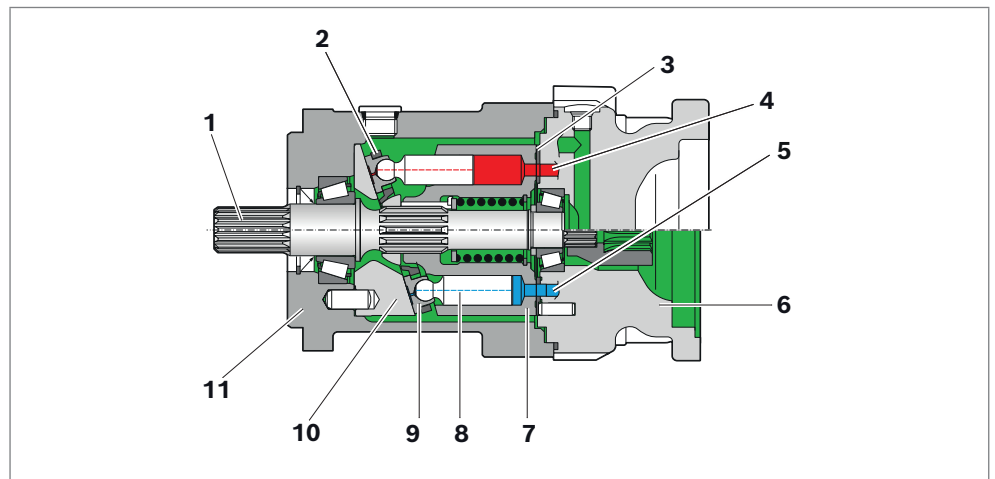5.2.1 Axial piston unit layout**Abb. 5: Axial piston unit A10FZO**

- | | | |
|----------------------------|----------------------|-------------------|
| 1 Drive shaft | 6 Port plate | 11 Housing |
| 2 Retaining plate | 7 Cylinder | |
| 3 Distributor plate | 8 Piston | |
| 4 Pressure side | 9 Slipper pad | |
| 5 Suction side | 10 Swashplate | |

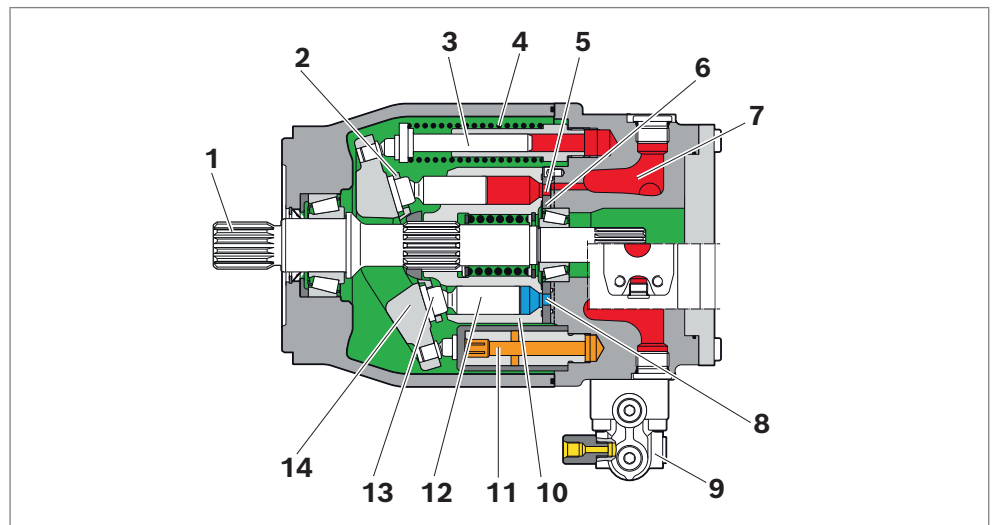**Abb. 6: Axial piston unit A10VZO**

- | | | |
|-----------------------------|--|-----------------------|
| 1 Drive shaft | 7 Pre-compression volume (optional) | 12 Piston |
| 2 Retaining plate | 8 Suction side | 13 Slipper pad |
| 3 Opposed piston | 9 Control valve | 14 Cradle |
| 4 Spring | 10 Cylinder | |
| 5 High-pressure side | 11 Stroking piston | |
| 6 Distributor plate | | |

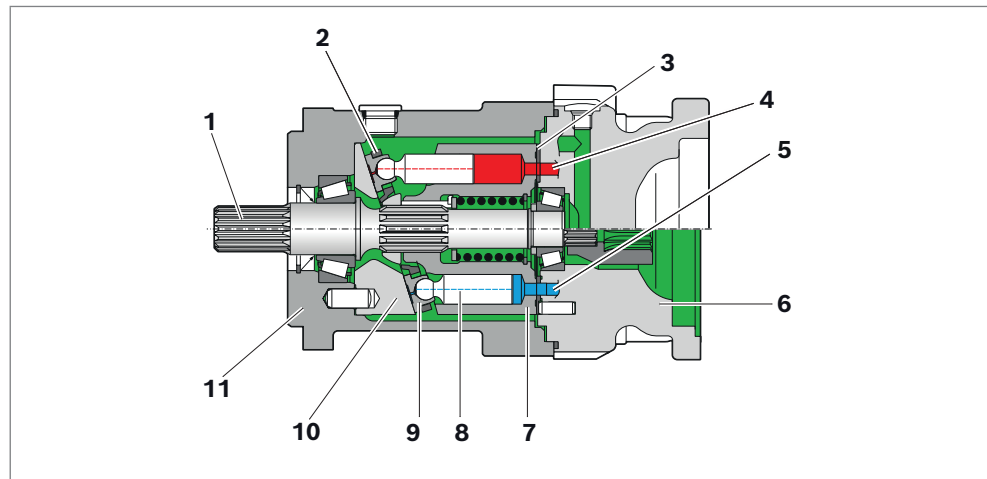


Abb. 7: Axial piston unit A10FZG

- | | | |
|---------------------|---------------|------------|
| 1 Drive shaft | 6 Port plate | 11 Housing |
| 2 Retaining plate | 7 Cylinder | |
| 3 Distributor plate | 8 Piston | |
| 4 Pressure side | 9 Slipper pad | |
| 5 Suction side | 10 Swashplate | |

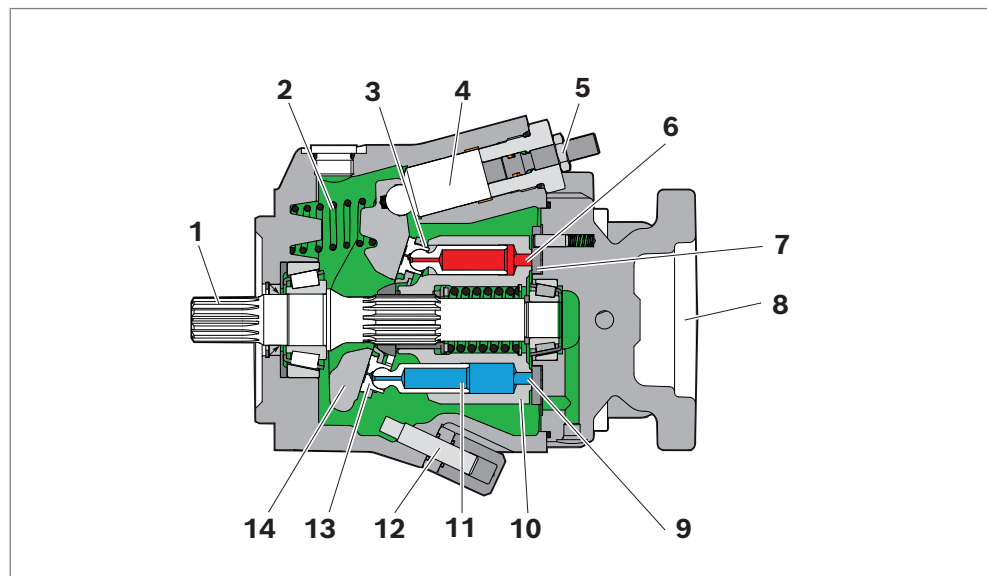


Abb. 8: Axial piston unit A10VZG

- | | | |
|---------------------------|----------------------|----------------------------|
| 1 Drive shaft | 6 High-pressure side | 11 Piston |
| 2 Spring | 7 Distributor plate | 12 $V_{g \min}$ limitation |
| 3 Retaining plate | 8 Port plate | 13 Slipper pad |
| 4 Stroking piston | 9 Suction side | 14 Cradle |
| 5 $V_{g \max}$ limitation | 10 Cylinder | |

5.2.2 Functional description

Torque and rotational speed are applied to the **drive shaft** by a drive motor. The **drive shaft** is connected to the **cylinder** by splines, causing the cylinder to rotate. With every revolution, the **pistons** perform a stroke in the cylinder bores,

the size of which depends on the pitch of the **cradle**. The **slipper pads** are held on with the **pistons** and guided along the glide surface of the **cradle** by the **retaining plate**. The inclined position of the **cradle** during a rotation causes each **piston** to move over the bottom and top dead centers and back to its initial position. Here, hydraulic fluid is fed into and out through two control slots in the **distributor plate** according to the displacement. Hydraulic fluid flows into the piston chamber as the piston recedes on the **suction side**. At the same time, the hydraulic fluid is pushed out of the cylinder chamber into the hydraulic system by the **pistons** on the **high-pressure side**.

**Control
A10VZO**

The swivel angle of the **cradle** is infinitely variable. Adjusting the swivel angle changes the piston stroke and, with it, the displacement. The swivel angle is controlled hydraulically by means of the **stroking piston**. The **cradle** is mounted in swivel bearings for smooth operation and it is kept in balance by the **opposed piston**. Increasing the swivel angle increases the displacement; reducing the angle reduces displacement accordingly.

**Control
A10VZG**

The swivel angle of the **cradle** is infinitely variable. Adjusting the swivel angle changes the piston stroke and, with it, the displacement. The swivel angle is controlled hydraulically by means of the **stroking piston**. The **cradle** is mounted for easy motion in swivel bearings. When pressurized, the **cradle** is held in balance by the swiveling forces of the rotary group, which are generated by the eccentrically mounted **cradle** and by the control pressure. When depressurized, the **spring** presses the **cradle** to the maximum swivel angle. Increasing the swivel angle increases the displacement; reducing the angle reduces displacement accordingly.



Various control devices are available depending on requirements. Information about this can be found in data sheet 91485.

5.3
Product identification

The axial piston unit can be identified by the name plate. The following example shows an A10VZO name plate:

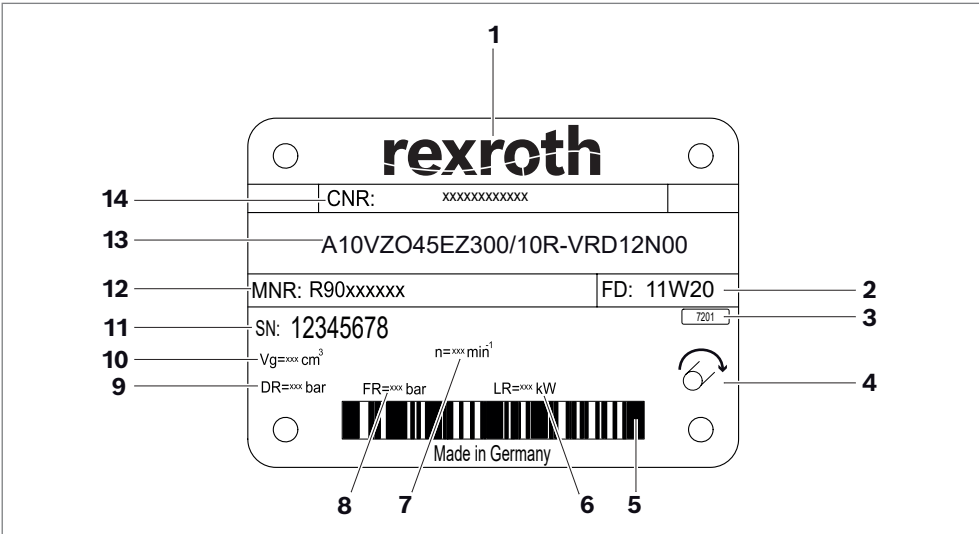


Abb. 9: Name plate example A10VZO

- | | |
|--|--|
| 1 Trademark | 8 Flow setting (optional) |
| 2 Manufacturing date | 9 Pressure controller setting (optional) |
| 3 Internal plant designation | 10 Minimum displacement |
| 4 Direction of rotation (viewed on drive shaft) – here: clockwise | 11 Serial number |
| 5 Bar code | 12 Material number of the axial piston unit |
| 6 Power setting (optional) | 13 Type code |
| 7 Rotational speed | 14 Customer material number |

5.4
Direction of rotation and port assignment A10FZO

Tabelle 6: Designation working port for the respective direction of rotation

Direction of rotation, viewed on drive shaft	Suction port	Working port
Type code designation "R"	A	B
Type code designation "L"	B	A

Tabelle 7: Flow direction

Direction of rotation, viewed on drive shaft	Direction of rotation and port assignment	Flow
Type code designation "R"	Clockwise	A to B
	Counterclockwise ¹⁾	B to A
Type code designation "L"	Counterclockwise	B to A
	Clockwise ¹⁾	A to B

5.5 Flow direction A10VZO

Tabelle 8: Flow direction

Direction of rotation, viewed on drive shaft	Direction of rotation	Flow
Type code "R"	Clockwise	S to B
	Counterclockwise ¹⁾	B to S
Type code "L" ³⁾	Counterclockwise	S to B
	Clockwise ¹⁾	B to S

5.6 Flow direction A10FZG and A10VZG

Tabelle 9: Flow direction

Direction of rotation, viewed on drive shaft	Direction of rotation	Flow
Type code "W"	Clockwise	A to B
	Counterclockwise	B to A

6 Transport and storage

- Always observe the required ambient conditions for transport and storage; see chapter 6.2 "Storing the axial piston unit" on page 28.



Information on unpacking can be found in chapter 7.1 "Unpacking" on page 31.

6.1 Transporting the axial piston unit

The following transportation options are available depending on weight and duration of transport:

- Transport by hand
- Transporting with a lifting device (eye bolt or lifting strap)

Dimensions and weights

Tabelle 10: Dimensions and weights A10FZO

Size		10	18	28	45	63
Weight	kg	9	10	15.5	21	26
Width	mm	Dimensions vary by equipment. The values applicable for your axial piston unit can be found in the installation drawing (request if necessary).				
Height	mm					
Depth	mm					

Weight may vary by equipment.

Tabelle 11: Dimensions and weights A10VZO

Size		3 to 10	18	28	45	71	100	140	180
Weight with port plate									
14N00, 12N00	kg	8	12	15	27	36.5	55	70	–
22U00	kg	–	–	–	–	47	69	73	78
07K.., 12K..	kg	10.5	14	18	28	–	–	–	–
22U..	kg	–	–	–	–	47	69	73	78
Width	mm	Dimensions vary by equipment. The values applicable for your axial piston unit can be found in the installation drawing (request if necessary).							
Height	mm								
Depth	mm								

Weight may vary by equipment.

Dimensions and weights

Tabelle 12: Dimensions and weights A10FZG

Size		10	18	28	63
Weight	kg	9	10	15.5	26
Width	mm	Dimensions vary by equipment. The values applicable for your axial piston unit can be found in the installation drawing (request if necessary).			
Height	mm				
Depth	mm				

Weight may vary by equipment.

Dimensions and weights

Tabelle 13: Dimensions and weights A10VZG

Size		10	18	28	63
Weight	kg	11.3	13.5	20	32

Size	10	18	28	63
Width	mm	Dimensions vary by equipment. The values applicable for your axial piston unit can be found in the installation drawing (request if necessary).		
Height	mm			
Depth	mm			

Weight may vary by equipment.

6.1.1 Transport by hand

Up to a specific maximum weight, axial piston units can be transported by hand for a short distance. Observe the national regulations in your country. To prevent health damage, we recommend renouncing any transport by hand.

CAUTION! Risk of injury due to heavy loads!

Health hazard from carrying axial piston units.

- ▶ Only manually transport the axial piston unit for a short period of time. Observe the national regulations in your country for manual transport.
- ▶ Always use appropriate lifting, lowering and moving techniques.
- ▶ Use your personal protective equipment (e.g. safety goggles, safety gloves, suitable working clothes, safety shoes).
- ▶ Do not transport the axial piston unit by sensitive assembled parts (e.g. sensors or valves).
- ▶ Carefully place the axial piston unit on the seating to prevent it from being damaged.

6.1.2 Transport with lifting devices

For transporting, the axial piston unit can be connected to a lifting device via an eye bolt or a lifting strap.

Transporting with eye bolt

The axial piston unit can be transported suspended from an eye bolt screwed into the drive shaft as long as only outward (pulling) axial forces are applied.

- ▶ For all female threads, use a stud end from the same system of units and of the correct size.
- ▶ To do this, screw an eye bolt completely into the female thread on the drive shaft. The thread size is indicated in the installation drawing.
- ▶ Make sure that the eye bolt can bear the total weight of the axial piston unit plus 20%.

You can lift the axial piston unit as shown in Abb. 10 with the eye bolt screwed into the drive shaft.

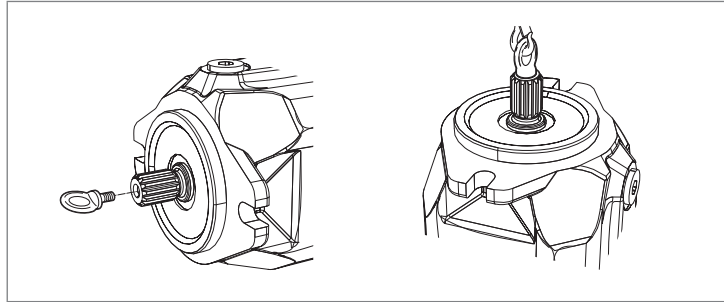


Abb. 10: Mounting the eye bolt

Transport with lifting strap**WARNING!** Danger due to suspended loads!

During transport with lifting strap, the axial piston unit can topple out of the lifting strap and cause injury.

- ▶ Use the widest possible lifting strap.
- ▶ Make sure that the axial piston unit is securely fixed with the lifting strap.
- ▶ Only guide the axial piston unit by hand for fine positioning and to avoid swinging.
- ▶ Never step or grip under suspended loads.
- ▶ Place the lifting strap around the axial piston unit in such a way that it does not pass over assembled parts (e.g. valves, piping) and that the axial piston unit is not suspended from assembled parts (see Abb. 11).

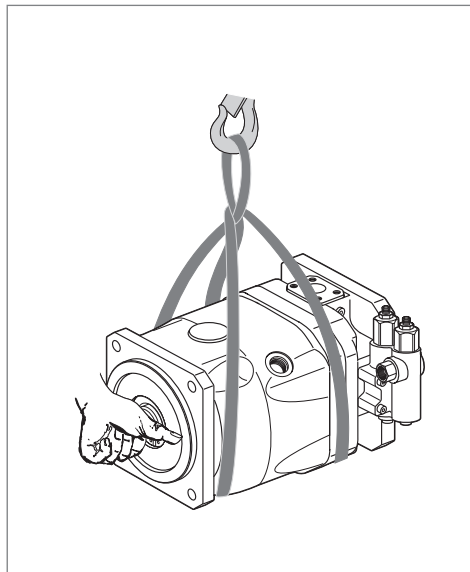


Abb. 11: Transport with lifting strap; example A10VZO

6.2 Storing the axial piston unit**Requirement**

- Storage areas should be free of corrosive materials and gases.
- To prevent damage to the seals, do not operate ozone-forming equipment (e.g. mercury-vapor lamps, high-voltage equipment, electric motors, sources of electrical sparks or electrical discharge) in storage areas.

- Storage areas should be dry.
Recommended relative humidity $\leq 60\%$.
 - Ideal bearing temperature: $+5\text{ }^{\circ}\text{C}$ to $+20\text{ }^{\circ}\text{C}$.
 - Minimum storage temperature: $-50\text{ }^{\circ}\text{C}$.
 - Maximum storage temperature: $+60\text{ }^{\circ}\text{C}$.
 - Keep out of direct sunlight.
 - Do not stack axial piston units and store them in a shock-proof manner.
 - Do not store the axial piston unit on the drive shaft or assembled parts, e.g. sensors or valves.
 - For further storage conditions, see Tabelle 14.
- Check the axial piston unit monthly to ensure professional storage.

After delivery

The axial piston units come in corrosion protection packaging (corrosion protection film) provided at the factory. Tabelle 14 lists the maximum permissible storage times for an unpackaged axial piston unit as per data sheet 90312.

Tabelle 14: Storage at the factory corrosion protection

Storage conditions	Standard corrosion protection	Long-term corrosion protection (optional)
Closed, dry room, uniform temperature between $+5\text{ }^{\circ}\text{C}$ and $+20\text{ }^{\circ}\text{C}$. Undamaged and closed corrosion protection film.	Maximum 12 months	Maximum 24 months



The warranty will be voided if the requirements and storage conditions are not observed or after expiration of the max. storage time (see Tabelle 14).

How to proceed once the max. storage time elapses:

- 1.** Check the entire axial piston unit for damage and corrosion prior to installation.
- 2.** Perform a test run to check the axial piston unit for proper functioning and leak-tightness.
- 3.** If storage time exceeds 24 months, replace the shaft seal.



Once the max. storage time has elapsed, we recommend that you have the axial piston unit inspected by your Bosch Rexroth service partner.

For questions regarding repair and spare parts, contact your proper Bosch Rexroth service partner or the service department of the manufacturer's plant of the axial piston unit, see chapter 10.5 "Spare parts" on page 60.

After removal

An uninstalled axial piston unit must be preserved with corrosion protection for the duration of storage.



The following instructions only refer to axial piston units operated with hydraulic fluid on a mineral oil basis. Other hydraulic fluids require other specific preservation measures. In such a case, consult your local contact person; you can find their contact information at

<https://addresses.boschrexroth.com>

Bosch Rexroth recommends the following procedure:

- 1.** Clean the axial piston unit; see chapter 10.1 "Cleaning and care" on page 58.
- 2.** Drain the axial piston unit.
- 3.** For storage times up to 12 months: Moisten the inside of the axial piston unit with mineral oil and fill with approx. 100 ml mineral oil.
For storage times up to 24 months: Fill the axial piston unit with VCI 329 corrosion protection (20 ml).
Filling is carried out via drain port **L**, **L₁** or **L₂**, see chapters 7.5 "Installing the axial piston unit", Abb. 27 to Abb. 30 starting on page 48.
- 4.** Plug all ports so they are airtight.
- 5.** Coat unpainted areas of the axial piston unit with mineral oil or suitable, easily removable corrosion protection, e.g. acid-free grease.
- 6.** Pack the axial piston unit with desiccant in an airtight manner in corrosion protection film.
- 7.** Store the axial piston unit in a shock-proof manner; see "Requirement" on page 28 in this chapter.

7 Installation

Prior to installation, the following documents should be to hand:

- Data sheet of the axial piston unit (contains the permissible technical data, main dimensions and circuit diagrams of standard versions)
- Installation drawing for the axial piston unit (can be obtained from your contact person at Bosch Rexroth, if required)
- Hydraulic circuit diagram for the axial piston unit (can be found in data sheet 91485 and on the installation drawing)
- Hydraulic circuit diagram for the machine/system (available from the machine/system manufacturer upon request)
- Order confirmation (contains the order-related technical data for your axial piston unit)

7.1 Unpacking

The axial piston unit comes in a polyethylene material (PE) corrosion protection film.

CAUTION! Danger due to falling parts!

If the packaging is not opened correctly, parts may fall out and damage the parts or even result in injury.

- ▶ Place the packaging on a level underground with sufficient load-bearing capacity.
- ▶ Only open the packaging from the top.
- ▶ Remove the packaging from the axial piston unit.
- ▶ Check the axial piston unit for transport damage and completeness; see chapter 4 "Scope of delivery" on page 18.
- ▶ Dispose of the packaging in accordance with the regulations in your country.

7.2 Installation conditions

The installation position and location of the axial piston unit essentially determine how it is installed and commissioned (such as when filling and air bleeding the axial piston unit).

- ▶ Fasten the axial piston unit so that the expected forces and torque can be transferred without any danger. The machine/system manufacturer is responsible for sizing the fasteners.
- ▶ Make sure the axial piston unit is always filled with hydraulic fluid during commissioning and operation. Also do this also after relatively long standstill periods, since the axial piston unit may drain out through the hydraulic lines.
- ▶ Direct the leakage in the housing area to the reservoir through the highest drain port. Use a line size that matches the port.
- ▶ A check valve in the drain line is only permissible in individual cases. Consult us for approval.

- ▶ To prevent the transmission of structure-borne noise, use elastic elements to decouple all connecting lines from all vibration-capable components (e.g. reservoir, frame parts).
- ▶ Make sure the suction, leakage, and return lines flow into the reservoir below the minimum fluid level under all operating conditions. This will prevent air from being drawn in and foam from forming.
- ▶ When designing the reservoir, ensure that there is adequate distance between the suction line and the drain line. We recommend using a baffle (baffle plate) between suction line and drain line. A baffle improves the air separation ability as it gives the hydraulic fluid more time for desorption. Apart from that, this prevents the heated return flow from being drawn directly back into the suction line. The suction port must be supplied with air-free, calmed and cooled hydraulic fluid.
- ▶ Make sure that a minimum suction pressure of 0.8 bar absolute is present at port **S (A or B)** during operation for all installation positions and installation locations of the axial piston unit; see Abb. 12. See data sheet for other pressure values.

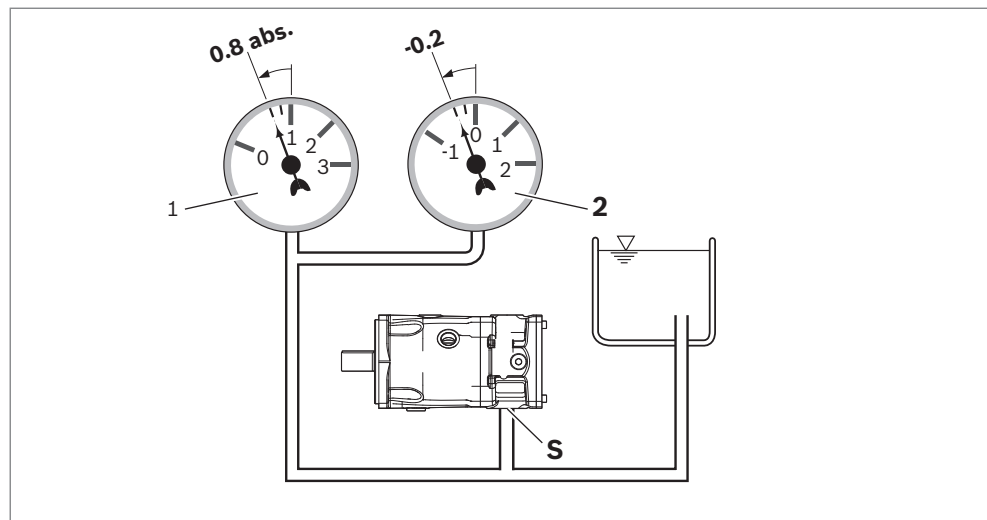


Abb. 12: Suction pressure example A10VZO

- 1** Absolute pressure gauge
- 2** Standard pressure gauge (relative)



Suction conditions are improved with below-reservoir installation and inside-reservoir installation.



CAUTION

Incorrectly connected suction and pressure lines!

Risk of injury and property damage!

- ▶ Make sure that the corresponding suction and pressure port is assigned to the correct direction of rotation. Information on this can be found in data sheet 91485 and in Tabelle 7 to Tabelle 9 "Flow direction" starting on page 24.
- ▶ Make sure that the working environment at the installation site is completely free of dust and foreign substances. The axial piston unit should be clean when

installed. Contamination of the hydraulic fluid can considerably affect the function and service life of the axial piston unit.

- When using pump carriers in combination with the "drive shaft upward" installation position, dirt may accumulate on the shaft seal, which may lead to leakage. In case of highly contaminated environmental conditions, any bleed bores in the pump carrier should be closed, complying with applicable machine safety standards. Apart from that, regular checks and/or cleaning is necessary. Observe the information in chapter 10.1 "Cleaning and care" on page 58 and Tabelle 30 "Inspection schedule" on page 59.
- Use fiber-free cleaning cloth.
- Use suitable, mild cleaning agents to remove lubricants and other heavy contamination. Do not allow cleaning agents to enter into the hydraulic system.

7.3 Installation position A10FZO, A10VZO

The following installation positions are permissible. The pipeline routing shown illustrates the basic layout.



Port **F** is part of the external piping and must be provided on the customer side to make filling and air bleeding easier.

7.3.1 Below-reservoir installation (standard)

Below-reservoir installation means that the axial piston unit is installed outside of the reservoir below the minimum fluid level.



Recommended installation position: 1.

Because complete air bleeding and filling is not possible in installation positions 2 and 3, the pump must be air bled and filled in a horizontal position prior to installation.

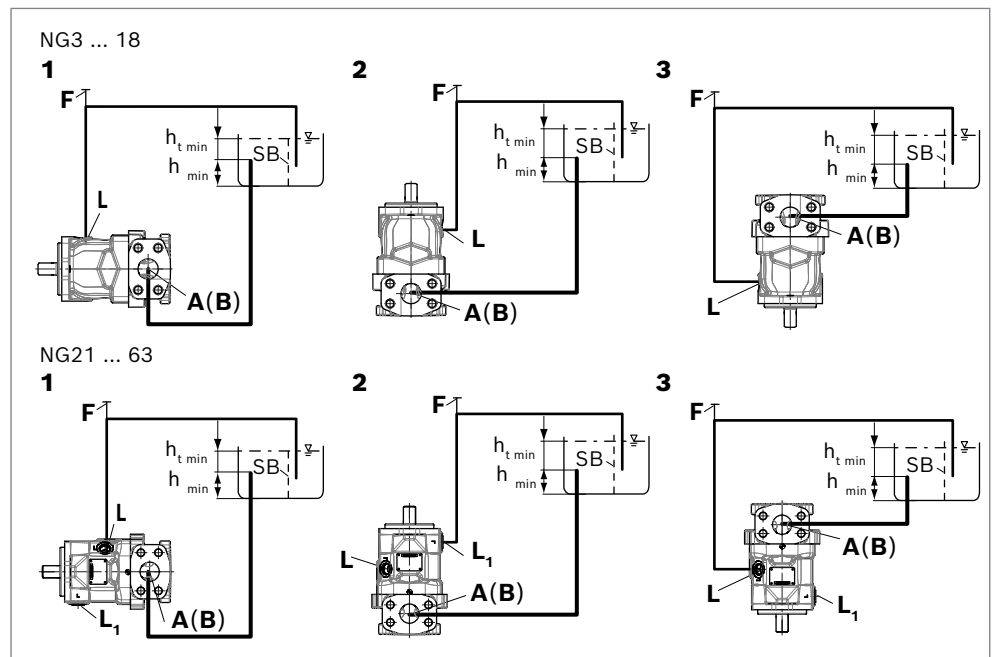


Abb. 13: Below-reservoir installation A10FZO with installation position 1–3

Tabelle 15: Below-reservoir installation

Installation position	Air bleed	Filling	
		NG03 ... 18	NG21 ... 63
1 (drive shaft horizontal)	F	L	L
2 (drive shaft vertically up)	F	L	L ₁
3 (drive shaft vertically down)	F	L	L

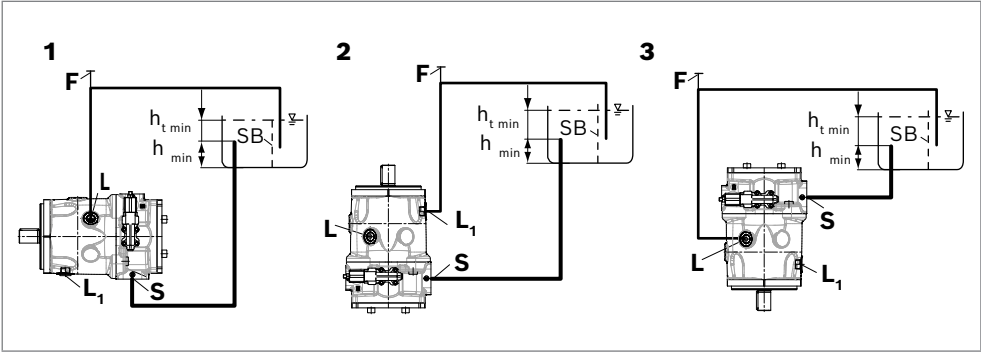


Abb. 14: Below-reservoir installation A10VZO with installation position 1–3

Tabelle 16: Below-reservoir installation

Installation position	Air bleed	Filling
1 (drive shaft horizontal)	F	L
2 (drive shaft vertically up)	F	L ₁
3 (drive shaft vertically down)	F	L

L, L ₁	Drain port	h_{min}	Minimum required distance to reservoir bottom (100 mm)
F	Filling/air bleeding	SB	Baffle (baffle plate)
S (A/B)	Suction port		
$h_{t min}$	Minimum required immersion depth (200 mm)		

7.3.2 Inside-reservoir installation

NOTICE

Risk of damage with inside-reservoir installation!

To prevent damage to the axial piston unit, all plastic parts (e.g. protective plugs, covers), except for the tamper-proof caps, must be removed prior to installation in the reservoir.

- ▶ Remove all plastic parts, except for the tamper-proof caps, before you install the axial piston unit in the reservoir. Make sure that no parts of them remain in the reservoir.
- ▶ Remove the protective plug from suction port **S (A or B)** and open at least one **L** port.

Inside-reservoir installation is when the axial piston unit is installed in the reservoir below the minimum fluid level. The axial piston unit is completely below the hydraulic fluid.

If the minimum fluid level is equal to or below the upper edge of the pump, see chapter 7.3.3 "Above-reservoir installation" on page 36.



Axial piston units with electric components (e.g. electric controls, sensors) must not be installed in a reservoir below the fluid level.

If inside-reservoir installation is intended nevertheless, the IP protection class and the medium compatibility of the electric components used must be checked in the individual case. Please consult your proper contact person at Bosch Rexroth to commission an examination of the medium compatibility.



Recommended installation position: 4.

Because complete air bleeding and filling is not possible in installation positions 5, the pump must be air bled and filled in a horizontal position prior to installation.



With small tank sizes or unfavorable suction conditions, we recommend fitting a suction pipe to suction port **S (A/B)** and fitting a pipe to drain port **L** or **L₁**. In this case, the other drain port must be plugged. The housing of the axial piston unit must be filled before fitting the piping and filling the reservoir with hydraulic fluid. To prevent draining of the housing, the reservoir has to be filled with hydraulic fluid as soon as possible.

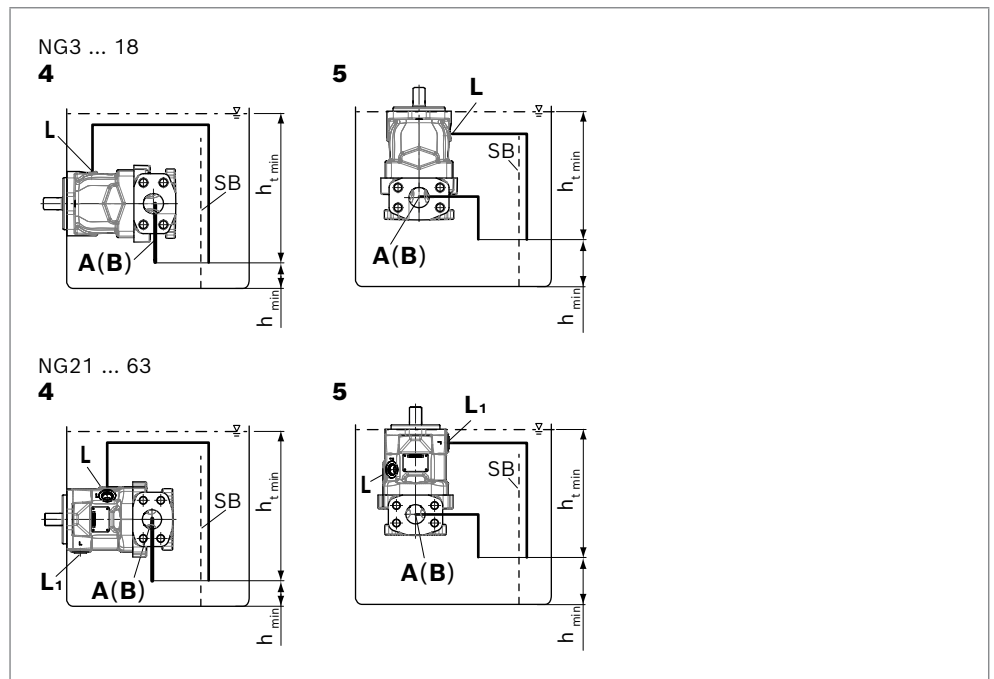


Abb. 15: Inside-reservoir installation A10FZO with installation position 4–5

Tabelle 17: Inside-reservoir installation

Installation position	Air bleed	Filling
4 (drive shaft horizontal)	Via the highest available port L	Automatically via the open port L , by position below hydraulic fluid level
5 (drive shaft vertically up)	Via the highest available port L (NG3 to 18) L₁ (NG21 to 63)	Automatically via the open port L or L₁ due to the position under the hydraulic fluid level

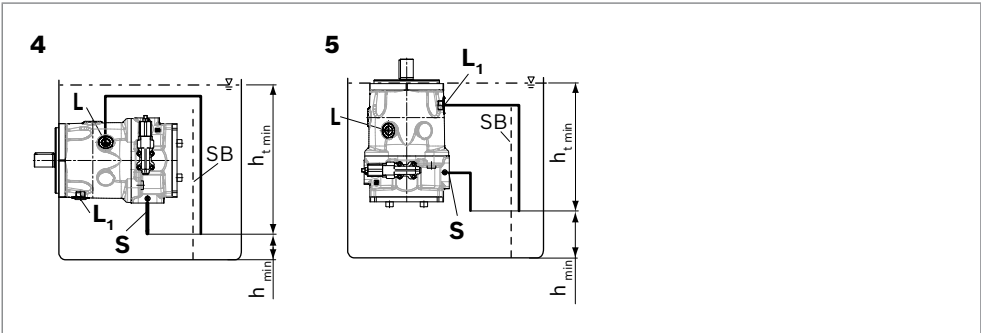


Abb. 16: Inside-reservoir installation A10VZO with installation position 4-5

Tabelle 18: Inside-reservoir installation

Installation position	Air bleed	Filling
4 (drive shaft horizontal)	Via the highest available port L	Automatically via the open port L or L₁ due to the position under the hydraulic fluid level
5 (drive shaft vertically up)	Via the highest available port L₁	Automatically via the open port L or L₁ due to the position under the hydraulic fluid level

L, L₁	Drain port	h_{min}	Minimum required distance to reservoir bottom (100 mm)
F	Filling/air bleeding		
S (A/B)	Suction port	SB	Baffle (baffle plate)
$h_{t\ min}$	Minimum required immersion depth (200 mm)		

7.3.3 Above-reservoir installation

Above-reservoir installation means that the axial piston unit is installed above the minimum fluid level of the reservoir.



Observe the maximum permissible suction height $h_{S\ max} = 800\text{ mm}$.
The permissible suction height h_S is derived from the total pressure loss.



Recommendation for installation position (drive shaft upward): A check valve in the drain line is only permissible in individual cases. Consult us for approval.



Recommended installation position: 6.

Because complete air bleeding and filling is not possible in installation positions 7 and 8, the pump must be air bled and filled in a horizontal position prior to installation.

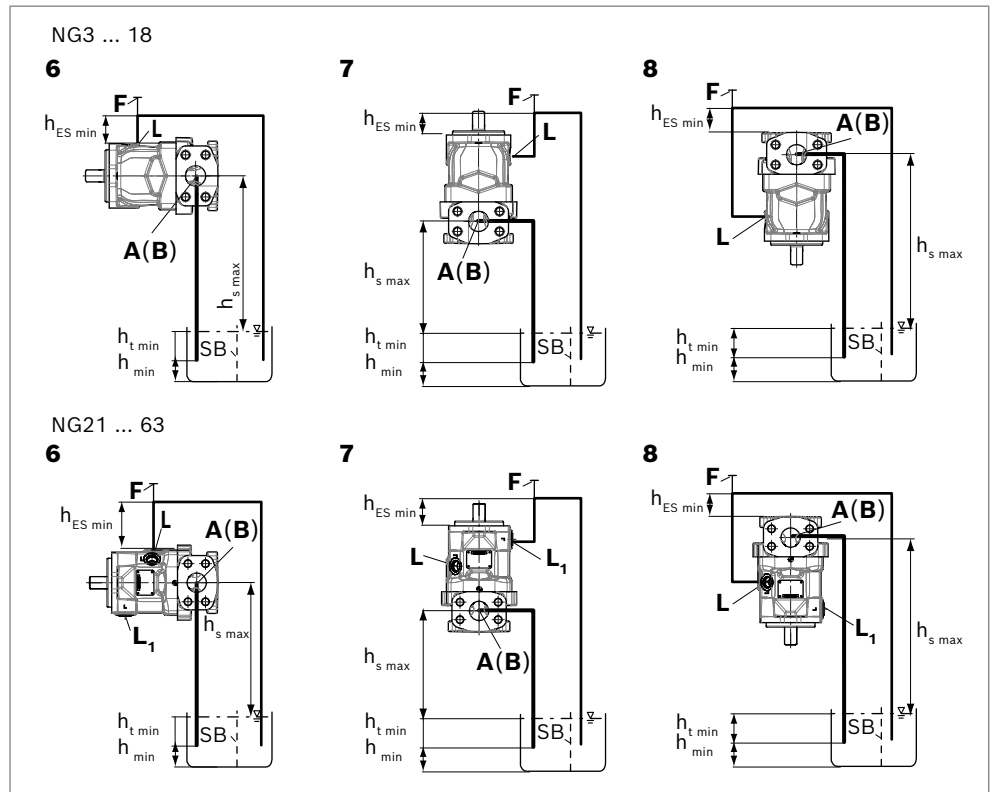


Abb. 17: Above-reservoir installation A10FZO with installation position 6–8

Tabelle 19: Above-reservoir installation

Installation position	Air bleed	Filling	
		NG03 ... 18	NG21 ... 63
6 (drive shaft horizontal)	F	L	L
7 (drive shaft vertically up)	F	L	L ₁
8 (drive shaft vertically down)	F	L	L

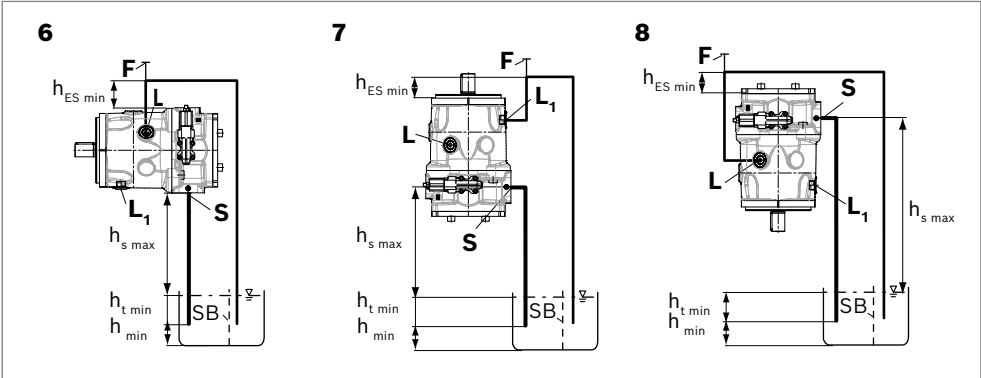


Abb. 18: Above-reservoir installation A10VZO with installation position 6–8

Tabelle 20: Above-reservoir installation

Installation position		Air bleed	Filling
6 (drive shaft horizontal)		F	L
7 (drive shaft vertically up)		F	L ₁
8 (drive shaft vertically down)		F	L
L, L ₁	Drain port	$h_{ES\ min}$	Minimum height required to prevent axial piston unit from draining (25 mm)
F	Filling/air bleeding		
S (A/B)	Suction port	$h_{s\ max}$	Maximum permissible suction height (800 mm)
$h_{t\ min}$	Minimum required immersion depth (200 mm)		
h_{min}	Minimum required distance to reservoir bottom (100 mm)	SB	Baffle (baffle plate)

7.4 Installation position A10FZG, A10VZG

The following installation positions are permissible. The pipeline routing shown illustrates the basic layout.

7.4.1 Below-reservoir installation (standard)

Below-reservoir installation means that the axial piston unit is installed outside of the reservoir below the minimum fluid level.



- Recommended installation position: 1.
- Because complete air bleeding and filling is not possible in installation positions 2 and 3, the axial piston unit must be air bled and filled in a horizontal position prior to installation.

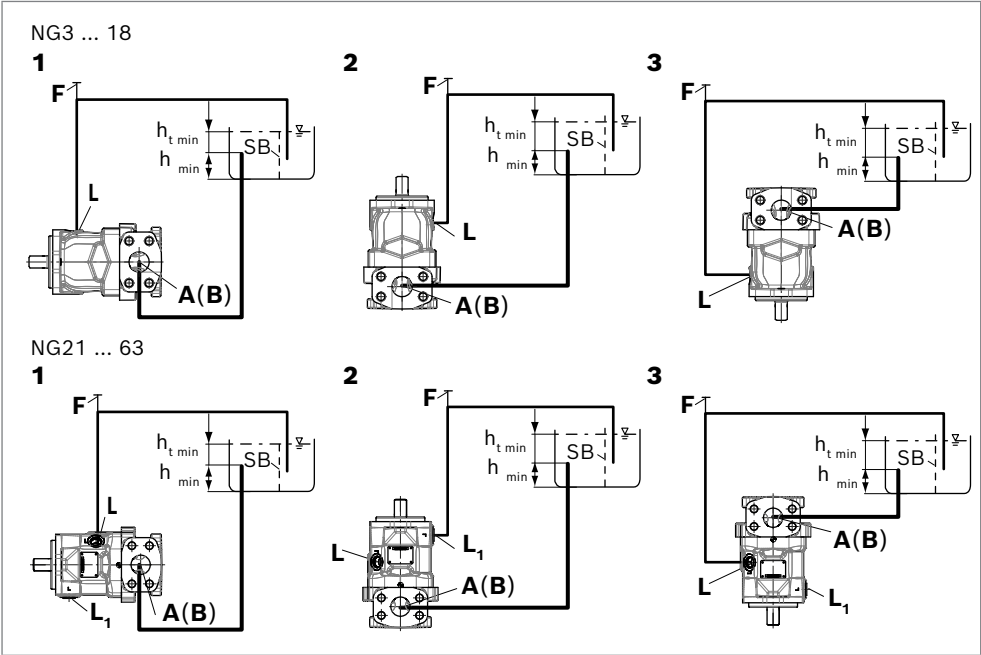


Abb. 19: Below-reservoir installation A10FZG with installation position 1–3

Tabelle 21: Below-reservoir installation

Installation position	Air bleed	Filling	
		NG03 ... 18	NG21 ... 63
1 (drive shaft horizontal)	F	L	L
2 (drive shaft vertically up)	F	L	L ₁
3 (drive shaft vertically down)	F	L	L

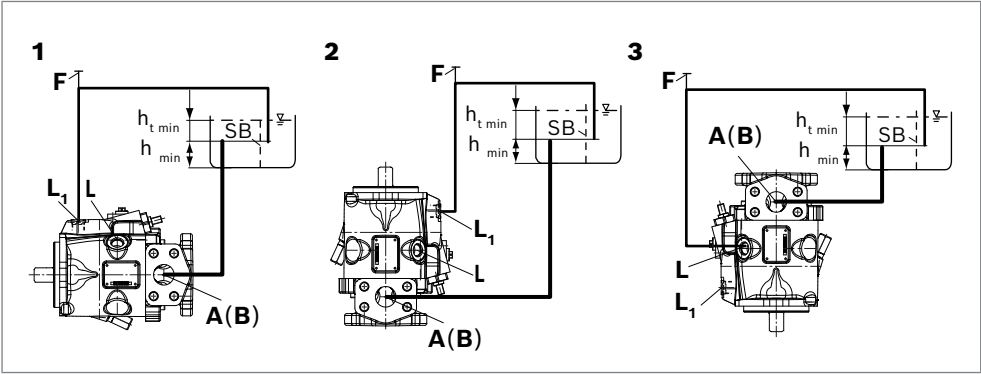


Abb. 20: Below-reservoir installation A10VZG with installation position 1–3

Tabelle 22: Below-reservoir installation

Installation position	Air bleed	Filling	
		L ₁	L
1 (drive shaft horizontal)	F	L ₁	L
2 (drive shaft vertically up)	F	L ₁	L
3 (drive shaft vertically down)	F	L	L

L, L ₁	Drain port	$h_{t\ min}$	Minimum required immersion depth (200 mm)
F	Filling/air bleeding	h_{min}	Minimum required distance to reservoir bottom (100 mm)
(A/B)	Suction port	SB	Baffle (baffle plate)

7.4.2 Above-reservoir installation

Above-reservoir installation means that the axial piston unit is installed above the minimum fluid level of the reservoir.



Recommendation for installation position (drive shaft upward): A check valve in the drain line is only permissible in individual cases. Consult us for approval.



Recommended installation position: 4.

Because complete air bleeding and filling is not possible in installation positions 5 and 6, the pump must be air bled and filled in a horizontal position prior to installation.

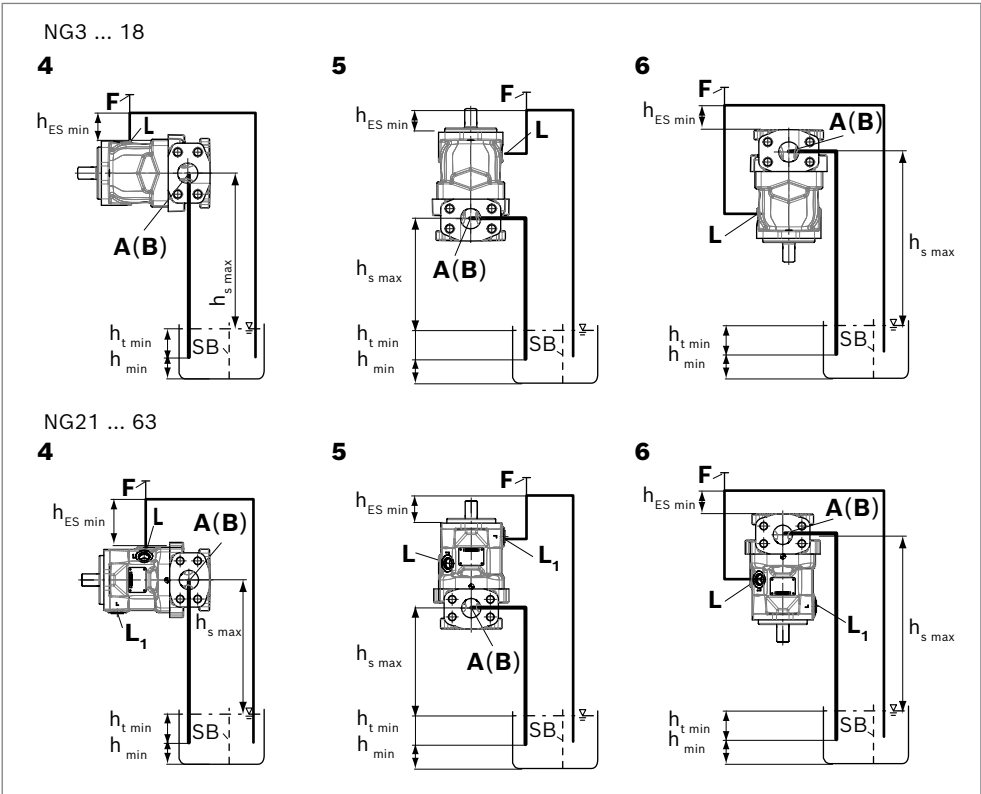


Abb. 21: Above-reservoir installation A10FZG with installation position 4–6

Tabelle 23: Above-reservoir installation

Installation position	Air bleed	Filling	
		NG03 ... 18	NG21 ... 63
1 (drive shaft horizontal)	F	L	L
2 (drive shaft vertically up)	F	L	L ₁
3 (drive shaft vertically down)	F	L	L

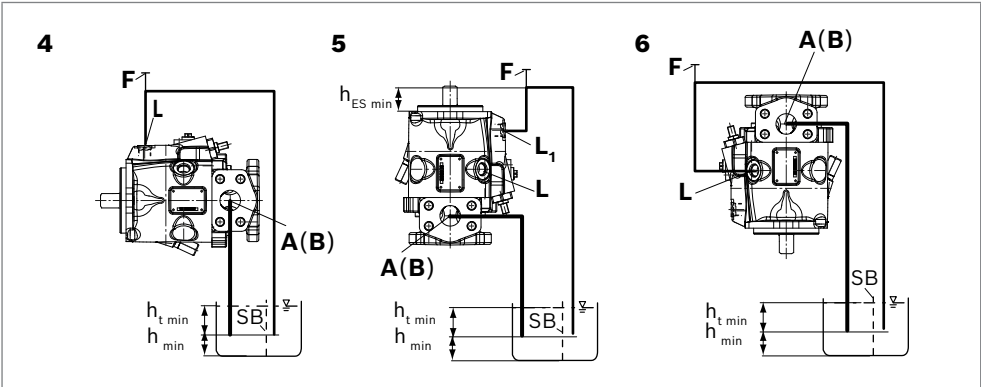


Abb. 22: Above-reservoir installation A10VZG with installation position 4–6

Tabelle 24: Above-reservoir installation

Installation position		Air bleed	Filling
6 (drive shaft horizontal)		F	L
7 (drive shaft vertically up)		F	L ₁
8 (drive shaft vertically down)		F	L
L, L ₁	Drain port	h _{min}	Minimum required distance to reservoir bottom (100 mm)
F	Filling/air bleeding		
(A/B)	Suction port	h _{ES min}	Minimum height required to prevent axial piston unit from draining (25 mm)
h _{t min}	Minimum required immersion depth (200 mm)	SB	Baffle (baffle plate)

7.5 Installing the axial piston unit

7.5.1 Preparation

1. Check the specifications on the name plate to see you have the correct axial piston unit.
2. Compare the material number and designation (type code) with the parameters in the order confirmation.



If the material number for the axial piston unit does not match the one in the order confirmation, contact your local contact person for clarification. You can find their contact information at <https://addresses.boschrexroth.com>

3. Before installing, completely drain the axial piston unit to prevent mixing with the hydraulic fluid used in the machine/system.
4. Check the permissible direction of rotation of the axial piston unit (on the name plate) and make sure that this corresponds to the direction of rotation of the drive motor.

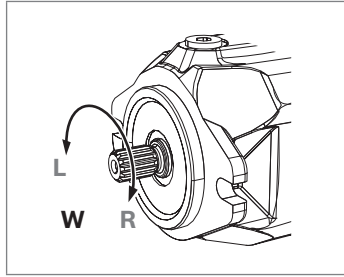


Abb. 23: Direction of rotation

- W** Bi-directional (can rotate counter-clockwise and clockwise)
L Counter-clockwise
R Clockwise



The direction of rotation as indicated on the name plate determines the direction of rotation of the axial piston unit as viewed on the drive shaft; see chapter 5.3 "Product identification" on page 24. For information on the direction of rotation of the drive motor, please refer to the drive motor manufacturer's instruction manual.

7.5.2 Dimensions

For standard versions, the data sheet 91485 contains all required installation dimensions as well as the position and dimensions of the ports. If necessary, an installation drawing can be requested. Also observe the manuals provided by the manufacturers of the other hydraulic components when selecting the required tools.

7.5.3 General instructions

Follow these general notices when installing the axial piston unit:

- Note that certain installation positions will affect the control system. Gravity, dead weight and case pressure can cause minor characteristic shifts and changes in response time.
- Torsional vibrations and speed variations may cause increased rotary angular acceleration of the rotary group of the axial piston unit.
- If a shared drain line is used for several units, make sure that the respective case pressure in each unit is not exceeded. The shared drain line must be dimensioned to ensure that the maximum permissible case pressure of all connected units is not exceeded in any operating condition, particularly at cold start. If this is not possible, separate drain line must be laid, if necessary.

The version of installation for the axial piston unit depends on the connecting elements to the drive side. The following descriptions explain the installation of the axial piston unit:

- With a coupling

7.5.4 Installation with a coupling

The following describes how to install the axial piston unit with a coupling:

NOTICE! Danger from improper handling!

Product can be damaged!

- Do not install the coupling hub on the drive shaft of the axial piston unit by striking it.

1. Install the specified coupling half on the drive shaft of the axial piston unit according to the instructions of the coupling manufacturer.



The drive shaft of the axial piston unit is equipped with a female thread. Use this female thread to pull the coupling element onto the drive shaft. The size of the female thread can be seen in the installation drawing.

2. Make sure that the installation location is clean and free from dirt and foreign particles.
3. Clamp the coupling hub onto the drive shaft or ensure permanent lubrication of the drive shaft. This prevents the formation of frictional corrosion and the associated wear.
4. Transport the axial piston unit to the installation location.
5. Install the coupling on the output shaft of the drive motor in accordance with the specifications provided by the coupling manufacturer.



Do not fasten down the axial piston unit until the coupling has been correctly installed.

6. Fasten the axial piston unit at the installation location.
7. Align the drive shaft of the axial piston unit and the drive shaft of the machine so that there is no angular deviation.
Make sure no excessive axial and radial forces are acting on the drive shaft.
8. Details on the required tools and tightening torques for the mounting bolts are available from the machine/system manufacturer.

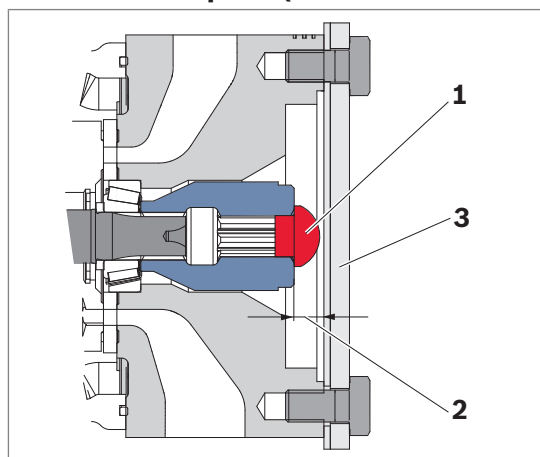
7.5.5 Remove the spacer (for version with through drive)

Abb. 24: Removing the spacer

Axial piston units with through drive are delivered with a spacer (1). The spacer is designed for transport protection and to reduce the hub's axial clearance (2).

Caution! Operation with spacers!

Operating the axial piston unit with spacer may result in damage to the axial piston unit.

- Remove the spacer prior to commissioning.
- Remove the spacer (1).

The spacer must be removed before the second pump is fitted. If you operate a further axial piston unit without installing an additional pump on the through drive, it is absolutely necessary to remove the spacer and the hub. Since the metallic protective cover (3) is not pressure-resistant, it must be replaced with a pressure-resistant cover. If you need a pressure-resistant cover, contact your Bosch Rexroth Service partner. Use a suitable tool for this to prevent damage to the functional surfaces. If functional surfaces are damaged, contact your Bosch Rexroth service partner or the service department of the factory that manufactured the axial piston unit.

7.5.6 Completion of assembly

1. Remove any installed transport screws.

CAUTION! Operation with protective plugs!

Operating the axial piston unit with protective plugs may result in injury or damage to the axial piston unit.

- Before commissioning, remove all protective plugs and replace them with suitable, pressure-resistant, metal threaded plugs or connect the appropriate lines.

2. Remove the transport protection.

The axial piston unit comes with protective covers (1), (3) and protective plugs (2). (1) and (2) are not pressure-resistant and have to be removed prior to connection. Use a suitable tool for this to prevent damage to the sealing and functional surfaces. If sealing or functional surfaces are damaged, contact your Bosch Rexroth service partner or the service department of the manufacturer's plant of the axial piston unit.

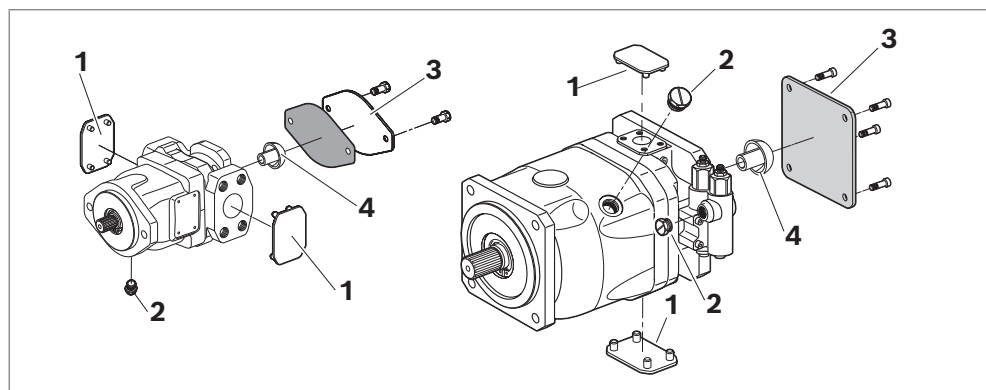


Abb. 25: Removal of transport protection, example A10FZO and A10VZO

- | | |
|-----------------------------------|---|
| 1 Protective covers | 3 For version with through drive, protective cover and mounting bolts |
| 2 Protective plugs/threaded plugs | 4 Transport protection for the through drive |

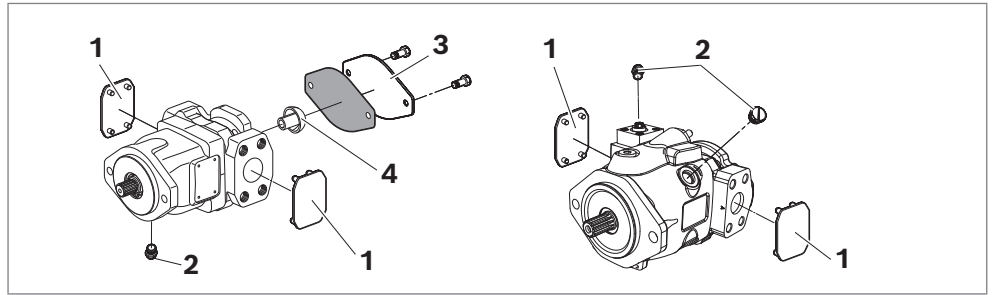


Abb. 26: Removal of transport protection, example A10FZG and A10VZG

- | | |
|---|--|
| <p>1 Protective covers</p> <p>2 Protective plugs/threaded plugs</p> | <p>3 For version with through drive, protective cover and mounting bolts</p> <p>4 Transport protection for the through drive</p> |
|---|--|



Ports intended for connecting lines come with protective plugs and/or threaded plugs, which serve as transport protection. All ports required for the function must be connected (see Tabelle 25 to Tabelle 28 "Ports A10FZO, A10VZO, A10FZG and A10VZG" starting on page 48). Failure to do so could lead to malfunctions or damage. If a port is not being used, plug it with a threaded plug since the protective plugs are not pressure-resistant.

7.5.7 Hydraulically connecting the axial piston unit

NOTICE

Insufficient suction pressure!

Generally, a minimum permissible suction pressure at port **S(A/B)** is specified for axial piston pumps in all installation positions. If the pressure at port **S(A/B)** drops below the specified values, damage may occur which may lead to the axial piston pump being damaged beyond repair!

- Make sure the required suction pressure is maintained. This is influenced by:
 - The piping (e.g. suction cross-section, pipe diameter, length of suction line)
 - The position of the reservoir
 - The viscosity of the hydraulic fluid
 - A filter element or check valve in the suction line (check the level of contamination of the filter element regularly)
 - The geodesic height of the place of use

CAUTION

Incorrectly connected suction and pressure lines!

Risk of injury and property damage!

- Make sure that the corresponding suction and pressure port is assigned to the correct direction of rotation. Information on this can be found in data sheet 91485 and in Tabelle 7 to Tabelle 9 "Flow direction" starting on page 24.

The machine/system manufacturer is responsible for dimensioning of the lines. Connect the axial piston unit to the rest of the hydraulic system in accordance with the hydraulic circuit diagram of the machine/system manufacturer.

The ports and fastening threads are designed for the $p_{\max}$ permissible pressures of the respective ports, see Tabelle 25 to Tabelle 28

"Ports A10FZO, A10VZO, A10FZG and A10VZG" starting on page 48.

The machine/system manufacturer is required to ensure that the connecting elements and lines correspond to the specified application conditions (pressure, flow, hydraulic fluid, temperature) with the necessary safety factors.



Connect only hydraulic lines that match the axial piston unit port (pressure level, size, system of units).

Information on routing of lines

Observe the following information when routing the suction, pressure and drain lines.

- Lines and hoses should be installed without pre-charge pressure so no further mechanical forces are applied during operation that will reduce the service life of the axial piston unit and, possibly, the entire machine/system.
- Use suitable seals as sealing material.
- Suction line (pipe or hose)
 - The suction line should be as short and straight as possible.
 - Measure the line cross section of the suction line so the pressure at the suction port does not drop below the minimum permissible pressure. Make sure the maximum suction pressure is not exceeded (e.g. when prefilling).
 - Make sure the connections and connecting elements are airtight.
 - The hose must be pressure-resistant, also to external air pressure.
- Pressure line
 - For the pressure lines, use only pipes, hoses and connecting elements rated for the working pressure range specified in data sheet 91485 (see Tabelle 25 to Tabelle 28).
- Drain line
 - Always route the drain lines so that the housing is constantly filled with hydraulic fluid and to ensure no air gets through the shaft seal, even during extended standstill periods.
 - The case pressure must never exceed the limit values specified for the axial piston unit in the data sheet.
 - The drain line inflow in the reservoir should always be below the minimum fluid level (see chapter 7.3 "Installation position A10FZO, A10VZO" and "Installation position A10FZG, A10VZG" starting on page 33).
- If the axial piston unit is equipped with installed screw fittings, do not remove them. Screw the stud end of the fitting directly into the installed fitting.

Risk of confusion with threaded connections

Axial piston units are used in application areas that use the metric system as well as the Anglo-American (imperial) and the Japanese measuring system (JIS – **J**apan **I**ndustrial **S**tandard). Various kinds of seals are also used. The system of units, the kind of seal and the size of female thread and stud ends (e.g. threaded plug) must all match.

There is a risk of confusion due to the limited ways of visually telling them apart.

WARNING! Leaky and bursting stud ends!

For fittings, if a stud end that does not match the system of units, kind of seal and size of the female thread is pressurized, the stud end may loosen itself or even be ejected from the hole in a projectile-like manner. This can result in serious injury and property damage. Hydraulic fluid can escape from this leakage point.

- ▶ Use the drawings (installation drawing) to determine the required stud end for each fitting.
- ▶ Make sure the right fittings, mounting bolts and threaded plugs are installed.
- ▶ For all female threads, use a stud end from the same system of units and of the correct size.

Port overview
A10FZO

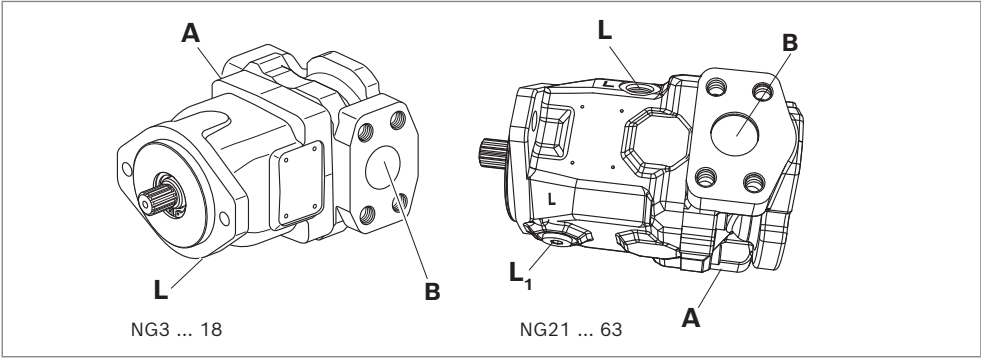


Abb. 27: Port overview A10FZO, SAE flange ports (port plate 02)

Port overview
A10VZO

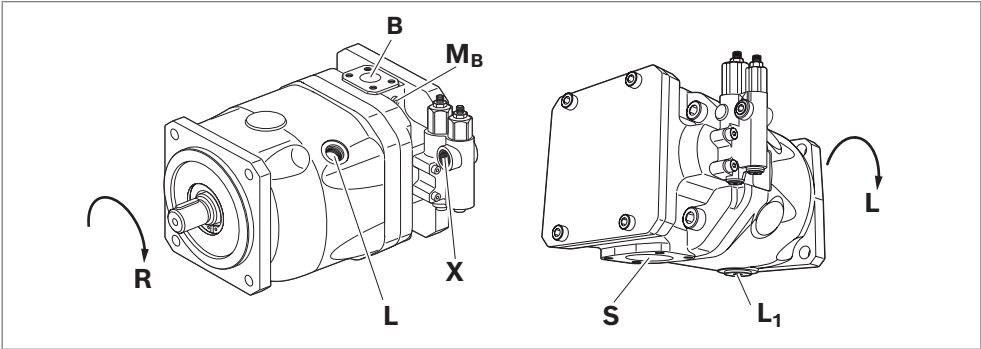


Abb. 28: Port overview A10VZO, DRG control, SAE flange ports (port plate 22)

Tabelle 25: Ports A10FZO

Ports ¹⁾		$p_{\max}$ [bar] ²⁾	State ³⁾
B(A) ⁷⁾	Working port (high-pressure series)	350	O
A(B) ⁷⁾	Suction port (standard pressure series)	10	O
L	Drain port	2	O ⁴⁾
L ₁	Drain port (only NG 21 to 63)	2	X ⁴⁾

Tabelle 26: Ports A10VZO

Ports ¹⁾		$p_{\max}$ [bar] ²⁾	State ³⁾
B	Working port (high-pressure series)	350	O
S	Suction port (standard pressure series)	10	O
L	Drain port	2	O ⁴⁾
L ₁	Drain port	2	X ⁴⁾
X	Pilot pressure	350	O
X ⁵⁾	Pilot pressure	280	O
M _B ⁶⁾	Measuring port pressure in B	350	X

- 1) The measuring system and thread size can be found in the installation drawing.
- 2) Depending on the application, momentary pressure peaks can occur. Keep this in mind when selecting measuring devices and fittings.
- 3) O = Must be connected (plugged on delivery)
X = Plugged (in normal operation)
- 4) Depending on the installation position, L or L₁ must be connected (see chapter 7.3 "Installation position A10FZO, A10VZO" on page 33).
- 5) Only for DG control.
- 6) Only for port plate 22 and 32.
- 7) Depending on the direction of rotation, please observe the information in this manual.

**Port overview
A10FZG**

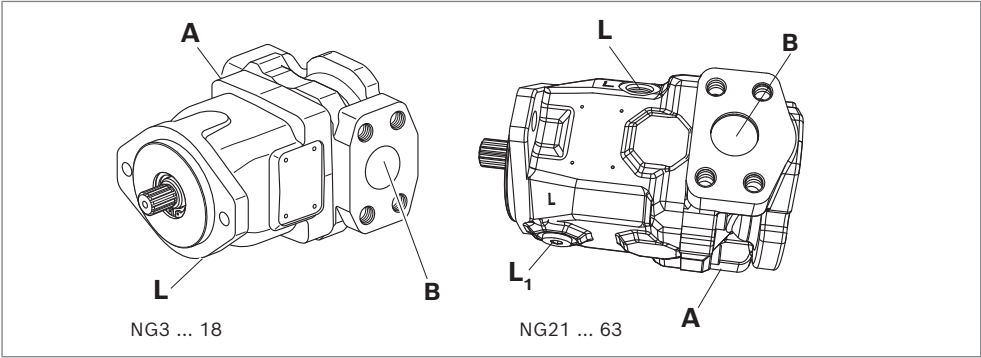


Abb. 29: Port overview A10FZG, SAE flange ports (port plate 02)

**Port overview
A10VZG**

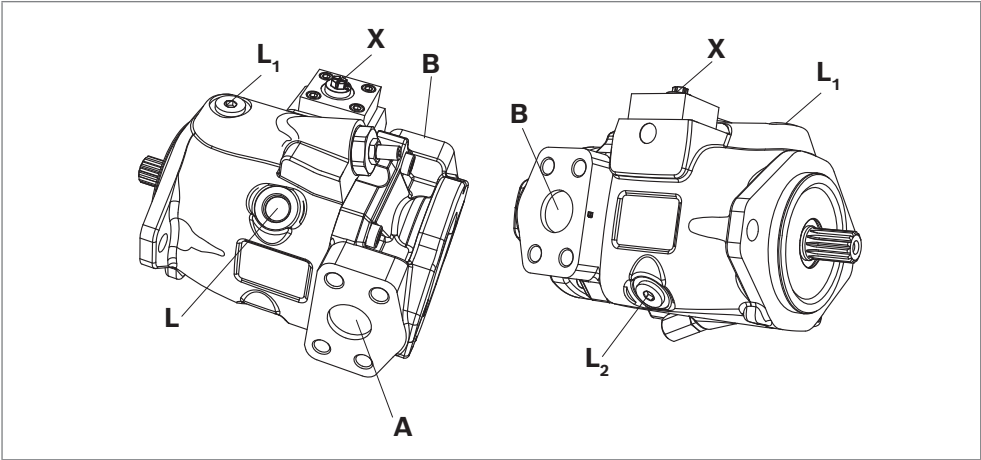


Abb. 30: Port overview A10VZG, DG control, SAE flange ports (port plate 02)

Tabelle 27: Ports A10FZG

Ports ¹⁾		$p_{\max}$ [bar] ²⁾	State ³⁾
A, B	Working port (high-pressure series)	350	O
L	Drain port	2	O ⁴⁾
L ₁	Drain port (only NG21 to 63)	2	X ⁴⁾

Tabelle 28: Ports A10VZG

Ports ¹⁾		$p_{\max}$ [bar] ²⁾	State ³⁾
A, B	Working port (high-pressure series)	350	O
L	Drain port	4	O ⁴⁾
L ₁	Drain port	4	X ⁴⁾
L ₂	Drain port (only NG18 to 63)	4	X ⁴⁾
X	Pilot pressure	250	O

- 1) The measuring system and thread size can be found in the installation drawing.
- 2) Depending on the application, momentary pressure peaks can occur. Keep this in mind when selecting measuring devices and fittings.
- 3) O = Must be connected (plugged on delivery)
X = Plugged (in normal operation)
- 4) Dependent on the installation position, **L**, **L₁** or **L₂** must be connected (see chapter 7.3 "Installation position A10FZG, A10VZG" on page 38).

Tightening torques

The following tightening torques apply:

- Fittings:
Observe the manufacturer's specifications regarding the tightening torques of the fittings used.
- Female threads in the axial piston unit:
The max. permissible tightening torques $M_{G \max}$ are the maximum values for the female threads and should not be exceeded. For values, see Tabelle 29.
- Threaded plugs:
For the metallic threaded plugs supplied with the axial piston unit, the required tightening torques of threaded plugs M_V apply. For values, see Tabelle 29.
- Mounting bolts:
For mounting bolts with metric ISO threads according to DIN 13 and/or ASME B1.1 threads, we recommend checking the tightening torque in individual cases in accordance with VDI 2230.



In addition to the ports specified in Tabelle 25 to Tabelle 28 "Ports A10FZO, A10VZO, A10FZG and A10VZG" on page 48 and 49, axial piston units may have openings that are also closed with a threaded plug. These plugs must not be opened on the customer side! If you have opened the threaded plug accidentally, please contact your local contact person to ensure safe re-closing of the plug. You can find the address at <https://addresses.boschrexroth.com>

Tabelle 29: Tightening torques for female threads and threaded plugs

Ports Standard	Thread size	Maximum permissible tightening torque of female threads $M_{G \max}$	Required tightening torque of threaded plugs M_V	WAF hexagon socket of the threaded plug
ISO 6149	M8 × 1	10 Nm	7 Nm	4 mm
	M10 × 1	30 Nm	15 Nm	5 mm
	M12 × 1.5	50 Nm	25 Nm	6 mm
	M14 × 1.5	80 Nm	45 Nm	6 mm
	M16 × 1.5	100 Nm	55 Nm	8 mm
	M18 × 1.5	140 Nm	70 Nm	8 mm
	M20 × 1.5	170 Nm	80 Nm	10 mm
	M22 × 1.5	210 Nm	100 Nm	10 mm
	M27 × 2	330 Nm	170 Nm	12 mm
	M30 × 2	420 Nm	215 Nm	17 mm
	M33 × 2	540 Nm	310 Nm	17 mm
	M42 × 2	720 Nm	330 Nm	22 mm
	M48 × 2	900 Nm	420 Nm	22 mm
DIN 3852	M8 × 1	10 Nm	7 Nm ¹⁾	3 mm
	M10 × 1	30 Nm	15 Nm ²⁾	5 mm
	M12 × 1.5	50 Nm	25 Nm ²⁾	6 mm
	M14 × 1.5	80 Nm	35 Nm ¹⁾	6 mm
	M16 × 1.5	100 Nm	50 Nm ¹⁾	8 mm
	M18 × 1.5	140 Nm	60 Nm ¹⁾	8 mm
	M22 × 1.5	210 Nm	80 Nm ¹⁾	10 mm
	M26 × 1.5	230 Nm	120 Nm ¹⁾	12 mm
	M27 × 2	330 Nm	135 Nm ¹⁾	12 mm
	M33 × 2	540 Nm	225 Nm ¹⁾	17 mm
	M42 × 2	720 Nm	360 Nm ¹⁾	22 mm
	M48 × 2	900 Nm	400 Nm ¹⁾	24 mm
ISO 11926	5/16-24 UNF-2B	10 Nm	7 Nm	1/8 in
	3/8-24 UNF-2B	20 Nm	10 Nm	5/32 in
	7/16-20 UNF-2B	40 Nm	18 Nm	3/16 in
	9/16-18 UNF-2B	80 Nm	35 Nm	1/4 in
	3/4-16 UNF-2B	160 Nm	70 Nm	5/16 in
	7/8-14 UNF-2B	240 Nm	110 Nm	3/8 in
	1 1/16-12 UN-2B	360 Nm	170 Nm	9/16 in
	1 5/16-12 UN-2B	540 Nm	270 Nm	5/8 in
	1 5/8-12 UN-2B	960 Nm	320 Nm	3/4 in
	1 7/8-12 UN-2B	1200 Nm	390 Nm	3/4 in

¹⁾ The tightening torques for the threaded plugs are valid for the condition "dry" and "lightly oiled".

²⁾ The tightening torques for the threaded plugs are valid for the condition "dry" – in the condition "lightly oiled", the tightening torques for M10 × 1 are reduced to 10 Nm and for M12 × 1.5 to 17 Nm.

- Procedure** To connect the axial piston unit to the hydraulic system:
1. Remove the protective plugs and/or threaded plugs from the ports where the connections should be made according to the hydraulic circuit diagram.
 2. Make sure the sealing surfaces of the hydraulic ports and functional surfaces are not damaged.
 3. Use only clean hydraulic lines or flush them before installation.
(Observe chapter 7.6 "Performing flushing cycle" on page 53 when you flush the hydraulic system.)
 4. Connect the lines in accordance with the installation drawing and the machine or system circuit diagram. Check that all ports are connected or plugged with threaded plugs. For inside-reservoir installation, the housing of the axial piston unit must be filled before fitting the lines and filling the reservoir with hydraulic fluid.
 5. Properly tighten the fittings (observe tightening torques!). Mark all properly tightened fittings, e.g. with a permanent marker.
 6. Check all pipes and hose lines and every combination of connecting pieces, couplings or connecting points with hoses or pipes to ensure they are in safe working condition.



For assignment between direction of rotation and flow direction, see data sheet 91485 and Tabelle 7 to Tabelle 9 "Flow direction" starting on page 24.

7.5.8 Electrically connecting the axial piston unit

NOTICE

Short circuit due to penetrating hydraulic fluid!

Fluid can penetrate the product and cause a short circuit!

- Do not install axial piston units with electric components (e.g. electric controls, sensors) in a reservoir below the fluid level (inside-reservoir installation) unless they have been explicitly released for use under hydraulic fluid (see also chapter 7.3.2 "Inside-reservoir installation" on page 34).

The machine/system manufacturer is responsible for electric control layout. Electrically controlled axial piston units must be connected in accordance with the electrical circuit diagram for the machine/system.

For axial piston units with electrical control and/or mounted sensors, observe the parameters in data sheet 91485, e.g.:

- Permissible voltage range
- Permissible current
- Correct pin assignment
- Recommended electrical control units

Exact details on the connector, type of protection and matching mating connector can also be found in data sheet 91485. The mating connector is not included in the scope of delivery.

This can be supplied by Bosch Rexroth on request.
Bosch Rexroth material number: R902602623.

1. Switch off the power supply to the relevant machine/system component.
2. Electrically connect the axial piston unit (12 or 24 V). Before establishing the connection, check the connector and all seals for damage.


Changing connector position

If necessary, you can change the position of the connector by turning the solenoid body. This is independent of the connector version.

CAUTION! Hot surfaces on the solenoid!

Risk of getting burnt!

- ▶ Allow the solenoid to cool down sufficiently before touching it.
- ▶ Wear heat-resistant, protective clothing, e.g. gloves.

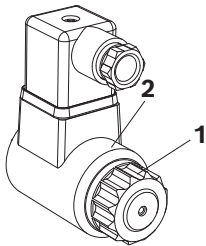

To do this, proceed as follows:

1. Loosen the mounting nut (1) of the solenoid. To do this, turn the mounting nut (1) one turn counterclockwise.
2. Turn the solenoid body (2) to the desired position.
3. Re-tighten the mounting nut. Tightening torque of the mounting nut: 5+1 Nm (width across flats SW26, 12kt DIN 3124).

Tightening torque for Hirschmann connectors

On axial piston units with a Hirschmann connector according to DIN EN 175 301-803-A/ISO 4400, the following tightening torques apply when mounting plug-in connectors:

- Mounting bolt M3 (3): 0.5 Nm
- Union nut M16 × 1.5 (4): 1.5–2.5 Nm

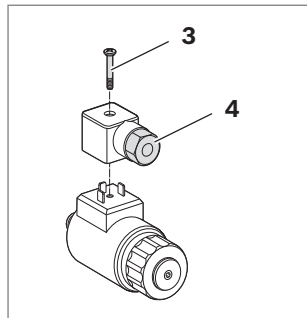


Abb. 31: HIRSCHMANN connector

7.6 Performing flushing cycle

In order to remove foreign particles from the system, Bosch Rexroth recommends a flushing cycle for the hydraulic system before the first commissioning. To avoid internal contamination, do not include the axial piston unit in the flushing cycle.



Use an additional flushing unit to perform the flushing cycle. Follow the instructions of the flushing unit's manufacturer for the exact procedure during the flushing cycle.

8 Commissioning

WARNING

Danger while working in the danger zone of a machine/system!

Danger to life, risk of injury or serious injury!

- ▶ Pay attention to and eliminate potential danger sources before commissioning the axial piston unit.
- ▶ Make sure no one is in the danger zone of the machine/system.
- ▶ The emergency stop button for the machine/system should be within the operator's reach.
- ▶ Always follow the instructions of the machine/system manufacturer during commissioning.

CAUTION

Commissioning an incorrectly installed product!

Risk of injury and property damage!

- ▶ Make sure all electrical and hydraulic ports are connected or plugged.
- ▶ Commission only a fully installed, fully functioning product with original accessories from Bosch Rexroth.

8.1 Initial commissioning



During all commissioning work on the axial piston unit, observe the general safety instructions and intended use detailed in chapter 2 "Safety instructions" on page 8.

- ▶ Connect the pressure gauge for the working pressure, case pressure and suction pressure to the specified measuring points on the axial piston unit or in the hydraulic system to check the technical data at first operation.
- ▶ During commissioning, monitor the temperature of the hydraulic fluid in the reservoir to ensure that it lies within permissible viscosity limits.

8.1.1 Filling the axial piston unit

Professional filling and air bleeding is required to prevent damage to the axial piston unit and to maintain proper function.



Usually, the cleanliness level of commercial hydraulic fluids is insufficient for the requirements of our components. These hydraulic fluids must be filtered during filling using an appropriate filter system to minimize solid particle contamination and water in the system.

Use only a hydraulic fluid that corresponds to the following requirements: Details regarding minimum requirements for hydraulic fluids can be found in Bosch Rexroth data sheet 90220. The titles of the data sheets can be found in Tabelle 1 "Required and supplementary documentation" on page 5.



Bosch Rexroth evaluates hydraulic fluids on the basis of the Fluid Rating according to data sheet 90235. For hydraulic fluids which have been positively evaluated in the Fluid Rating, please refer to data sheet 90245 "Bosch Rexroth fluid rating list for Rexroth hydraulic components (pumps and motors)". Selection of hydraulic fluid shall make sure that the operating viscosity in the operating temperature range is within the optimum range (v_{opt} ; see selection diagram in the data sheet 91485).

To ensure the functional reliability of the axial piston unit, cleanliness level 20/18/15 according to at least ISO 4406 is required for the hydraulic fluid. At a hydraulic fluid viscosity of 16 mm²/s to 10 mm²/s (e.g. due to high temperatures during short-term operation) at the drain port, a cleanliness level of at least 19/17/14 under ISO 4406 is required. You can find parameters on the permissible and optimal viscosities and admissible temperatures in data sheet 91485.

Procedure Proceed as follows to fill the axial piston unit:

1. Place a drip tray under the axial piston unit to collect any hydraulic fluid that may leak.

NOTICE! Contaminated hydraulic fluid!

The cleanliness levels of commercial hydraulic fluids are usually insufficient for the requirements of our components.

- Use a suitable filter system to filter hydraulic fluids during filling to minimize solid particle contamination and water in the hydraulic system.

2. Fill and air bleed the axial piston unit via the appropriate ports, see chapters 7.3 "Installation position A10FZO, A10VZO" and "Installation position A10FZG, A10VZG" starting on page 33. Also fill the hydraulic lines of the system.

NOTICE! Risk of property damage due to inadequate lubrication!

Product can be damaged or destroyed!

- When using a shut-off valve in the suction line, make sure that the drive of the axial piston unit can only be started when the shut-off valves are open.
 - Dimension a shut-off valve in the suction line so that no inadmissible pressure drop occurs in the suction area when the shut-off valve is open.
3. If you use a shut-off valve in the suction line, only operate the axial piston unit with opened shut-off valves.
 4. Test the direction of rotation of the drive motor. To do this, run the drive motor briefly at the lowest rotational speed (inching). Make sure that the direction of rotation of the axial piston unit agrees with the details of the name plate, see chapter 5.3 "Product identification", Abb. 9: Name plate example A10VZO on page 24.
 5. Operate the axial piston pump at a low rotational speed (starter speed for internal combustion engines and/or inching mode for electric motors) until the hydraulic system is completely filled and air bled. To verify, drain the hydraulic fluid at the drain port until there are no bubbles in the fluid.

8.1.2 Testing the hydraulic fluid supply

The axial piston unit should always have a sufficient supply of hydraulic fluid. For this reason, the supply of hydraulic fluid must be ensured at the start of the commissioning process.

When you test the hydraulic fluid supply, constantly monitor noise development and check the hydraulic fluid level in the reservoir. If the axial piston unit becomes louder (cavitation) or the leakage fluid is discharged with bubbles, this is an indication that the axial piston unit is not being sufficiently supplied with hydraulic fluid.

For information on troubleshooting, see chapter 14 "Troubleshooting" on page 64.

To test the hydraulic fluid supply:

1. Allow the drive motor to run at the lowest rotational speed. The axial piston unit should be operated without load. Pay attention to leaks and noises.
2. Check the axial piston unit's drain line during the test. The leakage should be without bubbles.
3. Increase the load and check whether the working pressure rises as expected.
4. Perform a leak test to ensure the hydraulic system is sealed and can withstand the max. pressure.
5. Check the suction pressure at port **S(A/B)** of the axial piston pump at nominal speed. Refer to data sheet 91485 for the permissible value.
(for A10FZO and A10FZG)
6. Check the suction pressure at port **S(A/B)** of the axial piston pump at nominal speed and max. swivel angle. Refer to data sheet 91485 for the permissible value. (for A10VZO and A10VZG)
7. At maximum working pressure, check the case pressure at the port **L, L₁** or **L₂**. Refer to data sheet 91485 for the permissible value.

8.1.3 Performing a functional test

WARNING

Improperly connected axial piston unit!

Mixing up the ports will cause malfunctions (e.g. lift instead of lower) and could endanger personnel and equipment!

- Before the functional test, check whether the piping specified in the hydraulic circuit diagram has been installed.

Once you have tested the hydraulic fluid supply, perform a functional test of the machine/system. The functional test should be performed according to the instructions of the machine/system manufacturer.

The axial piston unit is tested for functional capability and performance before delivery according to the technical data. During commissioning, make sure the axial piston unit was installed in the machine/system as intended.

- After starting the drive motor, check in particular the specified pressures, e.g. working pressure and case pressure.
- Perform a leak test without and with load prior to normal operation.
- If necessary, remove the pressure gauge and plug the ports with the specified threaded plugs.

8.2 Running-in phase

NOTICE

Property damage due to insufficient viscosity!

Elevated hydraulic fluid temperature may excessively reduce viscosity and damage the product!

- ▶ Monitor the operating temperature during the running-in phase, e.g. by measuring the leakage temperature.
- ▶ Reduce the loading (pressure, rotational speed) of the axial piston unit if unacceptable operating temperatures and/or viscosities occur.
- ▶ Excessively high operating temperatures indicate faults that have to be analyzed and eliminated.

The bearings and sliding surfaces are subject to a running-in phase. The increased friction at the start of the running-in phase results in increased heat development which decreases with increasing operating hours. The mechanical-hydraulic efficiency is also greater until the running-in phase of about 10 operating hours is concluded.

To ensure that contamination in the hydraulic system does not damage the axial piston unit, Bosch Rexroth recommends the following procedure after the running-in phase:

- ▶ After the running-in phase, have a hydraulic fluid sample analyzed for the required cleanliness level.
- ▶ Change the hydraulic fluid if the required cleanliness level is not reached. If a laboratory test is not carried out after the running-in phase, it is recommended to change the hydraulic fluid.

8.3 Recommissioning after standstill

Depending on the installation conditions and ambient conditions, changes may occur in the hydraulic system which make recommissioning necessary.

The following criteria may make recommissioning necessary:

- Air and/or water in the hydraulic system
 - Old hydraulic fluid
 - Other contamination
-
- ▶ Before recommissioning, proceed as described in chapter 8.1 "Initial commissioning" on page 54.

9 Operation

This product is a component which requires no settings or changes during operation. For this reason, this chapter of the manual does not contain any information on adjustment options. Use the product only within the performance range specified in the technical data. The machine/system manufacturer is responsible for proper project planning of the hydraulic system and its control.

10 Maintenance and repair

NOTICE

Overdue inspection and maintenance work!

Property damage!

- ▶ Perform the specified inspection and maintenance work at the intervals described in this manual.

10.1 Cleaning and care

NOTICE

Damage to seals and electrical system due to mechanical effects!

The jet of a high-pressure cleaner may damage the seals and electrical system of the axial piston unit!

- ▶ Do not point a high-pressure cleaner at sensitive components, e.g. shaft seal, electrical connections and components.

For cleaning and care of the axial piston unit, observe the following:

- ▶ Check whether all seals and plug-in connections are securely seated to ensure no moisture can penetrate into the axial piston unit during cleaning.
- ▶ Use only water and, if necessary, a mild cleaning agent to clean the axial piston unit. Never use solvents or aggressive cleaning agents.
- ▶ Remove major external contamination and keep clean sensitive and important components, such as solenoids, valves, indicators and sensors.

10.2 Inspection

In order for the axial piston unit to be reliable and long-lasting, Bosch Rexroth recommends inspecting the hydraulic system and axial piston unit on a regular basis, and documenting and archiving the following operating conditions:

Tabelle 30: Inspection schedule

Tasks to be performed		Interval
Hydraulic system	Check hydraulic fluid level in the reservoir.	Daily
	Check the operating temperature under comparable load condition at the drain port and in the reservoir.	Weekly
	Perform hydraulic fluid analysis: Viscosity, aging and contamination	Yearly or every 2000 operating hours (whichever occurs first)
	Check filter. The replacement interval may vary depending on the cleanliness of the hydraulic fluid. We recommend using a contamination indicator.	Yearly or every 1000 operating hours (whichever occurs first)
Axial piston unit	Check axial piston unit for leakage. Early detection of hydraulic fluid loss can help to find faults on the machine/system and rectify them. This is why Bosch Rexroth recommends always keeping the axial piston unit and system clean.	Daily
	Check axial piston unit for unusual noise development.	Daily
	Check mounting elements for tight seating. All fasteners have to be checked when the hydraulic system is switched off, depressurized and cooled down.	Monthly

10.3 Maintenance

The axial piston unit is low-maintenance when used as intended.

The service life of the axial piston unit is heavily dependent on the quality of the hydraulic fluid. This is why we recommend changing the hydraulic fluid at least once per year or every 2000 operating hours (whichever occurs first), or having it analyzed by the hydraulic fluid manufacturer or a laboratory to determine its suitability for further use.

The service life of the axial piston unit is limited to the service life of the bearings used if the permissible operating parameters are observed. You can ask your local contact person about service life based on load cycle. You can find their contact information at

<https://addresses.boschrexroth.com>

Based on these parameters, a maintenance interval should be determined by the system manufacturer for the replacement of the bearings and included in the maintenance schedule of the hydraulic system.

10.4 Repair

Bosch Rexroth offers a comprehensive range of services for the repair of Rexroth axial piston units.

Repairs on the axial piston unit and its assembled parts should only be performed by service centers certified by Bosch Rexroth.

- Only use original spare parts from Rexroth to repair the Rexroth axial piston units, otherwise the functional reliability of the axial piston unit cannot be guaranteed, and the warranty will be voided.

For questions regarding repairs, contact your proper Bosch Rexroth service partner or the service department of the manufacturer's plant of the axial piston unit; see chapter 10.5 "Spare parts" on page 60.

10.5 Spare parts



CAUTION

Use of unsuitable spare parts!

Spare parts that do not meet the technical requirements specified by Bosch Rexroth can cause injury and property damage!

- Only use original spare parts from Rexroth to repair the Rexroth axial piston units, otherwise the functional reliability of the axial piston unit cannot be guaranteed, and the warranty will be voided.

The spare parts lists for axial piston units are order-specific. When ordering spare parts, specify the material and serial number of the axial piston unit as well as the material numbers of the spare parts.

Address all questions regarding spare parts to your proper Bosch Rexroth Service partner or the service department of the manufacturer's plant of the axial piston unit.

Details for the manufacturer's plant can be found on the name plate of the axial piston unit.

Bosch Rexroth AG
An den Kelterwiesen 14
72160 Horb a.N., Germany
Hotline +49 9352 405060

Spare parts can be found online at www.boschrexroth.com/eshop

For general inquiries, please contact your local contact person. You can find their contact information at

<https://addresses.boschrexroth.com>

11 Removal and replacement

11.1 Required tools

Removal can be performed using standard tools. No special tools are necessary.

11.2 Preparing for removal

1. Decommission the relevant system part as described in the instruction manual for the machine or system.
 - Relieve pressure in the hydraulic system according to the instructions of the machine or system manufacturer.
 - Make sure the relevant machine/system components are depressurized and de-energized.
2. Secure the relevant system part against reactivation.

11.3 Performing the removal

Proceed as follows to remove the axial piston unit:

1. Make sure you have the appropriate tools and wear personal protective equipment.
2. Allow the axial piston unit to cool down until it can be removed without danger.
3. For below-reservoir installation, before removing the axial piston unit, seal the connection to the reservoir and/or drain the reservoir.
4. Place a drip tray under the axial piston unit to collect any hydraulic fluid that may leak.
5. Disconnect the lines and collect the escaping hydraulic fluid in the drip tray.
6. Remove the axial piston unit. Use a suitable lifting device.
7. Completely drain the axial piston unit.
8. Plug all openings.

11.4 Preparing the components for storage or further use

- Proceed as described in chapter 6.2 "Storing the axial piston unit" on page 28.

12 Disposal

Careless disposal of the axial piston unit, the hydraulic fluid and the packaging material can result in environmental pollution.

Observe the following when disposing of the axial piston unit:

- 1.** Completely drain the axial piston unit.
- 2.** Dispose of the axial piston unit and packaging material in accordance with the regulations in your country.
- 3.** Dispose of the hydraulic fluid in accordance with the regulations of your country. Also observe the applicable safety data sheet for the hydraulic fluid.
- 4.** Disassemble the axial piston unit into its constituent parts for proper recycling.
- 5.** For example, separate the parts into:
 - Castings
 - Steel
 - Aluminum
 - Non-ferrous metal
 - Electronic waste
 - Plastic
 - Seals

13 Extension and conversion

Do not modify the axial piston unit and/or its assembled parts. This also includes a modification of the setting screws.

Changes to settings on the customer side should only be made using the product-specific setting instructions.



The warranty from Bosch Rexroth only applies to the configuration as delivered. The warranty will be voided if the unit is modified or extended.



Adjusting the setting screws will render the warranty void. If you need to change the settings, please contact your local contact person; you can find their contact information at

<https://addresses.boschrexroth.com>

14 Troubleshooting

The Tabelle 31 is intended to support troubleshooting. This table is not exhaustive. Issues may occur in practice that are not listed here.

Only authorized personnel may perform troubleshooting inside a safety area designated by the machine manufacturer.

14.1 How to proceed for troubleshooting

- ▶ Perform troubleshooting if possible with reduced operating data (e.g. slowly swinging in or out and slow pressure increase).
- ▶ Work systematically and in a targeted manner, even when pressed for time. Random, indiscriminate removal and changing of settings could make it impossible to determine the original cause of the fault.
- ▶ First get a general idea of how your product works in conjunction with the entire system.
- ▶ Try to find out whether or not the product was working properly in conjunction with the entire system before the fault occurred.
- ▶ Try to determine any changes to the entire system in which the product is installed:
 - Have there been any changes to the application conditions or operating range of the product?
 - Has maintenance work recently been carried out? Is there an inspection or maintenance log?
 - Have any changes (e.g. upgrades) or repairs been made to the overall system (machine/system, electrics, control) or to the product? If yes: What changes?
 - Has the hydraulic fluid been changed?
 - Has the product or machine been used as intended?
 - How does the malfunction appear?
- ▶ Try to get a clear idea of the cause of the fault. Directly ask the (machine) operator.
- ▶ Document the work carried out.
- ▶ If the fault cannot be corrected, please refer to one of the contract addresses at:
<https://addresses.boschrexroth.com>.

14.2 Malfunction table

Tabelle 31: Axial piston unit malfunction table

Malfunction	Possible cause	Remedy
Unusual noises	Insufficient air bleeding of the hydraulic system	Fill the axial piston unit, suction line for the hydraulic pump and the reservoir
		Completely air bleed the axial piston unit and hydraulic system
		Check correct installation position
	Insufficient suction conditions, e.g., insufficient dimensioning of the suction line, viscosity of the hydraulic fluid too high, suction height too high, suction pressure too low, foreign particles in the suction line, impermissible filter in the suction line	Machine/system manufacturer: Check the system, e.g. optimize inlet conditions, use suitable hydraulic fluid
		Fill the suction line with hydraulic fluid
		Remove foreign particles from the suction line
	Drive speed too high	Machine/system manufacturer: Reduce drive speed
	Wrong direction of rotation	Machine/system manufacturer: Check correct direction of rotation, see chapter 7.5.1 "Preparation" on page 41
	Improper mounting of the axial piston unit	Check the mounting of the axial piston unit according to the specifications of the machine/system manufacturer – observe tightening torques
	Improper mounting of assembled parts, hydraulic lines or improper installation of the coupling	Fasten assembled parts according to the parameters provided by the coupling fitting manufacturer
Increased, unusual vibration	Resonances due to a defective or unsuitable elastic coupling	Check the specification of the elastic coupling and/or replace defective or worn coupling
	Valve and controller vibrate	Optimize the adjustment of the controller of the axial piston unit and the pressure limitation in the hydraulic system
	Mechanical damage to the axial piston unit (e.g. bearing damage)	Replace axial piston unit
		Contact Bosch Rexroth Service
Increased, unusual vibration	Bearings worn	Contact Bosch Rexroth Service

Tabelle 31: Axial piston unit malfunction table

Malfunction	Possible cause	Remedy
No or insufficient flow	Insufficient air bleeding of the hydraulic system	Fill the axial piston unit, suction line for the hydraulic pump and the reservoir Completely air bleed the axial piston unit and hydraulic system
	Faulty mechanical drive (e.g. defective coupling)	Contact machine/system manufacturer
	Drive speed too low	Contact machine/system manufacturer
	Open circuit: Insufficient suction conditions, e.g., insufficient dimensioning of the suction line, viscosity of the hydraulic fluid too high, suction height too high, suction pressure too low, foreign particles in the suction line, impermissible filter in the suction line	Machine/system manufacturer: Check the system, e.g. optimize inlet conditions, use suitable hydraulic fluid
		Fill the suction line with hydraulic fluid
		Remove foreign particles from the suction line
	Closed circuit: Insufficient suction conditions, e.g., insufficient dimensioning of the suction line, viscosity of the hydraulic fluid too high, suction height too high, suction pressure too low, foreign particles in the suction line, suction filter too small or blocked, etc.	Machine/system manufacturer: Check the system, e.g. optimize inlet conditions, use suitable hydraulic fluid
		Fill the suction line with hydraulic fluid
		Remove foreign particles from the suction line
	Hydraulic fluid not in optimal viscosity range	Check the filter system and change the filter as necessary
	Insufficient boost pressure	Machine/system manufacturer: Check temperature range and use suitable hydraulic fluid
	Insufficient pilot pressure or control pressure	Check boost pressure
		Contact Bosch Rexroth Service
	Insufficient pilot pressure or control pressure	Check pilot pressure or control pressure
		Contact Bosch Rexroth Service
	Malfunction of the control device or controller of the axial piston unit	Contact Bosch Rexroth Service
	Control of the control device defective	Check control (contact machine/system manufacturer or Bosch Rexroth Service)
	Wear or mechanical damage to the axial piston unit	Replace axial piston unit
		Contact Bosch Rexroth Service

Tabelle 31: Axial piston unit malfunction table

Malfunction	Possible cause	Remedy
No or insufficient pressure	Insufficient air bleeding of the hydraulic system	Fill the axial piston unit, suction line for the hydraulic pump and the reservoir
		Completely air bleed the axial piston unit and hydraulic system
		Check correct installation position
	Faulty mechanical drive (e.g. defective coupling)	Contact machine/system manufacturer
	Drive power too low	Contact machine/system manufacturer
	Insufficient suction conditions, e.g., insufficient dimensioning of the suction line, viscosity of the hydraulic fluid too high, suction height too high, suction pressure too low, foreign particles in the suction line, impermissible filter in the suction line	Machine/system manufacturer: Check the system, e.g. optimize inlet conditions, use suitable hydraulic fluid
		Fill the suction line with hydraulic fluid
		Remove foreign particles from the suction line
	Insufficient suction conditions, e.g., insufficient dimensioning of the suction line, viscosity of the hydraulic fluid too high, suction height too high, suction pressure too low, foreign particles in the suction line, suction filter too small or blocked, etc.	Machine/system manufacturer: Check the system, e.g. optimize inlet conditions, use suitable hydraulic fluid
		Fill the suction line with hydraulic fluid
		Remove foreign particles from the suction line
	Check the filter system and change the filter as necessary	
	Hydraulic fluid not in optimal viscosity range	Machine/system manufacturer: Check temperature range and use suitable hydraulic fluid
	Insufficient boost pressure	Check boost pressure
		Contact Bosch Rexroth Service
	Insufficient pilot pressure or control pressure	Check pilot pressure or control pressure
		Contact Bosch Rexroth Service
	Malfunction of the control device or controller of the axial piston unit	Contact Bosch Rexroth Service
	Control of the control device defective	Check control (contact machine/system manufacturer or Bosch Rexroth Service)
	Wear or mechanical damage to the axial piston unit	Replace axial piston unit
		Contact Bosch Rexroth Service
	Output unit defective (e.g. hydraulic motor or cylinder)	Contact machine/system manufacturer

Tabelle 31: Axial piston unit malfunction table



Malfunction	Possible cause	Remedy
Pressure/flow fluctuations/instabilities	Insufficient air bleeding of the hydraulic system	Fill the axial piston unit, suction line for the hydraulic pump and the reservoir
		Completely air bleed the axial piston unit and hydraulic system
		Check correct installation position
	Insufficient suction conditions, e.g., insufficient dimensioning of the suction line, viscosity of the hydraulic fluid too high, suction height too high, suction pressure too low, foreign particles in the suction line, impermissible filter in the suction line	Machine/system manufacturer: Check the system, e.g. optimize inlet conditions, use suitable hydraulic fluid
		Fill the suction line with hydraulic fluid
		Remove foreign particles from the suction line
	Insufficient suction conditions, e.g., insufficient dimensioning of the suction line, viscosity of the hydraulic fluid too high, suction height too high, suction pressure too low, foreign particles in the suction line, suction filter too small or blocked, etc.	Machine/system manufacturer: Check the system, e.g. optimize inlet conditions, use suitable hydraulic fluid
		Fill the suction line with hydraulic fluid
		Remove foreign particles from the suction line
		Check the filter system and change the filter as necessary
	Valve and controller vibrate	Optimize the adjustment of the controller of the axial piston unit and the pressure limitation in the hydraulic system
	Unstable control signal	Contact machine/system manufacturer or Bosch Rexroth Service
	Malfunction in the control devices or the controller	Contact Bosch Rexroth Service
Excessively high temperature of hydraulic fluid and housing	Excessively high inlet temperature at the axial piston unit	Machine/system manufacturer: Inspect system, e.g. malfunction in the cooler, insufficient hydraulic fluid in the reservoir
	Wrong setting and/or malfunction of the pressure limitation and pressure control valves (e.g. high-pressure relief valve, pressure cut-off, pressure controller, pressure reducing valve)	Optimize the adjustment of the pressure limitation and pressure control valves of the axial piston unit and the pressure safeguarding in the hydraulic system
		Contact Bosch Rexroth Service
		Contact machine/system manufacturer
	Axial piston unit worn	Replace axial piston unit; contact Bosch Rexroth Service

15 Technical data

The permissible technical data for your axial piston unit can be found on the data sheet 91485.

Data sheet 91485 can be found in the Bosch Rexroth media directory at www.boschrexroth.com/mediadirectory

Additional information can be found in the online product catalog at

	A10FZO	www.boschrexroth.com/p-A10FZO-1x	
	A10VZO	www.boschrexroth.com/p-A10VZO-1x	
	A10FZG	www.boschrexroth.com/p-A10FZG-1x	
	A10VZG	www.boschrexroth.com/p-A10VZG-1x	



Order-related technical data for your axial piston unit can be found in the order confirmation.

16 Alphabetical index

A

Abbreviations..... 7
Above-reservoir installation.... 36, 40

B

Below-reservoir installation.... 33, 38

C

Care 58
Circuit
 Closed 20
 Open..... 20
Cleaning 58
Commissioning..... 54
 Initial 54
Connection
 Electric 52
 hydraulic 45
Control..... 23
Control valve 21
Conversion 63
Corrosion protection 29
Corrosion protection film 29
Cradle 21, 22
Cylinder..... 21, 22

D

Designations..... 7
Dimensions..... 26, 42
Direction of rotation 42
Disposal 62
Distributor plate 21, 22
Drive shaft..... 21, 22

E

Eye bolt 27

F

Filling 54
Flushing cycle..... 53
Functional description
 Control..... 23
Functional test 56

H

High-pressure side..... 21

I

Identification 24
Inside-reservoir installation..... 34
Inspection 58
Installation 31, 41
 Completion 44
 General instructions 42
 Preparation 41
 With coupling..... 42
Installation conditions..... 31
Installation position
 Above-reservoir installation.. 36, 40
 Below-reservoir installation . 33, 38
 Inside-reservoir installation 34
Intended use 8

L

Layout 21
Lifting devices 26
Lifting strap..... 28

M

Maintenance..... 58, 59
Malfunction table 65

N

Name plate 24
Notes
 General..... 42

O

Operation 58
Opposed piston..... 21

P

Performance description 20
Piston 21, 22
Port overview 48, 49
Port plate 21, 22
Pre-compression volume 21

Pressure side.....	21, 22	U	
Product description.....	20	Unpacking.....	31
Property damage	15	W	
Q		Warranty.....	17, 63
Qualification	9	Weight	26
R			
Recommissioning			
After standstill	57		
Removal.....	61		
Performing.....	61		
Preparing	61		
Repair.....	59		
Replacement	61		
Required documentation	5		
Retaining plate	21, 22		
Running-in phase.....	57		
S			
Safety instructions	8		
General	10		
Product-specific	11		
Signal word	6		
Scope of delivery.....	18		
Slipper pad	21, 22		
Solenoid position			
Changing.....	53		
Spare parts	60		
Spring.....	21		
Storage.....	26, 28		
Storage time.....	29		
Stroking piston	21, 22		
Suction side	21, 22		
Symbols	6		
T			
Technical data	69		
Tightening torques.....	50		
Tools	61		
Transport.....	26		
By hand.....	27		
with eye bolt	27		
with lifting strap	28		
Transporting	26		
Transport protection.....	44, 45		
Troubleshooting.....	64		

Bosch Rexroth AG

An den Kelterwiesen 14
72160 Horb a.N.
Germany
Tel. +49 7451 92-0
info.ma@boschrexroth.de
www.boschrexroth.com

Your local contact person can be found at:

www.boschrexroth.com/addresses