

VT-HACD-3-2X – Digital Controller for Electromechanical and Electrohydraulic Drives

RE 30543-05-Z/04.12
Replaces: 12.10

Start-up PROFINET RT Interface



The data specified above only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.

© This document, as well as the data, specifications and other information set forth in it, are the exclusive property of Bosch Rexroth. It may not be reproduced or given to third parties without its consent.

An example configuration is shown on the title page. The delivered product may, therefore, differ from the product which is pictured.

The original operating instructions were created in the German language.

Contents

1	Introduction	80
1.1	Document	80
1.2	General	80
	Additional documentation	80
1.3	Signs and symbols used in this document.....	81
2	Requirements.....	82
2.1	Mapping	82
3	PROFINET.....	83
3.1	Principle	83
3.2	Reference values.....	83
3.3	IP address and device name	83
3.4	Bus fault.....	86
3.5	Transferring data	87
3.6	Network considerations	87
4	Definition of cyclic data	88
4.1	Example of a PROFINET fieldbus communication	88
4.2	Definition of data from the VT-HACD-3-2x	89
4.3	Definition of data to the VT-HACD-3-2x.....	90
4.1	Definition of data on the PLC side (Example IndraMotion MLC)	91
4.2	Definition of data on the PLC side (example Siemens S7)	94

4.3	Data conversion.....	96
5	Bus parameters.....	97
5.1	Accel. Rate Loop 1 Block 1.....	97
5.2	Accel. Rate Loop 1 Block 2.....	97
5.3	Accel. Rate Loop 1 Block 3.....	97
5.4	Accel. Rate Loop 1 Block 4.....	98
5.5	Accel. Rate Loop 1 Block 5.....	98
5.6	Accel. Rate Loop 1 Block 6.....	98
5.7	Accel. Rate Loop 1 Block 7.....	99
5.8	Accel. Rate Loop 1 Block 8.....	99
5.9	Accel. Rate Loop 1 Block 9.....	99
5.10	Accel. Rate Loop 1 Block 10.....	100
5.11	Accel. Rate Loop 1 Block 11.....	100
5.12	Accel. Rate Loop 1 Block 12.....	100
5.13	Accel. Rate Loop 1 Block 13.....	101
5.14	Accel. Rate Loop 1 Block 14.....	101
5.15	Accel. Rate Loop 1 Block 15.....	101
5.16	Accel. Rate Loop 1 Block 16.....	102
5.17	Accel. Rate Loop 1 Block 17.....	102
5.18	Accel. Rate Loop 1 Block 18.....	102
5.19	Accel. Rate Loop 1 Block 19.....	103
5.20	Accel. Rate Loop 1 Block 20.....	103
5.21	Accel. Rate Loop 1 Block 21.....	103

5.22	Accel. Rate Loop 1 Block 22.....	104
5.23	Accel. Rate Loop 1 Block 23.....	104
5.24	Accel. Rate Loop 1 Block 24.....	104
5.25	Accel. Rate Loop 1 Block 25.....	105
5.26	Accel. Rate Loop 1 Block 26.....	105
5.27	Accel. Rate Loop 1 Block 27.....	105
5.28	Accel. Rate Loop 1 Block 28.....	106
5.29	Accel. Rate Loop 1 Block 29.....	106
5.30	Accel. Rate Loop 1 Block 30.....	106
5.31	Accel. Rate Loop 1 Block 31.....	107
5.32	Accel. Rate Loop 1 Block 32.....	107
5.33	Accel. Rate Loop 2 Block 1.....	107
5.34	Accel. Rate Loop 2 Block 2.....	108
5.35	Accel. Rate Loop 2 Block 3.....	108
5.36	Accel. Rate Loop 2 Block 4.....	108
5.37	Accel. Rate Loop 2 Block 5.....	109
5.38	Accel. Rate Loop 2 Block 6.....	109
5.39	Accel. Rate Loop 2 Block 7.....	109
5.40	Accel. Rate Loop 2 Block 8.....	110
5.41	Accel. Rate Loop 2 Block 9.....	110
5.42	Accel. Rate Loop 2 Block 10.....	110
5.43	Accel. Rate Loop 2 Block 11.....	111
5.44	Accel. Rate Loop 2 Block 12.....	111
5.45	Accel. Rate Loop 2 Block 13.....	111

5.46	Accel. Rate Loop 2 Block 14.....	112
5.47	Accel. Rate Loop 2 Block 15.....	112
5.48	Accel. Rate Loop 2 Block 16.....	112
5.49	Accel. Rate Loop 2 Block 17.....	113
5.50	Accel. Rate Loop 2 Block 18.....	113
5.51	Accel. Rate Loop 2 Block 19.....	113
5.52	Accel. Rate Loop 2 Block 20.....	114
5.53	Accel. Rate Loop 2 Block 21.....	114
5.54	Accel. Rate Loop 2 Block 22.....	114
5.55	Accel. Rate Loop 2 Block 23.....	115
5.56	Accel. Rate Loop 2 Block 24.....	115
5.57	Accel. Rate Loop 2 Block 25.....	115
5.58	Accel. Rate Loop 2 Block 26.....	116
5.59	Accel. Rate Loop 2 Block 27.....	116
5.60	Accel. Rate Loop 2 Block 28.....	116
5.61	Accel. Rate Loop 2 Block 29.....	117
5.62	Accel. Rate Loop 2 Block 30.....	117
5.63	Accel. Rate Loop 2 Block 31.....	117
5.64	Accel. Rate Loop 2 Block 32.....	118
5.65	Accel. Rate Loop 3 Block 1.....	118
5.66	Accel. Rate Loop 3 Block 2.....	118
5.67	Accel. Rate Loop 3 Block 3.....	119
5.68	Accel. Rate Loop 3 Block 4.....	119
5.69	Accel. Rate Loop 3 Block 5.....	119

5.70	Accel. Rate Loop 3 Block 6.....	120
5.71	Accel. Rate Loop 3 Block 7.....	120
5.72	Accel. Rate Loop 3 Block 8.....	120
5.73	Accel. Rate Loop 3 Block 9.....	121
5.74	Accel. Rate Loop 3 Block 10.....	121
5.75	Accel. Rate Loop 3 Block 11.....	121
5.76	Accel. Rate Loop 3 Block 12.....	122
5.77	Accel. Rate Loop 3 Block 13.....	122
5.78	Accel. Rate Loop 3 Block 14.....	122
5.79	Accel. Rate Loop 3 Block 15.....	123
5.80	Accel. Rate Loop 3 Block 16.....	123
5.81	Accel. Rate Loop 3 Block 17.....	123
5.82	Accel. Rate Loop 3 Block 18.....	124
5.83	Accel. Rate Loop 3 Block 19.....	124
5.84	Accel. Rate Loop 3 Block 20.....	124
5.85	Accel. Rate Loop 3 Block 21.....	125
5.86	Accel. Rate Loop 3 Block 22.....	125
5.87	Accel. Rate Loop 3 Block 23.....	125
5.88	Accel. Rate Loop 3 Block 24.....	126
5.89	Accel. Rate Loop 3 Block 25.....	126
5.90	Accel. Rate Loop 3 Block 26.....	126
5.91	Accel. Rate Loop 3 Block 27.....	127
5.92	Accel. Rate Loop 3 Block 28.....	127
5.93	Accel. Rate Loop 3 Block 29.....	127

5.94 Accel. Rate Loop 3 Block 30.....	128
5.95 Accel. Rate Loop 3 Block 31.....	128
5.96 Accel. Rate Loop 3 Block 32.....	128
5.97 Accuracy window Valve 1	129
5.98 Accuracy window Valve 2	129
5.99 Accuracy window Valve 3	129
5.100Active Block	130
5.101AI1 max.....	130
5.102AI1 max fault.....	130
5.103AI1 max Units	131
5.104AI1 min.....	131
5.105AI1 min fault.....	131
5.106AI1 Range.....	132
5.107AI1 Type	132
5.108AI2 max.....	132
5.109AI2 max fault.....	133
5.110AI2 max Units	133
5.111AI2 min.....	133
5.112AI2 min fault.....	134
5.113AI2 Range.....	134
5.114AI2 Type	134
5.115AI3 max.....	135
5.116AI3 max fault.....	135
5.117AI3 max Units	135

5.118AI3 min.....	136
5.119AI3 min fault.....	136
5.120AI3 Range.....	136
5.121AI3 Type	137
5.122AI4 max.....	137
5.123AI4 max fault.....	137
5.124AI4 max Units	138
5.125AI4 min.....	138
5.126AI4 min fault.....	138
5.127AI4 Range.....	139
5.128AI4 Type	139
5.129AI5 max.....	139
5.130AI5 max fault.....	140
5.131AI5 max Units	140
5.132AI5 min.....	140
5.133AI5 min fault.....	141
5.134AI5 Range.....	141
5.135AI5 Type	141
5.136AI6 max.....	142
5.137AI6 max fault.....	142
5.138AI6 max Units	142
5.139AI6 min.....	143
5.140AI6 min fault.....	143
5.141AI6 Range.....	143

5.142 AI6 Type	144
5.143 Block Status	144
5.144 Blocktime Block 1	145
5.145 Blocktime Block 2	145
5.146 Blocktime Block 3	145
5.147 Blocktime Block 4	146
5.148 Blocktime Block 5	146
5.149 Blocktime Block 6	146
5.150 Blocktime Block 7	147
5.151 Blocktime Block 8	147
5.152 Blocktime Block 9	147
5.153 Blocktime Block 10	148
5.154 Blocktime Block 11	148
5.155 Blocktime Block 12	148
5.156 Blocktime Block 13	149
5.157 Blocktime Block 14	149
5.158 Blocktime Block 15	149
5.159 Blocktime Block 16	150
5.160 Blocktime Block 17	150
5.161 Blocktime Block 18	150
5.162 Blocktime Block 19	151
5.163 Blocktime Block 20	151
5.164 Blocktime Block 21	151
5.165 Blocktime Block 22	152

5.166 Blocktime Block 23	152
5.167 Blocktime Block 24	152
5.168 Blocktime Block 25	153
5.169 Blocktime Block 26	153
5.170 Blocktime Block 27	153
5.171 Blocktime Block 28	154
5.172 Blocktime Block 29	154
5.173 Blocktime Block 30	154
5.174 Blocktime Block 31	155
5.175 Blocktime Block 32	155
5.176 Bus Trigger	156
5.177 C1	157
5.178 C1-1	157
5.179 C1-2	157
5.180 C2	158
5.181 C2-1	158
5.182 C2-2	158
5.183 C3	159
5.184 C3-1	159
5.185 C3-2	159
5.186 CMD1	160
5.187 CMD2	160
5.188 CMD3	160
5.189 Command Loop 1 Block 1	161

5.190 Command Loop 1 Block 2	161
5.191 Command Loop 1 Block 3	161
5.192 Command Loop 1 Block 4	162
5.193 Command Loop 1 Block 5	162
5.194 Command Loop 1 Block 6	162
5.195 Command Loop 1 Block 7	163
5.196 Command Loop 1 Block 8	163
5.197 Command Loop 1 Block 9	163
5.198 Command Loop 1 Block 10	164
5.199 Command Loop 1 Block 11	164
5.200 Command Loop 1 Block 12	164
5.201 Command Loop 1 Block 13	165
5.202 Command Loop 1 Block 14	165
5.203 Command Loop 1 Block 15	165
5.204 Command Loop 1 Block 16	166
5.205 Command Loop 1 Block 17	166
5.206 Command Loop 1 Block 18	166
5.207 Command Loop 1 Block 19	167
5.208 Command Loop 1 Block 20	167
5.209 Command Loop 1 Block 21	167
5.210 Command Loop 1 Block 22	168
5.211 Command Loop 1 Block 23	168
5.212 Command Loop 1 Block 24	168
5.213 Command Loop 1 Block 25	169

5.214 Command Loop 1 Block 26	169
5.215 Command Loop 1 Block 27	169
5.216 Command Loop 1 Block 28	170
5.217 Command Loop 1 Block 29	170
5.218 Command Loop 1 Block 30	170
5.219 Command Loop 1 Block 31	171
5.220 Command Loop 1 Block 32	171
5.221 Command Loop 2 Block 1	171
5.222 Command Loop 2 Block 2	172
5.223 Command Loop 2 Block 3	172
5.224 Command Loop 2 Block 4	172
5.225 Command Loop 2 Block 5	173
5.226 Command Loop 2 Block 6	173
5.227 Command Loop 2 Block 7	173
5.228 Command Loop 2 Block 8	174
5.229 Command Loop 2 Block 9	174
5.230 Command Loop 2 Block 10	174
5.231 Command Loop 2 Block 11	175
5.232 Command Loop 2 Block 12	175
5.233 Command Loop 2 Block 13	175
5.234 Command Loop 2 Block 14	176
5.235 Command Loop 2 Block 15	176
5.236 Command Loop 2 Block 16	176
5.237 Command Loop 2 Block 17	177

5.238 Command Loop 2 Block 18	177
5.239 Command Loop 2 Block 19	177
5.240 Command Loop 2 Block 20	178
5.241 Command Loop 2 Block 21	178
5.242 Command Loop 2 Block 22	178
5.243 Command Loop 2 Block 23	179
5.244 Command Loop 2 Block 24	179
5.245 Command Loop 2 Block 25	179
5.246 Command Loop 2 Block 26	180
5.247 Command Loop 2 Block 27	180
5.248 Command Loop 2 Block 28	180
5.249 Command Loop 2 Block 29	181
5.250 Command Loop 2 Block 30	181
5.251 Command Loop 2 Block 31	181
5.252 Command Loop 2 Block 32	182
5.253 Command Loop 3 Block 1	182
5.254 Command Loop 3 Block 2	182
5.255 Command Loop 3 Block 3	183
5.256 Command Loop 3 Block 4	183
5.257 Command Loop 3 Block 5	183
5.258 Command Loop 3 Block 6	184
5.259 Command Loop 3 Block 7	184
5.260 Command Loop 3 Block 8	184
5.261 Command Loop 3 Block 9	185

5.262 Command Loop 3 Block 10	185
5.263 Command Loop 3 Block 11	185
5.264 Command Loop 3 Block 12	186
5.265 Command Loop 3 Block 13	186
5.266 Command Loop 3 Block 14	186
5.267 Command Loop 3 Block 15	187
5.268 Command Loop 3 Block 16	187
5.269 Command Loop 3 Block 17	187
5.270 Command Loop 3 Block 18	188
5.271 Command Loop 3 Block 19	188
5.272 Command Loop 3 Block 20	188
5.273 Command Loop 3 Block 21	189
5.274 Command Loop 3 Block 22	189
5.275 Command Loop 3 Block 23	189
5.276 Command Loop 3 Block 24	190
5.277 Command Loop 3 Block 25	190
5.278 Command Loop 3 Block 26	190
5.279 Command Loop 3 Block 27	191
5.280 Command Loop 3 Block 28	191
5.281 Command Loop 3 Block 29	191
5.282 Command Loop 3 Block 30	192
5.283 Command Loop 3 Block 31	192
5.284 Command Loop 3 Block 32	192
5.285 CON 1	193

5.286 CON 2	193
5.287 CON 3	193
5.288 CON 4	194
5.289 CON 5	194
5.290 CON 6	194
5.291 CON 7	195
5.292 CON 8	195
5.293 CON 9	195
5.294 CON 10	196
5.295 CON 11	196
5.296 CON 12	196
5.297 CON 13	197
5.298 CON 14	197
5.299 CON 15	197
5.300 CON 16	198
5.301 Damping D Loop 1	198
5.302 Damping D Loop 2	198
5.303 Damping D Loop 3	199
5.304 Damping Gain Loop 1	199
5.305 Damping Gain Loop 2	199
5.306 Damping Gain Loop 3	200
5.307 Deadband Valve 1	200
5.308 Deadband Valve 2	200
5.309 Deadband Valve 3	201

5.310Decel Rate Loop 1 Block 1	201
5.311Decel Rate Loop 1 Block 2	201
5.312Decel Rate Loop 1 Block 3	202
5.313Decel Rate Loop 1 Block 4	202
5.314Decel Rate Loop 1 Block 5	202
5.315Decel Rate Loop 1 Block 6	203
5.316Decel Rate Loop 1 Block 7	203
5.317Decel Rate Loop 1 Block 8	203
5.318Decel Rate Loop 1 Block 9	204
5.319Decel Rate Loop 1 Block 10	204
5.320Decel Rate Loop 1 Block 11	204
5.321Decel Rate Loop 1 Block 12	205
5.322Decel Rate Loop 1 Block 13	205
5.323Decel Rate Loop 1 Block 14	205
5.324Decel Rate Loop 1 Block 15	206
5.325Decel Rate Loop 1 Block 16	206
5.326Decel Rate Loop 1 Block 17	206
5.327Decel Rate Loop 1 Block 18	207
5.328Decel Rate Loop 1 Block 19	207
5.329Decel Rate Loop 1 Block 20	207
5.330Decel Rate Loop 1 Block 21	208
5.331Decel Rate Loop 1 Block 22	208
5.332Decel Rate Loop 1 Block 23	208
5.333Decel Rate Loop 1 Block 24	209

5.334Decel Rate Loop 1 Block 25	209
5.335Decel Rate Loop 1 Block 26	209
5.336Decel Rate Loop 1 Block 27	210
5.337Decel Rate Loop 1 Block 28	210
5.338Decel Rate Loop 1 Block 29	210
5.339Decel Rate Loop 1 Block 30	211
5.340Decel Rate Loop 1 Block 31	211
5.341Decel Rate Loop 1 Block 32	211
5.342Decel Rate Loop 2 Block 1	212
5.343Decel Rate Loop 2 Block 2	212
5.344Decel Rate Loop 2 Block 3	212
5.345Decel Rate Loop 2 Block 4	213
5.346Decel Rate Loop 2 Block 5	213
5.347Decel Rate Loop 2 Block 6	213
5.348Decel Rate Loop 2 Block 7	214
5.349Decel Rate Loop 2 Block 8	214
5.350Decel Rate Loop 2 Block 9	214
5.351Decel Rate Loop 2 Block 10	215
5.352Decel Rate Loop 2 Block 11	215
5.353Decel Rate Loop 2 Block 12	215
5.354Decel Rate Loop 2 Block 13	216
5.355Decel Rate Loop 2 Block 14	216
5.356Decel Rate Loop 2 Block 15	216
5.357Decel Rate Loop 2 Block 16	217

5.358Decel Rate Loop 2 Block 17	217
5.359Decel Rate Loop 2 Block 18	217
5.360Decel Rate Loop 2 Block 19	218
5.361Decel Rate Loop 2 Block 20	218
5.362Decel Rate Loop 2 Block 21	218
5.363Decel Rate Loop 2 Block 22	219
5.364Decel Rate Loop 2 Block 23	219
5.365Decel Rate Loop 2 Block 24	219
5.366Decel Rate Loop 2 Block 25	220
5.367Decel Rate Loop 2 Block 26	220
5.368Decel Rate Loop 2 Block 27	220
5.369Decel Rate Loop 2 Block 28	221
5.370Decel Rate Loop 2 Block 29	221
5.371Decel Rate Loop 2 Block 30	221
5.372Decel Rate Loop 2 Block 31	222
5.373Decel Rate Loop 2 Block 32	222
5.374Decel Rate Loop 3 Block 1	222
5.375Decel Rate Loop 3 Block 2	223
5.376Decel Rate Loop 3 Block 3	223
5.377Decel Rate Loop 3 Block 4	223
5.378Decel Rate Loop 3 Block 5	224
5.379Decel Rate Loop 3 Block 6	224
5.380Decel Rate Loop 3 Block 7	224
5.381Decel Rate Loop 3 Block 8	225

5.382Decel Rate Loop 3 Block 9	225
5.383Decel Rate Loop 3 Block 10	225
5.384Decel Rate Loop 3 Block 11	226
5.385Decel Rate Loop 3 Block 12	226
5.386Decel Rate Loop 3 Block 13	226
5.387Decel Rate Loop 3 Block 14	227
5.388Decel Rate Loop 3 Block 15	227
5.389Decel Rate Loop 3 Block 16	227
5.390Decel Rate Loop 3 Block 17	228
5.391Decel Rate Loop 3 Block 18	228
5.392Decel Rate Loop 3 Block 19	228
5.393Decel Rate Loop 3 Block 20	229
5.394Decel Rate Loop 3 Block 21	229
5.395Decel Rate Loop 3 Block 22	229
5.396Decel Rate Loop 3 Block 23	230
5.397Decel Rate Loop 3 Block 24	230
5.398Decel Rate Loop 3 Block 25	230
5.399Decel Rate Loop 3 Block 26	231
5.400Decel Rate Loop 3 Block 27	231
5.401Decel Rate Loop 3 Block 28	231
5.402Decel Rate Loop 3 Block 29	232
5.403Decel Rate Loop 3 Block 30	232
5.404Decel Rate Loop 3 Block 31	232
5.405Decel Rate Loop 3 Block 32	233

5.406 Discrete Inputs.....	233
5.407 Discrete Outputs	234
5.408 DO1 Debounce	234
5.409 DO1 Window.....	235
5.410 DO2 Debounce	235
5.411 DO2 Window.....	235
5.412 DO3 Debounce	236
5.413 DO3 Window.....	236
5.414 DO4 Debounce	236
5.415 DO4 Window.....	237
5.416 DO5 Debounce	237
5.417 DO5 Window.....	237
5.418 DO6 Debounce	238
5.419 DO6 Window.....	238
5.420 DO7 Debounce	238
5.421 DO7 Window.....	239
5.422 DT1 Loop 1 Block 1	239
5.423 DT1 Loop 1 Block 2	239
5.424 DT1 Loop 1 Block 3	240
5.425 DT1 Loop 1 Block 4	240
5.426 DT1 Loop 1 Block 5	240
5.427 DT1 Loop 1 Block 6	241
5.428 DT1 Loop 1 Block 7	241
5.429 DT1 Loop 1 Block 8	241

5.430DT1 Loop 1 Block 9	242
5.431DT1 Loop 1 Block 10	242
5.432DT1 Loop 1 Block 11	242
5.433DT1 Loop 1 Block 12	243
5.434DT1 Loop 1 Block 13	243
5.435DT1 Loop 1 Block 14	243
5.436DT1 Loop 1 Block 15	244
5.437DT1 Loop 1 Block 16	244
5.438DT1 Loop 1 Block 17	244
5.439DT1 Loop 1 Block 18	245
5.440DT1 Loop 1 Block 19	245
5.441DT1 Loop 1 Block 20	245
5.442DT1 Loop 1 Block 21	246
5.443DT1 Loop 1 Block 22	246
5.444DT1 Loop 1 Block 23	246
5.445DT1 Loop 1 Block 24	247
5.446DT1 Loop 1 Block 25	247
5.447DT1 Loop 1 Block 26	247
5.448DT1 Loop 1 Block 27	248
5.449DT1 Loop 1 Block 28	248
5.450DT1 Loop 1 Block 29	248
5.451DT1 Loop 1 Block 30	249
5.452DT1 Loop 1 Block 31	249
5.453DT1 Loop 1 Block 32	249

5.454DT1 Loop 2 Block 1	250
5.455DT1 Loop 2 Block 2	250
5.456DT1 Loop 2 Block 3	250
5.457DT1 Loop 2 Block 4	251
5.458DT1 Loop 2 Block 5	251
5.459DT1 Loop 2 Block 6	251
5.460DT1 Loop 2 Block 7	252
5.461DT1 Loop 2 Block 8	252
5.462DT1 Loop 2 Block 9	252
5.463DT1 Loop 2 Block 10	253
5.464DT1 Loop 2 Block 11	253
5.465DT1 Loop 2 Block 12	253
5.466DT1 Loop 2 Block 13	254
5.467DT1 Loop 2 Block 14	254
5.468DT1 Loop 2 Block 15	254
5.469DT1 Loop 2 Block 16	255
5.470DT1 Loop 2 Block 17	255
5.471DT1 Loop 2 Block 18	255
5.472DT1 Loop 2 Block 19	256
5.473DT1 Loop 2 Block 20	256
5.474DT1 Loop 2 Block 21	256
5.475DT1 Loop 2 Block 22	257
5.476DT1 Loop 2 Block 23	257
5.477DT1 Loop 2 Block 24	257

5.478DT1 Loop 2 Block 25	258
5.479DT1 Loop 2 Block 26	258
5.480DT1 Loop 2 Block 27	258
5.481DT1 Loop 2 Block 28	259
5.482DT1 Loop 2 Block 29	259
5.483DT1 Loop 2 Block 30	259
5.484DT1 Loop 2 Block 31	260
5.485DT1 Loop 2 Block 32	260
5.486DT1 Loop 3 Block 1	260
5.487DT1 Loop 3 Block 2	261
5.488DT1 Loop 3 Block 3	261
5.489DT1 Loop 3 Block 4	261
5.490DT1 Loop 3 Block 5	262
5.491DT1 Loop 3 Block 6	262
5.492DT1 Loop 3 Block 7	262
5.493DT1 Loop 3 Block 8	263
5.494DT1 Loop 3 Block 9	263
5.495DT1 Loop 3 Block 10	263
5.496DT1 Loop 3 Block 11	264
5.497DT1 Loop 3 Block 12	264
5.498DT1 Loop 3 Block 13	264
5.499DT1 Loop 3 Block 14	265
5.500DT1 Loop 3 Block 15	265
5.501DT1 Loop 3 Block 16	265

5.502DT1 Loop 3 Block 17	266
5.503DT1 Loop 3 Block 18	266
5.504DT1 Loop 3 Block 19	266
5.505DT1 Loop 3 Block 20	267
5.506DT1 Loop 3 Block 21	267
5.507DT1 Loop 3 Block 22	267
5.508DT1 Loop 3 Block 23	268
5.509DT1 Loop 3 Block 24	268
5.510DT1 Loop 3 Block 25	268
5.511DT1 Loop 3 Block 26	269
5.512DT1 Loop 3 Block 27	269
5.513DT1 Loop 3 Block 28	269
5.514DT1 Loop 3 Block 29	270
5.515DT1 Loop 3 Block 30	270
5.516DT1 Loop 3 Block 31	270
5.517DT1 Loop 3 Block 32	271
5.518DT1(LFB1) Loop 1 Block 1	271
5.519DT1(LFB1) Loop 1 Block 2	271
5.520DT1(LFB1) Loop 1 Block 3	272
5.521DT1(LFB1) Loop 1 Block 4	272
5.522DT1(LFB1) Loop 1 Block 5	272
5.523DT1(LFB1) Loop 1 Block 6	273
5.524DT1(LFB1) Loop 1 Block 7	273
5.525DT1(LFB1) Loop 1 Block 8	273

5.526DT1(LFB1) Loop 1 Block 9	274
5.527DT1(LFB1) Loop 1 Block 10	274
5.528DT1(LFB1) Loop 1 Block 11	274
5.529DT1(LFB1) Loop 1 Block 12	275
5.530DT1(LFB1) Loop 1 Block 13	275
5.531DT1(LFB1) Loop 1 Block 14	275
5.532DT1(LFB1) Loop 1 Block 15	276
5.533DT1(LFB1) Loop 1 Block 16	276
5.534DT1(LFB1) Loop 1 Block 17	276
5.535DT1(LFB1) Loop 1 Block 18	277
5.536DT1(LFB1) Loop 1 Block 19	277
5.537DT1(LFB1) Loop 1 Block 20	277
5.538DT1(LFB1) Loop 1 Block 21	278
5.539DT1(LFB1) Loop 1 Block 22	278
5.540DT1(LFB1) Loop 1 Block 23	278
5.541DT1(LFB1) Loop 1 Block 24	279
5.542DT1(LFB1) Loop 1 Block 25	279
5.543DT1(LFB1) Loop 1 Block 26	279
5.544DT1(LFB1) Loop 1 Block 27	280
5.545DT1(LFB1) Loop 1 Block 28	280
5.546DT1(LFB1) Loop 1 Block 29	280
5.547DT1(LFB1) Loop 1 Block 30	281
5.548DT1(LFB1) Loop 1 Block 31	281
5.549DT1(LFB1) Loop 1 Block 32	281

5.550DT1(LFB2) Loop 2 Block 1	282
5.551DT1(LFB2) Loop 2 Block 2	282
5.552DT1(LFB2) Loop 2 Block 3	282
5.553DT1(LFB2) Loop 2 Block 4	283
5.554DT1(LFB2) Loop 2 Block 5	283
5.555DT1(LFB2) Loop 2 Block 6	283
5.556DT1(LFB2) Loop 2 Block 7	284
5.557DT1(LFB2) Loop 2 Block 8	284
5.558DT1(LFB2) Loop 2 Block 9	284
5.559DT1(LFB2) Loop 2 Block 10	285
5.560DT1(LFB2) Loop 2 Block 11	285
5.561DT1(LFB2) Loop 2 Block 12	285
5.562DT1(LFB2) Loop 2 Block 13	286
5.563DT1(LFB2) Loop 2 Block 14	286
5.564DT1(LFB2) Loop 2 Block 15	286
5.565DT1(LFB2) Loop 2 Block 16	287
5.566DT1(LFB2) Loop 2 Block 17	287
5.567DT1(LFB2) Loop 2 Block 18	287
5.568DT1(LFB2) Loop 2 Block 19	288
5.569DT1(LFB2) Loop 2 Block 20	288
5.570DT1(LFB2) Loop 2 Block 21	288
5.571DT1(LFB2) Loop 2 Block 22	289
5.572DT1(LFB2) Loop 2 Block 23	289
5.573DT1(LFB2) Loop 2 Block 24	289

5.574DT1(LFB2) Loop 2 Block 25	290
5.575DT1(LFB2) Loop 2 Block 26	290
5.576DT1(LFB2) Loop 2 Block 27	290
5.577DT1(LFB2) Loop 2 Block 28	291
5.578DT1(LFB2) Loop 2 Block 29	291
5.579DT1(LFB2) Loop 2 Block 30	291
5.580DT1(LFB2) Loop 2 Block 31	292
5.581DT1(LFB2) Loop 2 Block 32	292
5.582DT1(LFB3) Loop 3 Block 1	292
5.583DT1(LFB3) Loop 3 Block 2	293
5.584DT1(LFB3) Loop 3 Block 3	293
5.585DT1(LFB3) Loop 3 Block 4	293
5.586DT1(LFB3) Loop 3 Block 5	294
5.587DT1(LFB3) Loop 3 Block 6	294
5.588DT1(LFB3) Loop 3 Block 7	294
5.589DT1(LFB3) Loop 3 Block 8	295
5.590DT1(LFB3) Loop 3 Block 9	295
5.591DT1(LFB3) Loop 3 Block 10	295
5.592DT1(LFB3) Loop 3 Block 11	296
5.593DT1(LFB3) Loop 3 Block 12	296
5.594DT1(LFB3) Loop 3 Block 13	296
5.595DT1(LFB3) Loop 3 Block 14	297
5.596DT1(LFB3) Loop 3 Block 15	297
5.597DT1(LFB3) Loop 3 Block 16	297

5.598DT1(LFB3) Loop 3 Block 17	298
5.599DT1(LFB3) Loop 3 Block 18	298
5.600DT1(LFB3) Loop 3 Block 19	298
5.601DT1(LFB3) Loop 3 Block 20	299
5.602DT1(LFB3) Loop 3 Block 21	299
5.603DT1(LFB3) Loop 3 Block 22	299
5.604DT1(LFB3) Loop 3 Block 23	300
5.605DT1(LFB3) Loop 3 Block 24	300
5.606DT1(LFB3) Loop 3 Block 25	300
5.607DT1(LFB3) Loop 3 Block 26	301
5.608DT1(LFB3) Loop 3 Block 27	301
5.609DT1(LFB3) Loop 3 Block 28	301
5.610DT1(LFB3) Loop 3 Block 29	302
5.611DT1(LFB3) Loop 3 Block 30	302
5.612DT1(LFB3) Loop 3 Block 31	302
5.613DT1(LFB3) Loop 3 Block 32	303
5.614Dwell Block 1	303
5.615Dwell Block 2	303
5.616Dwell Block 3	304
5.617Dwell Block 4	304
5.618Dwell Block 5	304
5.619Dwell Block 6	305
5.620Dwell Block 7	305
5.621Dwell Block 8	305

5.622 Dwell Block 9	306
5.623 Dwell Block 10	306
5.624 Dwell Block 11	306
5.625 Dwell Block 12	307
5.626 Dwell Block 13	307
5.627 Dwell Block 14	307
5.628 Dwell Block 15	308
5.629 Dwell Block 16	308
5.630 Dwell Block 17	308
5.631 Dwell Block 18	309
5.632 Dwell Block 19	309
5.633 Dwell Block 20	309
5.634 Dwell Block 21	310
5.635 Dwell Block 22	310
5.636 Dwell Block 23	310
5.637 Dwell Block 24	311
5.638 Dwell Block 25	311
5.639 Dwell Block 26	311
5.640 Dwell Block 27	312
5.641 Dwell Block 28	312
5.642 Dwell Block 29	312
5.643 Dwell Block 30	313
5.644 Dwell Block 31	313
5.645 Dwell Block 32	313

5.646FB1	314
5.647FB1-1	314
5.648FB1-2	314
5.649FB2	315
5.650FB2-1	315
5.651FB2-2	315
5.652FB3	316
5.653FB3-1	316
5.654FB3-2	316
5.655Feed Fwd Loop 1 Block 1	317
5.656Feed Fwd Loop 1 Block 2	317
5.657Feed Fwd Loop 1 Block 3	317
5.658Feed Fwd Loop 1 Block 4	318
5.659Feed Fwd Loop 1 Block 5	318
5.660Feed Fwd Loop 1 Block 6	318
5.661Feed Fwd Loop 1 Block 7	319
5.662Feed Fwd Loop 1 Block 8	319
5.663Feed Fwd Loop 1 Block 9	319
5.664Feed Fwd Loop 1 Block 10	320
5.665Feed Fwd Loop 1 Block 11	320
5.666Feed Fwd Loop 1 Block 12	320
5.667Feed Fwd Loop 1 Block 13	321
5.668Feed Fwd Loop 1 Block 14	321
5.669Feed Fwd Loop 1 Block 15	321

5.670 Feed Fwd Loop 1 Block 16	322
5.671 Feed Fwd Loop 1 Block 17	322
5.672 Feed Fwd Loop 1 Block 18	322
5.673 Feed Fwd Loop 1 Block 19	323
5.674 Feed Fwd Loop 1 Block 20	323
5.675 Feed Fwd Loop 1 Block 21	323
5.676 Feed Fwd Loop 1 Block 22	324
5.677 Feed Fwd Loop 1 Block 23	324
5.678 Feed Fwd Loop 1 Block 24	324
5.679 Feed Fwd Loop 1 Block 25	325
5.680 Feed Fwd Loop 1 Block 26	325
5.681 Feed Fwd Loop 1 Block 27	325
5.682 Feed Fwd Loop 1 Block 28	326
5.683 Feed Fwd Loop 1 Block 29	326
5.684 Feed Fwd Loop 1 Block 30	326
5.685 Feed Fwd Loop 1 Block 31	327
5.686 Feed Fwd Loop 1 Block 32	327
5.687 Feed Fwd Loop 2 Block 1	327
5.688 Feed Fwd Loop 2 Block 2	328
5.689 Feed Fwd Loop 2 Block 3	328
5.690 Feed Fwd Loop 2 Block 4	328
5.691 Feed Fwd Loop 2 Block 5	329
5.692 Feed Fwd Loop 2 Block 6	329
5.693 Feed Fwd Loop 2 Block 7	329

5.694 Feed Fwd Loop 2 Block 8	330
5.695 Feed Fwd Loop 2 Block 9	330
5.696 Feed Fwd Loop 2 Block 10	330
5.697 Feed Fwd Loop 2 Block 11	331
5.698 Feed Fwd Loop 2 Block 12	331
5.699 Feed Fwd Loop 2 Block 13	331
5.700 Feed Fwd Loop 2 Block 14	332
5.701 Feed Fwd Loop 2 Block 15	332
5.702 Feed Fwd Loop 2 Block 16	332
5.703 Feed Fwd Loop 2 Block 17	333
5.704 Feed Fwd Loop 2 Block 18	333
5.705 Feed Fwd Loop 2 Block 19	333
5.706 Feed Fwd Loop 2 Block 20	334
5.707 Feed Fwd Loop 2 Block 21	334
5.708 Feed Fwd Loop 2 Block 22	334
5.709 Feed Fwd Loop 2 Block 23	335
5.710 Feed Fwd Loop 2 Block 24	335
5.711 Feed Fwd Loop 2 Block 25	335
5.712 Feed Fwd Loop 2 Block 26	336
5.713 Feed Fwd Loop 2 Block 27	336
5.714 Feed Fwd Loop 2 Block 28	336
5.715 Feed Fwd Loop 2 Block 29	337
5.716 Feed Fwd Loop 2 Block 30	337
5.717 Feed Fwd Loop 2 Block 31	337

5.718Feed Fwd Loop 2 Block 32	338
5.719Feed Fwd Loop 3 Block 1	338
5.720Feed Fwd Loop 3 Block 2	338
5.721Feed Fwd Loop 3 Block 3	339
5.722Feed Fwd Loop 3 Block 4	339
5.723Feed Fwd Loop 3 Block 5	339
5.724Feed Fwd Loop 3 Block 6	340
5.725Feed Fwd Loop 3 Block 7	340
5.726Feed Fwd Loop 3 Block 8	340
5.727Feed Fwd Loop 3 Block 9	341
5.728Feed Fwd Loop 3 Block 10	341
5.729Feed Fwd Loop 3 Block 11	341
5.730Feed Fwd Loop 3 Block 12	342
5.731Feed Fwd Loop 3 Block 13	342
5.732Feed Fwd Loop 3 Block 14	342
5.733Feed Fwd Loop 3 Block 15	343
5.734Feed Fwd Loop 3 Block 16	343
5.735Feed Fwd Loop 3 Block 17	343
5.736Feed Fwd Loop 3 Block 18	344
5.737Feed Fwd Loop 3 Block 19	344
5.738Feed Fwd Loop 3 Block 20	344
5.739Feed Fwd Loop 3 Block 21	345
5.740Feed Fwd Loop 3 Block 22	345
5.741Feed Fwd Loop 3 Block 23	345

5.742 Feed Fwd Loop 3 Block 24	346
5.743 Feed Fwd Loop 3 Block 25	346
5.744 Feed Fwd Loop 3 Block 26	346
5.745 Feed Fwd Loop 3 Block 27	347
5.746 Feed Fwd Loop 3 Block 28	347
5.747 Feed Fwd Loop 3 Block 29	347
5.748 Feed Fwd Loop 3 Block 30	348
5.749 Feed Fwd Loop 3 Block 31	348
5.750 Feed Fwd Loop 3 Block 32	348
5.751 Flag1 Debounce	349
5.752 Flag1 Window	349
5.753 Flag2 Debounce	349
5.754 Flag2 Window	350
5.755 Flag3 Debounce	350
5.756 Flag3 Window	350
5.757 Flag4 Debounce	351
5.758 Flag4 Window	351
5.759 Flag5 Debounce	351
5.760 Flag5 Window	352
5.761 Flag6 Debounce	352
5.762 Flag6 Window	352
5.763 Flag7 Debounce	353
5.764 Flag7 Window	353
5.765 Flag8 Debounce	353

5.766 Flag8 Window	354
5.767 Flag9 Debounce	354
5.768 Flag9 Window	354
5.769 Flag10 Debounce	355
5.770 Flag10 Window	355
5.771 Flag11 Debounce	355
5.772 Flag11 Window	356
5.773 Flag12 Debounce	356
5.774 Flag12 Window	356
5.775 Flag13 Debounce	357
5.776 Flag13 Window	357
5.777 Flag14 Debounce	357
5.778 Flag14 Window	358
5.779 Flag15 Debounce	358
5.780 Flag15 Window	358
5.781 Flag16 Debounce	359
5.782 Flag16 Window	359
5.783 Gain - Valve 1	359
5.784 Gain - Valve 2	360
5.785 Gain - Valve 3	360
5.786 Gain + Valve 1	360
5.787 Gain + Valve 2	361
5.788 Gain + Valve 3	361
5.789 I Loop 1 Block 1	361

5.790I Loop 1 Block 2	362
5.791I Loop 1 Block 3	362
5.792I Loop 1 Block 4	362
5.793I Loop 1 Block 5	363
5.794I Loop 1 Block 6	363
5.795I Loop 1 Block 7	363
5.796I Loop 1 Block 8	364
5.797I Loop 1 Block 9	364
5.798I Loop 1 Block 10	364
5.799I Loop 1 Block 11	365
5.800I Loop 1 Block 12	365
5.801I Loop 1 Block 13	365
5.802I Loop 1 Block 14	366
5.803I Loop 1 Block 15	366
5.804I Loop 1 Block 16	366
5.805I Loop 1 Block 17	367
5.806I Loop 1 Block 18	367
5.807I Loop 1 Block 19	367
5.808I Loop 1 Block 20	368
5.809I Loop 1 Block 21	368
5.810I Loop 1 Block 22	368
5.811I Loop 1 Block 23	369
5.812I Loop 1 Block 24	369
5.813I Loop 1 Block 25	369

5.814I Loop 1 Block 26	370
5.815I Loop 1 Block 27	370
5.816I Loop 1 Block 28	370
5.817I Loop 1 Block 29	371
5.818I Loop 1 Block 30	371
5.819I Loop 1 Block 31	371
5.820I Loop 1 Block 32	372
5.821I Loop 2 Block 1	372
5.822I Loop 2 Block 2	372
5.823I Loop 2 Block 3	373
5.824I Loop 2 Block 4	373
5.825I Loop 2 Block 5	373
5.826I Loop 2 Block 6	374
5.827I Loop 2 Block 7	374
5.828I Loop 2 Block 8	374
5.829I Loop 2 Block 9	375
5.830I Loop 2 Block 10	375
5.831I Loop 2 Block 11	375
5.832I Loop 2 Block 12	376
5.833I Loop 2 Block 13	376
5.834I Loop 2 Block 14	376
5.835I Loop 2 Block 15	377
5.836I Loop 2 Block 16	377
5.837I Loop 2 Block 17	377

5.838I Loop 2 Block 18.....	378
5.839I Loop 2 Block 19.....	378
5.840I Loop 2 Block 20.....	378
5.841I Loop 2 Block 21.....	379
5.842I Loop 2 Block 22.....	379
5.843I Loop 2 Block 23.....	379
5.844I Loop 2 Block 24.....	380
5.845I Loop 2 Block 25.....	380
5.846I Loop 2 Block 26.....	380
5.847I Loop 2 Block 27.....	381
5.848I Loop 2 Block 28.....	381
5.849I Loop 2 Block 29.....	381
5.850I Loop 2 Block 30.....	382
5.851I Loop 2 Block 31.....	382
5.852I Loop 2 Block 32.....	382
5.853I Loop 3 Block 1.....	383
5.854I Loop 3 Block 2.....	383
5.855I Loop 3 Block 3.....	383
5.856I Loop 3 Block 4.....	384
5.857I Loop 3 Block 5.....	384
5.858I Loop 3 Block 6.....	384
5.859I Loop 3 Block 7.....	385
5.860I Loop 3 Block 8.....	385
5.861I Loop 3 Block 9.....	385

5.862I Loop 3 Block 10	386
5.863I Loop 3 Block 11	386
5.864I Loop 3 Block 12	386
5.865I Loop 3 Block 13	387
5.866I Loop 3 Block 14	387
5.867I Loop 3 Block 15	387
5.868I Loop 3 Block 16	388
5.869I Loop 3 Block 17	388
5.870I Loop 3 Block 18	388
5.871I Loop 3 Block 19	389
5.872I Loop 3 Block 20	389
5.873I Loop 3 Block 21	389
5.874I Loop 3 Block 22	390
5.875I Loop 3 Block 23	390
5.876I Loop 3 Block 24	390
5.877I Loop 3 Block 25	391
5.878I Loop 3 Block 26	391
5.879I Loop 3 Block 27	391
5.880I Loop 3 Block 28	392
5.881I Loop 3 Block 29	392
5.882I Loop 3 Block 30	392
5.883I Loop 3 Block 31	393
5.884I Loop 3 Block 32	393
5.885I on CMD-LFB < Loop 1 Block 1	393

5.886I on CMD-LFB < Loop 1 Block 2	394
5.887I on CMD-LFB < Loop 1 Block 3	394
5.888I on CMD-LFB < Loop 1 Block 4	394
5.889I on CMD-LFB < Loop 1 Block 5	395
5.890I on CMD-LFB < Loop 1 Block 6	395
5.891I on CMD-LFB < Loop 1 Block 7	395
5.892I on CMD-LFB < Loop 1 Block 8	396
5.893I on CMD-LFB < Loop 1 Block 9	396
5.894I on CMD-LFB < Loop 1 Block 10	396
5.895I on CMD-LFB < Loop 1 Block 11	397
5.896I on CMD-LFB < Loop 1 Block 12	397
5.897I on CMD-LFB < Loop 1 Block 13	397
5.898I on CMD-LFB < Loop 1 Block 14	398
5.899I on CMD-LFB < Loop 1 Block 15	398
5.900I on CMD-LFB < Loop 1 Block 16	398
5.901I on CMD-LFB < Loop 1 Block 17	399
5.902I on CMD-LFB < Loop 1 Block 18	399
5.903I on CMD-LFB < Loop 1 Block 19	399
5.904I on CMD-LFB < Loop 1 Block 20	400
5.905I on CMD-LFB < Loop 1 Block 21	400
5.906I on CMD-LFB < Loop 1 Block 22	400
5.907I on CMD-LFB < Loop 1 Block 23	401
5.908I on CMD-LFB < Loop 1 Block 24	401
5.909I on CMD-LFB < Loop 1 Block 25	401

5.910I on CMD-LFB < Loop 1 Block 26	402
5.911I on CMD-LFB < Loop 1 Block 27	402
5.912I on CMD-LFB < Loop 1 Block 28	402
5.913I on CMD-LFB < Loop 1 Block 29	403
5.914I on CMD-LFB < Loop 1 Block 30	403
5.915I on CMD-LFB < Loop 1 Block 31	403
5.916I on CMD-LFB < Loop 1 Block 32	404
5.917I on CMD-LFB < Loop 2 Block 1	404
5.918I on CMD-LFB < Loop 2 Block 2	404
5.919I on CMD-LFB < Loop 2 Block 3	405
5.920I on CMD-LFB < Loop 2 Block 4	405
5.921I on CMD-LFB < Loop 2 Block 5	405
5.922I on CMD-LFB < Loop 2 Block 6	406
5.923I on CMD-LFB < Loop 2 Block 7	406
5.924I on CMD-LFB < Loop 2 Block 8	406
5.925I on CMD-LFB < Loop 2 Block 9	407
5.926I on CMD-LFB < Loop 2 Block 10	407
5.927I on CMD-LFB < Loop 2 Block 11	407
5.928I on CMD-LFB < Loop 2 Block 12	408
5.929I on CMD-LFB < Loop 2 Block 13	408
5.930I on CMD-LFB < Loop 2 Block 14	408
5.931I on CMD-LFB < Loop 2 Block 15	409
5.932I on CMD-LFB < Loop 2 Block 16	409
5.933I on CMD-LFB < Loop 2 Block 17	409

5.934I on CMD-LFB < Loop 2 Block 18	410
5.935I on CMD-LFB < Loop 2 Block 19	410
5.936I on CMD-LFB < Loop 2 Block 20	410
5.937I on CMD-LFB < Loop 2 Block 21	411
5.938I on CMD-LFB < Loop 2 Block 22	411
5.939I on CMD-LFB < Loop 2 Block 23	411
5.940I on CMD-LFB < Loop 2 Block 24	412
5.941I on CMD-LFB < Loop 2 Block 25	412
5.942I on CMD-LFB < Loop 2 Block 26	412
5.943I on CMD-LFB < Loop 2 Block 27	413
5.944I on CMD-LFB < Loop 2 Block 28	413
5.945I on CMD-LFB < Loop 2 Block 29	413
5.946I on CMD-LFB < Loop 2 Block 30	414
5.947I on CMD-LFB < Loop 2 Block 31	414
5.948I on CMD-LFB < Loop 2 Block 32	414
5.949I on CMD-LFB < Loop 3 Block 1	415
5.950I on CMD-LFB < Loop 3 Block 2	415
5.951I on CMD-LFB < Loop 3 Block 3	415
5.952I on CMD-LFB < Loop 3 Block 4	416
5.953I on CMD-LFB < Loop 3 Block 5	416
5.954I on CMD-LFB < Loop 3 Block 6	416
5.955I on CMD-LFB < Loop 3 Block 7	417
5.956I on CMD-LFB < Loop 3 Block 8	417
5.957I on CMD-LFB < Loop 3 Block 9	417

5.958I on CMD-LFB < Loop 3 Block 10	418
5.959I on CMD-LFB < Loop 3 Block 11	418
5.960I on CMD-LFB < Loop 3 Block 12	418
5.961I on CMD-LFB < Loop 3 Block 13	419
5.962I on CMD-LFB < Loop 3 Block 14	419
5.963I on CMD-LFB < Loop 3 Block 15	419
5.964I on CMD-LFB < Loop 3 Block 16	420
5.965I on CMD-LFB < Loop 3 Block 17	420
5.966I on CMD-LFB < Loop 3 Block 18	420
5.967I on CMD-LFB < Loop 3 Block 19	421
5.968I on CMD-LFB < Loop 3 Block 20	421
5.969I on CMD-LFB < Loop 3 Block 21	421
5.970I on CMD-LFB < Loop 3 Block 22	422
5.971I on CMD-LFB < Loop 3 Block 23	422
5.972I on CMD-LFB < Loop 3 Block 24	422
5.973I on CMD-LFB < Loop 3 Block 25	423
5.974I on CMD-LFB < Loop 3 Block 26	423
5.975I on CMD-LFB < Loop 3 Block 27	423
5.976I on CMD-LFB < Loop 3 Block 28	424
5.977I on CMD-LFB < Loop 3 Block 29	424
5.978I on CMD-LFB < Loop 3 Block 30	424
5.979I on CMD-LFB < Loop 3 Block 31	425
5.980I on CMD-LFB < Loop 3 Block 32	425
5.981I on CMD-LFB > Loop 1 Block 1	425

5.982I on CMD-LFB > Loop 1 Block 2	426
5.983I on CMD-LFB > Loop 1 Block 3	426
5.984I on CMD-LFB > Loop 1 Block 4	426
5.985I on CMD-LFB > Loop 1 Block 5	427
5.986I on CMD-LFB > Loop 1 Block 6	427
5.987I on CMD-LFB > Loop 1 Block 7	427
5.988I on CMD-LFB > Loop 1 Block 8	428
5.989I on CMD-LFB > Loop 1 Block 9	428
5.990I on CMD-LFB > Loop 1 Block 10	428
5.991I on CMD-LFB > Loop 1 Block 11	429
5.992I on CMD-LFB > Loop 1 Block 12	429
5.993I on CMD-LFB > Loop 1 Block 13	429
5.994I on CMD-LFB > Loop 1 Block 14	430
5.995I on CMD-LFB > Loop 1 Block 15	430
5.996I on CMD-LFB > Loop 1 Block 16	430
5.997I on CMD-LFB > Loop 1 Block 17	431
5.998I on CMD-LFB > Loop 1 Block 18	431
5.999I on CMD-LFB > Loop 1 Block 19	431
5.1000 I on CMD-LFB > Loop 1 Block 20.....	432
5.1001 I on CMD-LFB > Loop 1 Block 21.....	432
5.1002 I on CMD-LFB > Loop 1 Block 22.....	432
5.1003 I on CMD-LFB > Loop 1 Block 23.....	433
5.1004 I on CMD-LFB > Loop 1 Block 24.....	433
5.1005 I on CMD-LFB > Loop 1 Block 25.....	433

5.1006	I on CMD-LFB > Loop 1 Block 26.....	434
5.1007	I on CMD-LFB > Loop 1 Block 27.....	434
5.1008	I on CMD-LFB > Loop 1 Block 28.....	434
5.1009	I on CMD-LFB > Loop 1 Block 29.....	435
5.1010	I on CMD-LFB > Loop 1 Block 30.....	435
5.1011	I on CMD-LFB > Loop 1 Block 31.....	435
5.1012	I on CMD-LFB > Loop 1 Block 32.....	436
5.1013	I on CMD-LFB > Loop 2 Block 1.....	436
5.1014	I on CMD-LFB > Loop 2 Block 2.....	436
5.1015	I on CMD-LFB > Loop 2 Block 3.....	437
5.1016	I on CMD-LFB > Loop 2 Block 4.....	437
5.1017	I on CMD-LFB > Loop 2 Block 5.....	437
5.1018	I on CMD-LFB > Loop 2 Block 6.....	438
5.1019	I on CMD-LFB > Loop 2 Block 7.....	438
5.1020	I on CMD-LFB > Loop 2 Block 8.....	438
5.1021	I on CMD-LFB > Loop 2 Block 9.....	439
5.1022	I on CMD-LFB > Loop 2 Block 10.....	439
5.1023	I on CMD-LFB > Loop 2 Block 11.....	439
5.1024	I on CMD-LFB > Loop 2 Block 12.....	440
5.1025	I on CMD-LFB > Loop 2 Block 13.....	440
5.1026	I on CMD-LFB > Loop 2 Block 14.....	440
5.1027	I on CMD-LFB > Loop 2 Block 15.....	441
5.1028	I on CMD-LFB > Loop 2 Block 16.....	441
5.1029	I on CMD-LFB > Loop 2 Block 17.....	441

5.1030	I on CMD-LFB > Loop 2 Block 18.....	442
5.1031	I on CMD-LFB > Loop 2 Block 19.....	442
5.1032	I on CMD-LFB > Loop 2 Block 20.....	442
5.1033	I on CMD-LFB > Loop 2 Block 21.....	443
5.1034	I on CMD-LFB > Loop 2 Block 22.....	443
5.1035	I on CMD-LFB > Loop 2 Block 23.....	443
5.1036	I on CMD-LFB > Loop 2 Block 24.....	444
5.1037	I on CMD-LFB > Loop 2 Block 25.....	444
5.1038	I on CMD-LFB > Loop 2 Block 26.....	444
5.1039	I on CMD-LFB > Loop 2 Block 27.....	445
5.1040	I on CMD-LFB > Loop 2 Block 28.....	445
5.1041	I on CMD-LFB > Loop 2 Block 29.....	445
5.1042	I on CMD-LFB > Loop 2 Block 30.....	446
5.1043	I on CMD-LFB > Loop 2 Block 31.....	446
5.1044	I on CMD-LFB > Loop 2 Block 32.....	446
5.1045	I on CMD-LFB > Loop 3 Block 1.....	447
5.1046	I on CMD-LFB > Loop 3 Block 2.....	447
5.1047	I on CMD-LFB > Loop 3 Block 3.....	447
5.1048	I on CMD-LFB > Loop 3 Block 4.....	448
5.1049	I on CMD-LFB > Loop 3 Block 5.....	448
5.1050	I on CMD-LFB > Loop 3 Block 6.....	448
5.1051	I on CMD-LFB > Loop 3 Block 7.....	449
5.1052	I on CMD-LFB > Loop 3 Block 8.....	449
5.1053	I on CMD-LFB > Loop 3 Block 9.....	449

5.1054	I on CMD-LFB > Loop 3 Block 10.....	450
5.1055	I on CMD-LFB > Loop 3 Block 11.....	450
5.1056	I on CMD-LFB > Loop 3 Block 12.....	450
5.1057	I on CMD-LFB > Loop 3 Block 13.....	451
5.1058	I on CMD-LFB > Loop 3 Block 14.....	451
5.1059	I on CMD-LFB > Loop 3 Block 15.....	451
5.1060	I on CMD-LFB > Loop 3 Block 16.....	452
5.1061	I on CMD-LFB > Loop 3 Block 17.....	452
5.1062	I on CMD-LFB > Loop 3 Block 18.....	452
5.1063	I on CMD-LFB > Loop 3 Block 19.....	453
5.1064	I on CMD-LFB > Loop 3 Block 20.....	453
5.1065	I on CMD-LFB > Loop 3 Block 21.....	453
5.1066	I on CMD-LFB > Loop 3 Block 22.....	454
5.1067	I on CMD-LFB > Loop 3 Block 23.....	454
5.1068	I on CMD-LFB > Loop 3 Block 24.....	454
5.1069	I on CMD-LFB > Loop 3 Block 25.....	455
5.1070	I on CMD-LFB > Loop 3 Block 26.....	455
5.1071	I on CMD-LFB > Loop 3 Block 27.....	455
5.1072	I on CMD-LFB > Loop 3 Block 28.....	456
5.1073	I on CMD-LFB > Loop 3 Block 29.....	456
5.1074	I on CMD-LFB > Loop 3 Block 30.....	456
5.1075	I on CMD-LFB > Loop 3 Block 31.....	457
5.1076	I on CMD-LFB > Loop 3 Block 32.....	457
5.1077	Internal Flag	458

5.1078	LC1.....	458
5.1079	LC1-LFB1.....	459
5.1080	LC2.....	459
5.1081	LC2-LFB2.....	459
5.1082	LC3.....	460
5.1083	LC3-LFB3.....	460
5.1084	LFB1.....	460
5.1085	LFB2.....	461
5.1086	LFB3.....	461
5.1087	Limit - Valve 1.....	461
5.1088	Limit - Valve 2.....	462
5.1089	Limit - Valve 3.....	462
5.1090	Limit + Valve 1.....	462
5.1091	Limit + Valve 2.....	463
5.1092	Limit + Valve 3.....	463
5.1093	Limit I-Control Loop 1 Block 1	463
5.1094	Limit I-Control Loop 1 Block 2	464
5.1095	Limit I-Control Loop 1 Block 3	464
5.1096	Limit I-Control Loop 1 Block 4	464
5.1097	Limit I-Control Loop 1 Block 5	465
5.1098	Limit I-Control Loop 1 Block 6	465
5.1099	Limit I-Control Loop 1 Block 7	465
5.1100	Limit I-Control Loop 1 Block 8	466
5.1101	Limit I-Control Loop 1 Block 9	466

5.1102	Limit I-Control Loop 1 Block 10	466
5.1103	Limit I-Control Loop 1 Block 11	467
5.1104	Limit I-Control Loop 1 Block 12	467
5.1105	Limit I-Control Loop 1 Block 13	467
5.1106	Limit I-Control Loop 1 Block 14	468
5.1107	Limit I-Control Loop 1 Block 15	468
5.1108	Limit I-Control Loop 1 Block 16	468
5.1109	Limit I-Control Loop 1 Block 17	469
5.1110	Limit I-Control Loop 1 Block 18	469
5.1111	Limit I-Control Loop 1 Block 19	469
5.1112	Limit I-Control Loop 1 Block 20	470
5.1113	Limit I-Control Loop 1 Block 21	470
5.1114	Limit I-Control Loop 1 Block 22	470
5.1115	Limit I-Control Loop 1 Block 23	471
5.1116	Limit I-Control Loop 1 Block 24	471
5.1117	Limit I-Control Loop 1 Block 25	471
5.1118	Limit I-Control Loop 1 Block 26	472
5.1119	Limit I-Control Loop 1 Block 27	472
5.1120	Limit I-Control Loop 1 Block 28	472
5.1121	Limit I-Control Loop 1 Block 29	473
5.1122	Limit I-Control Loop 1 Block 30	473
5.1123	Limit I-Control Loop 1 Block 31	473
5.1124	Limit I-Control Loop 1 Block 32	474
5.1125	Limit I-Control Loop 2 Block 1	474

5.1126	Limit I-Control Loop 2 Block 2	474
5.1127	Limit I-Control Loop 2 Block 3	475
5.1128	Limit I-Control Loop 2 Block 4	475
5.1129	Limit I-Control Loop 2 Block 5	475
5.1130	Limit I-Control Loop 2 Block 6	476
5.1131	Limit I-Control Loop 2 Block 7	476
5.1132	Limit I-Control Loop 2 Block 8	476
5.1133	Limit I-Control Loop 2 Block 9	477
5.1134	Limit I-Control Loop 2 Block 10	477
5.1135	Limit I-Control Loop 2 Block 11	477
5.1136	Limit I-Control Loop 2 Block 12	478
5.1137	Limit I-Control Loop 2 Block 13	478
5.1138	Limit I-Control Loop 2 Block 14	478
5.1139	Limit I-Control Loop 2 Block 15	479
5.1140	Limit I-Control Loop 2 Block 16	479
5.1141	Limit I-Control Loop 2 Block 17	479
5.1142	Limit I-Control Loop 2 Block 18	480
5.1143	Limit I-Control Loop 2 Block 19	480
5.1144	Limit I-Control Loop 2 Block 20	480
5.1145	Limit I-Control Loop 2 Block 21	481
5.1146	Limit I-Control Loop 2 Block 22	481
5.1147	Limit I-Control Loop 2 Block 23	481
5.1148	Limit I-Control Loop 2 Block 24	482
5.1149	Limit I-Control Loop 2 Block 25	482

5.1150	Limit I-Control Loop 2 Block 26	482
5.1151	Limit I-Control Loop 2 Block 27	483
5.1152	Limit I-Control Loop 2 Block 28	483
5.1153	Limit I-Control Loop 2 Block 29	483
5.1154	Limit I-Control Loop 2 Block 30	484
5.1155	Limit I-Control Loop 2 Block 31	484
5.1156	Limit I-Control Loop 2 Block 32	484
5.1157	Limit I-Control Loop 3 Block 1	485
5.1158	Limit I-Control Loop 3 Block 2	485
5.1159	Limit I-Control Loop 3 Block 3	485
5.1160	Limit I-Control Loop 3 Block 4	486
5.1161	Limit I-Control Loop 3 Block 5	486
5.1162	Limit I-Control Loop 3 Block 6	486
5.1163	Limit I-Control Loop 3 Block 7	487
5.1164	Limit I-Control Loop 3 Block 8	487
5.1165	Limit I-Control Loop 3 Block 9	487
5.1166	Limit I-Control Loop 3 Block 10	488
5.1167	Limit I-Control Loop 3 Block 11	488
5.1168	Limit I-Control Loop 3 Block 12	488
5.1169	Limit I-Control Loop 3 Block 13	489
5.1170	Limit I-Control Loop 3 Block 14	489
5.1171	Limit I-Control Loop 3 Block 15	489
5.1172	Limit I-Control Loop 3 Block 16	490
5.1173	Limit I-Control Loop 3 Block 17	490

5.1174	Limit I-Control Loop 3 Block 18	490
5.1175	Limit I-Control Loop 3 Block 19	491
5.1176	Limit I-Control Loop 3 Block 20	491
5.1177	Limit I-Control Loop 3 Block 21	491
5.1178	Limit I-Control Loop 3 Block 22	492
5.1179	Limit I-Control Loop 3 Block 23	492
5.1180	Limit I-Control Loop 3 Block 24	492
5.1181	Limit I-Control Loop 3 Block 25	493
5.1182	Limit I-Control Loop 3 Block 26	493
5.1183	Limit I-Control Loop 3 Block 27	493
5.1184	Limit I-Control Loop 3 Block 28	494
5.1185	Limit I-Control Loop 3 Block 29	494
5.1186	Limit I-Control Loop 3 Block 30	494
5.1187	Limit I-Control Loop 3 Block 31	495
5.1188	Limit I-Control Loop 3 Block 32	495
5.1189	LO1.....	495
5.1190	LO2.....	496
5.1191	LO3.....	496
5.1192	LS1 Loop 1 Block 1	496
5.1193	LS1 Loop 1 Block 2	497
5.1194	LS1 Loop 1 Block 3	497
5.1195	LS1 Loop 1 Block 4	497
5.1196	LS1 Loop 1 Block 5	498
5.1197	LS1 Loop 1 Block 6	498

5.1198	LS1 Loop 1 Block 7	498
5.1199	LS1 Loop 1 Block 8	499
5.1200	LS1 Loop 1 Block 9	499
5.1201	LS1 Loop 1 Block 10	499
5.1202	LS1 Loop 1 Block 11	500
5.1203	LS1 Loop 1 Block 12	500
5.1204	LS1 Loop 1 Block 13	500
5.1205	LS1 Loop 1 Block 14	501
5.1206	LS1 Loop 1 Block 15	501
5.1207	LS1 Loop 1 Block 16	501
5.1208	LS1 Loop 1 Block 17	502
5.1209	LS1 Loop 1 Block 18	502
5.1210	LS1 Loop 1 Block 19	502
5.1211	LS1 Loop 1 Block 20	503
5.1212	LS1 Loop 1 Block 21	503
5.1213	LS1 Loop 1 Block 22	503
5.1214	LS1 Loop 1 Block 23	504
5.1215	LS1 Loop 1 Block 24	504
5.1216	LS1 Loop 1 Block 25	504
5.1217	LS1 Loop 1 Block 26	505
5.1218	LS1 Loop 1 Block 27	505
5.1219	LS1 Loop 1 Block 28	505
5.1220	LS1 Loop 1 Block 29	506
5.1221	LS1 Loop 1 Block 30	506

5.1222	LS1 Loop 1 Block 31	506
5.1223	LS1 Loop 1 Block 32	507
5.1224	LS2 Loop 2 Block 1	507
5.1225	LS2 Loop 2 Block 2	507
5.1226	LS2 Loop 2 Block 3	508
5.1227	LS2 Loop 2 Block 4	508
5.1228	LS2 Loop 2 Block 5	508
5.1229	LS2 Loop 2 Block 6	509
5.1230	LS2 Loop 2 Block 7	509
5.1231	LS2 Loop 2 Block 8	509
5.1232	LS2 Loop 2 Block 9	510
5.1233	LS2 Loop 2 Block 10	510
5.1234	LS2 Loop 2 Block 11	510
5.1235	LS2 Loop 2 Block 12	511
5.1236	LS2 Loop 2 Block 13	511
5.1237	LS2 Loop 2 Block 14	511
5.1238	LS2 Loop 2 Block 15	512
5.1239	LS2 Loop 2 Block 16	512
5.1240	LS2 Loop 2 Block 17	512
5.1241	LS2 Loop 2 Block 18	513
5.1242	LS2 Loop 2 Block 19	513
5.1243	LS2 Loop 2 Block 20	513
5.1244	LS2 Loop 2 Block 21	514
5.1245	LS2 Loop 2 Block 22	514

5.1246	LS2 Loop 2 Block 23	514
5.1247	LS2 Loop 2 Block 24	515
5.1248	LS2 Loop 2 Block 25	515
5.1249	LS2 Loop 2 Block 26	515
5.1250	LS2 Loop 2 Block 27	516
5.1251	LS2 Loop 2 Block 28	516
5.1252	LS2 Loop 2 Block 29	516
5.1253	LS2 Loop 2 Block 30	517
5.1254	LS2 Loop 2 Block 31	517
5.1255	LS2 Loop 2 Block 32	517
5.1256	LS3 Loop 3 Block 1	518
5.1257	LS3 Loop 3 Block 2	518
5.1258	LS3 Loop 3 Block 3	518
5.1259	LS3 Loop 3 Block 4	519
5.1260	LS3 Loop 3 Block 5	519
5.1261	LS3 Loop 3 Block 6	519
5.1262	LS3 Loop 3 Block 7	520
5.1263	LS3 Loop 3 Block 8	520
5.1264	LS3 Loop 3 Block 9	520
5.1265	LS3 Loop 3 Block 10	521
5.1266	LS3 Loop 3 Block 11	521
5.1267	LS3 Loop 3 Block 12	521
5.1268	LS3 Loop 3 Block 13	522
5.1269	LS3 Loop 3 Block 14	522

5.1270	LS3 Loop 3 Block 15	522
5.1271	LS3 Loop 3 Block 16	523
5.1272	LS3 Loop 3 Block 17	523
5.1273	LS3 Loop 3 Block 18	523
5.1274	LS3 Loop 3 Block 19	524
5.1275	LS3 Loop 3 Block 20	524
5.1276	LS3 Loop 3 Block 21	524
5.1277	LS3 Loop 3 Block 22	525
5.1278	LS3 Loop 3 Block 23	525
5.1279	LS3 Loop 3 Block 24	525
5.1280	LS3 Loop 3 Block 25	526
5.1281	LS3 Loop 3 Block 26	526
5.1282	LS3 Loop 3 Block 27	526
5.1283	LS3 Loop 3 Block 28	527
5.1284	LS3 Loop 3 Block 29	527
5.1285	LS3 Loop 3 Block 30	527
5.1286	LS3 Loop 3 Block 31	528
5.1287	LS3 Loop 3 Block 32	528
5.1288	Offset AO1.....	528
5.1289	Offset AO2.....	529
5.1290	Offset AO3.....	529
5.1291	Offset Valve 1.....	529
5.1292	Offset Valve 2.....	530
5.1293	Offset Valve 3.....	530

5.1294	OUT1.....	530
5.1295	OUT2.....	531
5.1296	OUT3.....	531
5.1297	P Loop 1 Block 1	531
5.1298	P Loop 1 Block 2	532
5.1299	P Loop 1 Block 3	532
5.1300	P Loop 1 Block 4	532
5.1301	P Loop 1 Block 5	533
5.1302	P Loop 1 Block 6	533
5.1303	P Loop 1 Block 7	533
5.1304	P Loop 1 Block 8	534
5.1305	P Loop 1 Block 9	534
5.1306	P Loop 1 Block 10	534
5.1307	P Loop 1 Block 11	535
5.1308	P Loop 1 Block 12	535
5.1309	P Loop 1 Block 13	535
5.1310	P Loop 1 Block 14	536
5.1311	P Loop 1 Block 15	536
5.1312	P Loop 1 Block 16	536
5.1313	P Loop 1 Block 17	537
5.1314	P Loop 1 Block 18	537
5.1315	P Loop 1 Block 19	537
5.1316	P Loop 1 Block 20	538
5.1317	P Loop 1 Block 21	538

5.1318	P Loop 1 Block 22	538
5.1319	P Loop 1 Block 23	539
5.1320	P Loop 1 Block 24	539
5.1321	P Loop 1 Block 25	539
5.1322	P Loop 1 Block 26	540
5.1323	P Loop 1 Block 27	540
5.1324	P Loop 1 Block 28	540
5.1325	P Loop 1 Block 29	541
5.1326	P Loop 1 Block 30	541
5.1327	P Loop 1 Block 31	541
5.1328	P Loop 1 Block 32	542
5.1329	P Loop 2 Block 1	542
5.1330	P Loop 2 Block 2	542
5.1331	P Loop 2 Block 3	543
5.1332	P Loop 2 Block 4	543
5.1333	P Loop 2 Block 5	543
5.1334	P Loop 2 Block 6	544
5.1335	P Loop 2 Block 7	544
5.1336	P Loop 2 Block 8	544
5.1337	P Loop 2 Block 9	545
5.1338	P Loop 2 Block 10	545
5.1339	P Loop 2 Block 11	545
5.1340	P Loop 2 Block 12	546
5.1341	P Loop 2 Block 13	546

5.1342	P Loop 2 Block 14	546
5.1343	P Loop 2 Block 15	547
5.1344	P Loop 2 Block 16	547
5.1345	P Loop 2 Block 17	547
5.1346	P Loop 2 Block 18	548
5.1347	P Loop 2 Block 19	548
5.1348	P Loop 2 Block 20	548
5.1349	P Loop 2 Block 21	549
5.1350	P Loop 2 Block 22	549
5.1351	P Loop 2 Block 23	549
5.1352	P Loop 2 Block 24	550
5.1353	P Loop 2 Block 25	550
5.1354	P Loop 2 Block 26	550
5.1355	P Loop 2 Block 27	551
5.1356	P Loop 2 Block 28	551
5.1357	P Loop 2 Block 29	551
5.1358	P Loop 2 Block 30	552
5.1359	P Loop 2 Block 31	552
5.1360	P Loop 2 Block 32	552
5.1361	P Loop 3 Block 1	553
5.1362	P Loop 3 Block 2	553
5.1363	P Loop 3 Block 3	553
5.1364	P Loop 3 Block 4	554
5.1365	P Loop 3 Block 5	554

5.1366	P Loop 3 Block 6	554
5.1367	P Loop 3 Block 7	555
5.1368	P Loop 3 Block 8	555
5.1369	P Loop 3 Block 9	555
5.1370	P Loop 3 Block 10	556
5.1371	P Loop 3 Block 11	556
5.1372	P Loop 3 Block 12	556
5.1373	P Loop 3 Block 13	557
5.1374	P Loop 3 Block 14	557
5.1375	P Loop 3 Block 15	557
5.1376	P Loop 3 Block 16	558
5.1377	P Loop 3 Block 17	558
5.1378	P Loop 3 Block 18	558
5.1379	P Loop 3 Block 19	559
5.1380	P Loop 3 Block 20	559
5.1381	P Loop 3 Block 21	559
5.1382	P Loop 3 Block 22	560
5.1383	P Loop 3 Block 23	560
5.1384	P Loop 3 Block 24	560
5.1385	P Loop 3 Block 25	561
5.1386	P Loop 3 Block 26	561
5.1387	P Loop 3 Block 27	561
5.1388	P Loop 3 Block 28	562
5.1389	P Loop 3 Block 29	562

5.1390	P Loop 3 Block 30	562
5.1391	P Loop 3 Block 31	563
5.1392	P Loop 3 Block 32	563
5.1393	Ratio FB1-1:FB1-2	563
5.1394	Ratio FB2-1:FB2-2	564
5.1395	Ratio FB3-1:FB3-2	564
5.1396	Residual- Valve 1	564
5.1397	Residual- Valve 2	565
5.1398	Residual- Valve 3	565
5.1399	Residual+ Valve 1	565
5.1400	Residual+ Valve 2	566
5.1401	Residual+ Valve 3	566
5.1402	set dig. FB to zero	566
5.1403	Status	567
5.1404	Step - Valve 1.....	568
5.1405	Step - Valve 2.....	568
5.1406	Step - Valve 3.....	569
5.1407	Step + Valve 1.....	569
5.1408	Step + Valve 2.....	569
5.1409	Step + Valve 3.....	570
5.1410	Stop CMD Loop 1 Block 1	570
5.1411	Stop CMD Loop 1 Block 2	570
5.1412	Stop CMD Loop 1 Block 3	571
5.1413	Stop CMD Loop 1 Block 4	571

5.1414	Stop CMD Loop 1 Block 5	571
5.1415	Stop CMD Loop 1 Block 6	572
5.1416	Stop CMD Loop 1 Block 7	572
5.1417	Stop CMD Loop 1 Block 8	572
5.1418	Stop CMD Loop 1 Block 9	573
5.1419	Stop CMD Loop 1 Block 10	573
5.1420	Stop CMD Loop 1 Block 11	573
5.1421	Stop CMD Loop 1 Block 12	574
5.1422	Stop CMD Loop 1 Block 13	574
5.1423	Stop CMD Loop 1 Block 14	574
5.1424	Stop CMD Loop 1 Block 15	575
5.1425	Stop CMD Loop 1 Block 16	575
5.1426	Stop CMD Loop 1 Block 17	575
5.1427	Stop CMD Loop 1 Block 18	576
5.1428	Stop CMD Loop 1 Block 19	576
5.1429	Stop CMD Loop 1 Block 20	576
5.1430	Stop CMD Loop 1 Block 21	577
5.1431	Stop CMD Loop 1 Block 22	577
5.1432	Stop CMD Loop 1 Block 23	577
5.1433	Stop CMD Loop 1 Block 24	578
5.1434	Stop CMD Loop 1 Block 25	578
5.1435	Stop CMD Loop 1 Block 26	578
5.1436	Stop CMD Loop 1 Block 27	579
5.1437	Stop CMD Loop 1 Block 28	579

5.1438	Stop CMD Loop 1 Block 29	579
5.1439	Stop CMD Loop 1 Block 30	580
5.1440	Stop CMD Loop 1 Block 31	580
5.1441	Stop CMD Loop 1 Block 32	580
5.1442	Stop CMD Loop 2 Block 1	581
5.1443	Stop CMD Loop 2 Block 2	581
5.1444	Stop CMD Loop 2 Block 3	581
5.1445	Stop CMD Loop 2 Block 4	582
5.1446	Stop CMD Loop 2 Block 5	582
5.1447	Stop CMD Loop 2 Block 6	582
5.1448	Stop CMD Loop 2 Block 7	583
5.1449	Stop CMD Loop 2 Block 8	583
5.1450	Stop CMD Loop 2 Block 9	583
5.1451	Stop CMD Loop 2 Block 10	584
5.1452	Stop CMD Loop 2 Block 11	584
5.1453	Stop CMD Loop 2 Block 12	584
5.1454	Stop CMD Loop 2 Block 13	585
5.1455	Stop CMD Loop 2 Block 14	585
5.1456	Stop CMD Loop 2 Block 15	585
5.1457	Stop CMD Loop 2 Block 16	586
5.1458	Stop CMD Loop 2 Block 17	586
5.1459	Stop CMD Loop 2 Block 18	586
5.1460	Stop CMD Loop 2 Block 19	587
5.1461	Stop CMD Loop 2 Block 20	587

5.1462	Stop CMD Loop 2 Block 21	587
5.1463	Stop CMD Loop 2 Block 22	588
5.1464	Stop CMD Loop 2 Block 23	588
5.1465	Stop CMD Loop 2 Block 24	588
5.1466	Stop CMD Loop 2 Block 25	589
5.1467	Stop CMD Loop 2 Block 26	589
5.1468	Stop CMD Loop 2 Block 27	589
5.1469	Stop CMD Loop 2 Block 28	590
5.1470	Stop CMD Loop 2 Block 29	590
5.1471	Stop CMD Loop 2 Block 30	590
5.1472	Stop CMD Loop 2 Block 31	591
5.1473	Stop CMD Loop 2 Block 32	591
5.1474	Stop CMD Loop 3 Block 1	591
5.1475	Stop CMD Loop 3 Block 2	592
5.1476	Stop CMD Loop 3 Block 3	592
5.1477	Stop CMD Loop 3 Block 4	592
5.1478	Stop CMD Loop 3 Block 5	593
5.1479	Stop CMD Loop 3 Block 6	593
5.1480	Stop CMD Loop 3 Block 7	593
5.1481	Stop CMD Loop 3 Block 8	594
5.1482	Stop CMD Loop 3 Block 9	594
5.1483	Stop CMD Loop 3 Block 10	594
5.1484	Stop CMD Loop 3 Block 11	595
5.1485	Stop CMD Loop 3 Block 12	595

5.1486	Stop CMD Loop 3 Block 13	595
5.1487	Stop CMD Loop 3 Block 14	596
5.1488	Stop CMD Loop 3 Block 15	596
5.1489	Stop CMD Loop 3 Block 16	596
5.1490	Stop CMD Loop 3 Block 17	597
5.1491	Stop CMD Loop 3 Block 18	597
5.1492	Stop CMD Loop 3 Block 19	597
5.1493	Stop CMD Loop 3 Block 20	598
5.1494	Stop CMD Loop 3 Block 21	598
5.1495	Stop CMD Loop 3 Block 22	598
5.1496	Stop CMD Loop 3 Block 23	599
5.1497	Stop CMD Loop 3 Block 24	599
5.1498	Stop CMD Loop 3 Block 25	599
5.1499	Stop CMD Loop 3 Block 26	600
5.1500	Stop CMD Loop 3 Block 27	600
5.1501	Stop CMD Loop 3 Block 28	600
5.1502	Stop CMD Loop 3 Block 29	601
5.1503	Stop CMD Loop 3 Block 30	601
5.1504	Stop CMD Loop 3 Block 31	601
5.1505	Stop CMD Loop 3 Block 32	602
5.1506	T1 Lag Loop 1 Block 1	602
5.1507	T1 Lag Loop 1 Block 2	602
5.1508	T1 Lag Loop 1 Block 3	603
5.1509	T1 Lag Loop 1 Block 4	603

5.1510	T1 Lag Loop 1 Block 5	603
5.1511	T1 Lag Loop 1 Block 6	604
5.1512	T1 Lag Loop 1 Block 7	604
5.1513	T1 Lag Loop 1 Block 8	604
5.1514	T1 Lag Loop 1 Block 9	605
5.1515	T1 Lag Loop 1 Block 10	605
5.1516	T1 Lag Loop 1 Block 11	605
5.1517	T1 Lag Loop 1 Block 12	606
5.1518	T1 Lag Loop 1 Block 13	606
5.1519	T1 Lag Loop 1 Block 14	606
5.1520	T1 Lag Loop 1 Block 15	607
5.1521	T1 Lag Loop 1 Block 16	607
5.1522	T1 Lag Loop 1 Block 17	607
5.1523	T1 Lag Loop 1 Block 18	608
5.1524	T1 Lag Loop 1 Block 19	608
5.1525	T1 Lag Loop 1 Block 20	608
5.1526	T1 Lag Loop 1 Block 21	609
5.1527	T1 Lag Loop 1 Block 22	609
5.1528	T1 Lag Loop 1 Block 23	609
5.1529	T1 Lag Loop 1 Block 24	610
5.1530	T1 Lag Loop 1 Block 25	610
5.1531	T1 Lag Loop 1 Block 26	610
5.1532	T1 Lag Loop 1 Block 27	611
5.1533	T1 Lag Loop 1 Block 28	611

5.1534	T1 Lag Loop 1 Block 29	611
5.1535	T1 Lag Loop 1 Block 30	612
5.1536	T1 Lag Loop 1 Block 31	612
5.1537	T1 Lag Loop 1 Block 32	612
5.1538	T1 Lag Loop 2 Block 1	613
5.1539	T1 Lag Loop 2 Block 2	613
5.1540	T1 Lag Loop 2 Block 3	613
5.1541	T1 Lag Loop 2 Block 4	614
5.1542	T1 Lag Loop 2 Block 5	614
5.1543	T1 Lag Loop 2 Block 6	614
5.1544	T1 Lag Loop 2 Block 7	615
5.1545	T1 Lag Loop 2 Block 8	615
5.1546	T1 Lag Loop 2 Block 9	615
5.1547	T1 Lag Loop 2 Block 10	616
5.1548	T1 Lag Loop 2 Block 11	616
5.1549	T1 Lag Loop 2 Block 12	616
5.1550	T1 Lag Loop 2 Block 13	617
5.1551	T1 Lag Loop 2 Block 14	617
5.1552	T1 Lag Loop 2 Block 15	617
5.1553	T1 Lag Loop 2 Block 16	618
5.1554	T1 Lag Loop 2 Block 17	618
5.1555	T1 Lag Loop 2 Block 18	618
5.1556	T1 Lag Loop 2 Block 19	619
5.1557	T1 Lag Loop 2 Block 20	619

5.1558	T1 Lag Loop 2 Block 21	619
5.1559	T1 Lag Loop 2 Block 22	620
5.1560	T1 Lag Loop 2 Block 23	620
5.1561	T1 Lag Loop 2 Block 24	620
5.1562	T1 Lag Loop 2 Block 25	621
5.1563	T1 Lag Loop 2 Block 26	621
5.1564	T1 Lag Loop 2 Block 27	621
5.1565	T1 Lag Loop 2 Block 28	622
5.1566	T1 Lag Loop 2 Block 29	622
5.1567	T1 Lag Loop 2 Block 30	622
5.1568	T1 Lag Loop 2 Block 31	623
5.1569	T1 Lag Loop 2 Block 32	623
5.1570	T1 Lag Loop 3 Block 1	623
5.1571	T1 Lag Loop 3 Block 2	624
5.1572	T1 Lag Loop 3 Block 3	624
5.1573	T1 Lag Loop 3 Block 4	624
5.1574	T1 Lag Loop 3 Block 5	625
5.1575	T1 Lag Loop 3 Block 6	625
5.1576	T1 Lag Loop 3 Block 7	625
5.1577	T1 Lag Loop 3 Block 8	626
5.1578	T1 Lag Loop 3 Block 9	626
5.1579	T1 Lag Loop 3 Block 10	626
5.1580	T1 Lag Loop 3 Block 11	627
5.1581	T1 Lag Loop 3 Block 12	627

5.1582	T1 Lag Loop 3 Block 13	627
5.1583	T1 Lag Loop 3 Block 14	628
5.1584	T1 Lag Loop 3 Block 15	628
5.1585	T1 Lag Loop 3 Block 16	628
5.1586	T1 Lag Loop 3 Block 17	629
5.1587	T1 Lag Loop 3 Block 18	629
5.1588	T1 Lag Loop 3 Block 19	629
5.1589	T1 Lag Loop 3 Block 20	630
5.1590	T1 Lag Loop 3 Block 21	630
5.1591	T1 Lag Loop 3 Block 22	630
5.1592	T1 Lag Loop 3 Block 23	631
5.1593	T1 Lag Loop 3 Block 24	631
5.1594	T1 Lag Loop 3 Block 25	631
5.1595	T1 Lag Loop 3 Block 26	632
5.1596	T1 Lag Loop 3 Block 27	632
5.1597	T1 Lag Loop 3 Block 28	632
5.1598	T1 Lag Loop 3 Block 29	633
5.1599	T1 Lag Loop 3 Block 30	633
5.1600	T1 Lag Loop 3 Block 31	633
5.1601	T1 Lag Loop 3 Block 32	634
5.1602	Table 1 Block.....	634
5.1603	Table 1 Input	635
5.1604	Table 1 Max.....	636
5.1605	Table 1 Min.....	636

5.1606	Table 1 Play Rate	636
5.1607	Table 1 Play Units	637
5.1608	Table 1 Save	637
5.1609	Table 1 Source	638
5.1610	Table 1 Store Rate	639
5.1611	Table 1 Store Units.....	639
5.1612	Table 2 Block.....	639
5.1613	Table 2 Input	640
5.1614	Table 2 Max.....	641
5.1615	Table 2 Min.....	641
5.1616	Table 2 Play Rate	641
5.1617	Table 2 Play Units	642
5.1618	Table 2 Save	642
5.1619	Table 2 Source	643
5.1620	Table 2 Store Rate	644
5.1621	Table 2 Store Units.....	644
5.1622	Units to 100% Loop 1	644
5.1623	Units to 100% Loop 2	645
5.1624	Units to 100% Loop 3	645
5.1625	Velocity- Loop 1 Block 1.....	645
5.1626	Velocity- Loop 1 Block 2.....	646
5.1627	Velocity- Loop 1 Block 3.....	646
5.1628	Velocity- Loop 1 Block 4.....	646
5.1629	Velocity- Loop 1 Block 5.....	647

5.1630	Velocity- Loop 1 Block 6.....	647
5.1631	Velocity- Loop 1 Block 7.....	647
5.1632	Velocity- Loop 1 Block 8.....	648
5.1633	Velocity- Loop 1 Block 9.....	648
5.1634	Velocity- Loop 1 Block 10.....	648
5.1635	Velocity- Loop 1 Block 11.....	649
5.1636	Velocity- Loop 1 Block 12.....	649
5.1637	Velocity- Loop 1 Block 13.....	649
5.1638	Velocity- Loop 1 Block 14.....	650
5.1639	Velocity- Loop 1 Block 15.....	650
5.1640	Velocity- Loop 1 Block 16.....	650
5.1641	Velocity- Loop 1 Block 17.....	651
5.1642	Velocity- Loop 1 Block 18.....	651
5.1643	Velocity- Loop 1 Block 19.....	651
5.1644	Velocity- Loop 1 Block 20.....	652
5.1645	Velocity- Loop 1 Block 21.....	652
5.1646	Velocity- Loop 1 Block 22.....	652
5.1647	Velocity- Loop 1 Block 23.....	653
5.1648	Velocity- Loop 1 Block 24.....	653
5.1649	Velocity- Loop 1 Block 25.....	653
5.1650	Velocity- Loop 1 Block 26.....	654
5.1651	Velocity- Loop 1 Block 27.....	654
5.1652	Velocity- Loop 1 Block 28.....	654
5.1653	Velocity- Loop 1 Block 29.....	655

5.1654	Velocity- Loop 1 Block 30	655
5.1655	Velocity- Loop 1 Block 31	655
5.1656	Velocity- Loop 1 Block 32	656
5.1657	Velocity- Loop 2 Block 1	656
5.1658	Velocity- Loop 2 Block 2	656
5.1659	Velocity- Loop 2 Block 3	657
5.1660	Velocity- Loop 2 Block 4	657
5.1661	Velocity- Loop 2 Block 5	657
5.1662	Velocity- Loop 2 Block 6	658
5.1663	Velocity- Loop 2 Block 7	658
5.1664	Velocity- Loop 2 Block 8	658
5.1665	Velocity- Loop 2 Block 9	659
5.1666	Velocity- Loop 2 Block 10	659
5.1667	Velocity- Loop 2 Block 11	659
5.1668	Velocity- Loop 2 Block 12	660
5.1669	Velocity- Loop 2 Block 13	660
5.1670	Velocity- Loop 2 Block 14	660
5.1671	Velocity- Loop 2 Block 15	661
5.1672	Velocity- Loop 2 Block 16	661
5.1673	Velocity- Loop 2 Block 17	661
5.1674	Velocity- Loop 2 Block 18	662
5.1675	Velocity- Loop 2 Block 19	662
5.1676	Velocity- Loop 2 Block 20	662
5.1677	Velocity- Loop 2 Block 21	663

5.1678	Velocity- Loop 2 Block 22	663
5.1679	Velocity- Loop 2 Block 23	663
5.1680	Velocity- Loop 2 Block 24	664
5.1681	Velocity- Loop 2 Block 25	664
5.1682	Velocity- Loop 2 Block 26	664
5.1683	Velocity- Loop 2 Block 27	665
5.1684	Velocity- Loop 2 Block 28	665
5.1685	Velocity- Loop 2 Block 29	665
5.1686	Velocity- Loop 2 Block 30	666
5.1687	Velocity- Loop 2 Block 31	666
5.1688	Velocity- Loop 2 Block 32	666
5.1689	Velocity- Loop 3 Block 1	667
5.1690	Velocity- Loop 3 Block 2	667
5.1691	Velocity- Loop 3 Block 3	667
5.1692	Velocity- Loop 3 Block 4	668
5.1693	Velocity- Loop 3 Block 5	668
5.1694	Velocity- Loop 3 Block 6	668
5.1695	Velocity- Loop 3 Block 7	669
5.1696	Velocity- Loop 3 Block 8	669
5.1697	Velocity- Loop 3 Block 9	669
5.1698	Velocity- Loop 3 Block 10	670
5.1699	Velocity- Loop 3 Block 11	670
5.1700	Velocity- Loop 3 Block 12	670
5.1701	Velocity- Loop 3 Block 13	671

5.1702	Velocity- Loop 3 Block 14.....	671
5.1703	Velocity- Loop 3 Block 15.....	671
5.1704	Velocity- Loop 3 Block 16.....	672
5.1705	Velocity- Loop 3 Block 17.....	672
5.1706	Velocity- Loop 3 Block 18.....	672
5.1707	Velocity- Loop 3 Block 19.....	673
5.1708	Velocity- Loop 3 Block 20.....	673
5.1709	Velocity- Loop 3 Block 21.....	673
5.1710	Velocity- Loop 3 Block 22.....	674
5.1711	Velocity- Loop 3 Block 23.....	674
5.1712	Velocity- Loop 3 Block 24.....	674
5.1713	Velocity- Loop 3 Block 25.....	675
5.1714	Velocity- Loop 3 Block 26.....	675
5.1715	Velocity- Loop 3 Block 27.....	675
5.1716	Velocity- Loop 3 Block 28.....	676
5.1717	Velocity- Loop 3 Block 29.....	676
5.1718	Velocity- Loop 3 Block 30.....	676
5.1719	Velocity- Loop 3 Block 31.....	677
5.1720	Velocity- Loop 3 Block 32.....	677
5.1721	Velocity+ Loop 1 Block 1.....	677
5.1722	Velocity+ Loop 1 Block 2.....	678
5.1723	Velocity+ Loop 1 Block 3.....	678
5.1724	Velocity+ Loop 1 Block 4.....	678
5.1725	Velocity+ Loop 1 Block 5.....	679

5.1726	Velocity+ Loop 1 Block 6	679
5.1727	Velocity+ Loop 1 Block 7	679
5.1728	Velocity+ Loop 1 Block 8	680
5.1729	Velocity+ Loop 1 Block 9	680
5.1730	Velocity+ Loop 1 Block 10	680
5.1731	Velocity+ Loop 1 Block 11	681
5.1732	Velocity+ Loop 1 Block 12	681
5.1733	Velocity+ Loop 1 Block 13	681
5.1734	Velocity+ Loop 1 Block 14	682
5.1735	Velocity+ Loop 1 Block 15	682
5.1736	Velocity+ Loop 1 Block 16	682
5.1737	Velocity+ Loop 1 Block 17	683
5.1738	Velocity+ Loop 1 Block 18	683
5.1739	Velocity+ Loop 1 Block 19	683
5.1740	Velocity+ Loop 1 Block 20	684
5.1741	Velocity+ Loop 1 Block 21	684
5.1742	Velocity+ Loop 1 Block 22	684
5.1743	Velocity+ Loop 1 Block 23	685
5.1744	Velocity+ Loop 1 Block 24	685
5.1745	Velocity+ Loop 1 Block 25	685
5.1746	Velocity+ Loop 1 Block 26	686
5.1747	Velocity+ Loop 1 Block 27	686
5.1748	Velocity+ Loop 1 Block 28	686
5.1749	Velocity+ Loop 1 Block 29	687

5.1750	Velocity+ Loop 1 Block 30	687
5.1751	Velocity+ Loop 1 Block 31	687
5.1752	Velocity+ Loop 1 Block 32	688
5.1753	Velocity+ Loop 2 Block 1	688
5.1754	Velocity+ Loop 2 Block 2	688
5.1755	Velocity+ Loop 2 Block 3	689
5.1756	Velocity+ Loop 2 Block 4	689
5.1757	Velocity+ Loop 2 Block 5	689
5.1758	Velocity+ Loop 2 Block 6	690
5.1759	Velocity+ Loop 2 Block 7	690
5.1760	Velocity+ Loop 2 Block 8	690
5.1761	Velocity+ Loop 2 Block 9	691
5.1762	Velocity+ Loop 2 Block 10	691
5.1763	Velocity+ Loop 2 Block 11	691
5.1764	Velocity+ Loop 2 Block 12	692
5.1765	Velocity+ Loop 2 Block 13	692
5.1766	Velocity+ Loop 2 Block 14	692
5.1767	Velocity+ Loop 2 Block 15	693
5.1768	Velocity+ Loop 2 Block 16	693
5.1769	Velocity+ Loop 2 Block 17	693
5.1770	Velocity+ Loop 2 Block 18	694
5.1771	Velocity+ Loop 2 Block 19	694
5.1772	Velocity+ Loop 2 Block 20	694
5.1773	Velocity+ Loop 2 Block 21	695

5.1774	Velocity+ Loop 2 Block 22	695
5.1775	Velocity+ Loop 2 Block 23	695
5.1776	Velocity+ Loop 2 Block 24	696
5.1777	Velocity+ Loop 2 Block 25	696
5.1778	Velocity+ Loop 2 Block 26	696
5.1779	Velocity+ Loop 2 Block 27	697
5.1780	Velocity+ Loop 2 Block 28	697
5.1781	Velocity+ Loop 2 Block 29	697
5.1782	Velocity+ Loop 2 Block 30	698
5.1783	Velocity+ Loop 2 Block 31	698
5.1784	Velocity+ Loop 2 Block 32	698
5.1785	Velocity+ Loop 3 Block 1	699
5.1786	Velocity+ Loop 3 Block 2	699
5.1787	Velocity+ Loop 3 Block 3	699
5.1788	Velocity+ Loop 3 Block 4	700
5.1789	Velocity+ Loop 3 Block 5	700
5.1790	Velocity+ Loop 3 Block 6	700
5.1791	Velocity+ Loop 3 Block 7	701
5.1792	Velocity+ Loop 3 Block 8	701
5.1793	Velocity+ Loop 3 Block 9	701
5.1794	Velocity+ Loop 3 Block 10	702
5.1795	Velocity+ Loop 3 Block 11	702
5.1796	Velocity+ Loop 3 Block 12	702
5.1797	Velocity+ Loop 3 Block 13	703

5.1798	Velocity+ Loop 3 Block 14	703
5.1799	Velocity+ Loop 3 Block 15	703
5.1800	Velocity+ Loop 3 Block 16	704
5.1801	Velocity+ Loop 3 Block 17	704
5.1802	Velocity+ Loop 3 Block 18	704
5.1803	Velocity+ Loop 3 Block 19	705
5.1804	Velocity+ Loop 3 Block 20	705
5.1805	Velocity+ Loop 3 Block 21	705
5.1806	Velocity+ Loop 3 Block 22	706
5.1807	Velocity+ Loop 3 Block 23	706
5.1808	Velocity+ Loop 3 Block 24	706
5.1809	Velocity+ Loop 3 Block 25	707
5.1810	Velocity+ Loop 3 Block 26	707
5.1811	Velocity+ Loop 3 Block 27	707
5.1812	Velocity+ Loop 3 Block 28	708
5.1813	Velocity+ Loop 3 Block 29	708
5.1814	Velocity+ Loop 3 Block 30	708
5.1815	Velocity+ Loop 3 Block 31	709
5.1816	Velocity+ Loop 3 Block 32	709

1 Introduction

1 Introduction

1.1 Document

Version 1.0

1.2 General

BODAC is used to configure the tables in which the data is defined that will be exchanged between the VT-HACD-3-2x and the master over a bus system.

In the remainder of this document this will be referred to as Mapping and can be used for all bus systems of the VT-HACD-3-2x (PROFIBUS DP; Ethernet/P and PROFINET RT).

This manual only describes the installation and operation of the Controller module using the bus system. More detailed information about the installation of the controller module with the help of the BODAC software can be found in the VT-HACD-3-2x operating instructions and in the software description. Observe in particular the "General safety instructions" in Chapter 2 of documentation RE 30543-B. A list of available VT-HACD-3-2x documentation can be found in the following chapter "Additional documentation".

Additional documentation

Apart from these instructions, further documentation relating to the "VT-HACD-3-2x - Digital Control Electronics for Electromechanical and Electrohydraulic Drives" is available and can be downloaded on the internet at www.boschrexroth.com/hacd.

It includes:

- RE sheet "RE 30 543"
- Document RE 30 543-B: "Operating instructions VT-HACD-3-2x"
- Document RE 30 543-01-B: "Software description VT-HACD-3-2x"
- Document RE 30 543-01-Z: "Commissioning instructions PROFIBUS interface"
- Document RE 30 543-04-Z: "Commissioning instructions EtherNet/IP interface"
- Document RE 30 543-05-Z: "Commissioning instructions PROFINET interface"
- Document RE 30 543-10-Z: "History of firmware of the HACD-2x family and the user program BODAC"
- Document RE 30 543-U: "Declaration on environmental compatibility"


1.3 Signs and symbols used in this document

The following signs and symbols are used in this manual:

- Activity symbol: The text following this sign describes activities. These are to be performed from top to bottom in the order indicated.
- ✓ Result symbol: The text following this sign describes the result of an action.



After this symbol you will find notes and useful tips for optimal usage of the controller module.



After this symbol you will find references to related documentation.

Warning Special safety notes are given at the relevant locations. These are indicated using the following symbols.



General hazard: This sign is placed in front of activities which represent a potential hazard to persons and/or extensive damage to equipment.

2 Requirements

2 Requirements

2.1 Mapping

Mapping requirements:


- PC with Windows XP, Windows Vista or Windows 7 with an available Ethernet or COM port or one of the specified USB/RS232 converters
- BODAC (Version Bodac 2.02.00.00 or higher)
- VT-HACD-3-2x module with PROFINET (e.g. VT-HACD-3-2x/N-I-00/000)
- Experience with the bus system
- PLC with a PROFINET Master

Only qualified personnel who have experience with PROFINET should configure this controller. When connecting the control electronics, observe the relevant regulations.

The PROFINET cable should comply with category 7 (CAT-7 cable) and should have a maximum length of 100m.



The VT-HACD-3-2x can only be used as a slave device.



For detailed information on PROFINET and the cabling requirements, please refer to the PNO PROFINET specification along with following documentations:

PROFINET Design Guide (Order No. 8.062)

PROFINET Cabling and Assembly (Order No. 8.072)

PROFINET Commissioning Checklists (Order No. 8.092)

(see <http://www.profibus.com/>)

3 PROFINET

3.1 Principle

PROFINET can be used for a fast, cyclical data exchange with predefined parameters or communicate alarms or specific parameters acyclically.

For the cyclical data exchange, various parameters can be defined in a memory area of the VT-HACD-3-2x. You can make the relevant settings in the BODAC menu "Configure / Ethernet". A separate piece of memory is dedicated to the Transmit and Receive data table. Both areas have a maximum size of 64 bytes. In this memory area you have to define the parameters in the succession, in which they are to be sent to the master, or in which the master has to send them to the VT-HACD-3-2x in order that they are correctly interpreted. The parameters are either 2 bytes or 4 bytes long.

The parameters are transmitted in the internal data format of the VT-HACD-3-2x. The PLC therefore must convert each parameter in order that the correct number format is obtained. Also the limits of the parameter have to be monitored in the PLC.

3.2 Reference values

The VT-HACD-3-2x module supports baud rates up to 100Mbit/s (full-duplex) and a minimal bus cycle time of 2 ms (cyclical communication). The bus cycle time must be set in the PLC. The VT-HACD-3-2x automatically sets the correct baud rate.

Generell functionality that is supported by the VT-HACD-3-2x:

- PROFINET IO RT device
- Conformance Class A
- Protocols (CM, RTC, RTA, ARP, ICMP, LLDP)
- Alarm support
- Max. 1 API supported

3.3 IP address and device name

For the VT-HACD-3-2x the IP address can be defined in 3 different ways before commissioning:

- DHCP (Dynamic Host Configuration Protocol) (option DIL switch 1 ON)
- DIL switch address (option DIL switch 0 ON and option DIL switch 1 OFF)

3 PROFINET

- Ethernet Hardware Screen or assignment by PLC (option DIL switch 0 OFF and option DIL switch 1 OFF)

The address DIL switches and option DIL switches are provided on the front panel of the VT-HACD-3-2x:



Fig. 1 Address DIL and option DIL switches on the front panel of the VT-HACD-3-2x

If option DIL switch 1 is turned ON, the address set by means of the DIL switch is ignored. In this case, an IP address must be assigned to the VT-HACD-3-2x using DHCP. In the Ethernet Hardware Screen this can be queried with a read-only access.

In this case the device name can either be given by the PLC or it can be read and written in the BODAC Ethernet Hardware screen.

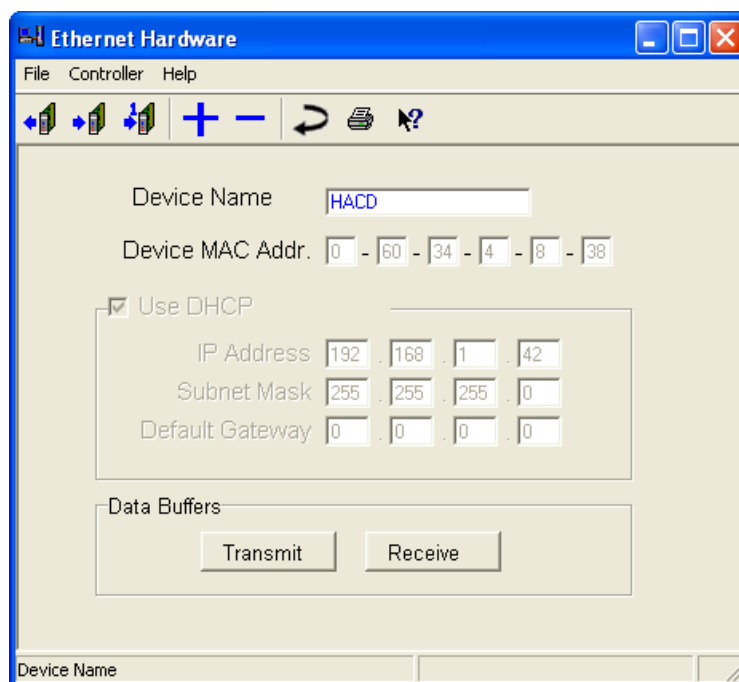


Fig. 2 Ethernet Hardware screen with DHCP activated

If option DIL switch 1 is turned to OFF, further 2 possibilities are available for assigning an address to the VT-HACD-3-2x. With the help of option DIL switch 0, the user can determine, which of the two possibilities he or she wants to choose.

If option DIL switch 0 is turned to ON, the IP address and the device name result from the set DIL switch address as follows:

IP address = 192.168.1.xxx

Device name = HACD-xxx

xxx corresponds to the set bus address, with values from 1 to 127 being permitted. If "0" is applied as bus address, the VT-HACD-3-2x automatically sets the IP address to 192.168.1.128 and the device name to "HACD-128". An example of the address 192.168.1.87 and the device name "HACD-087" is given in the following:

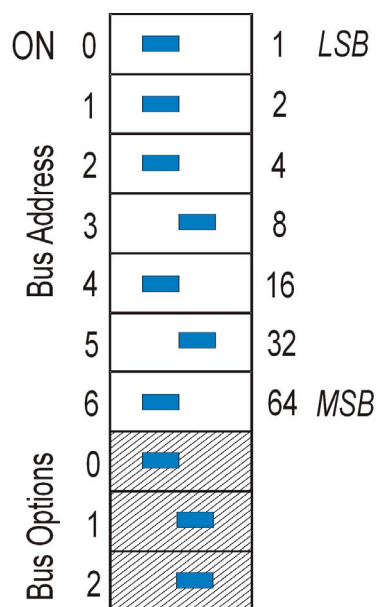


Fig. 3 Address switches

If option DIL switches 0 and 1 are both set to OFF, the user must define the IP address and the device name in the Ethernet Hardware Screen or by the PLC.

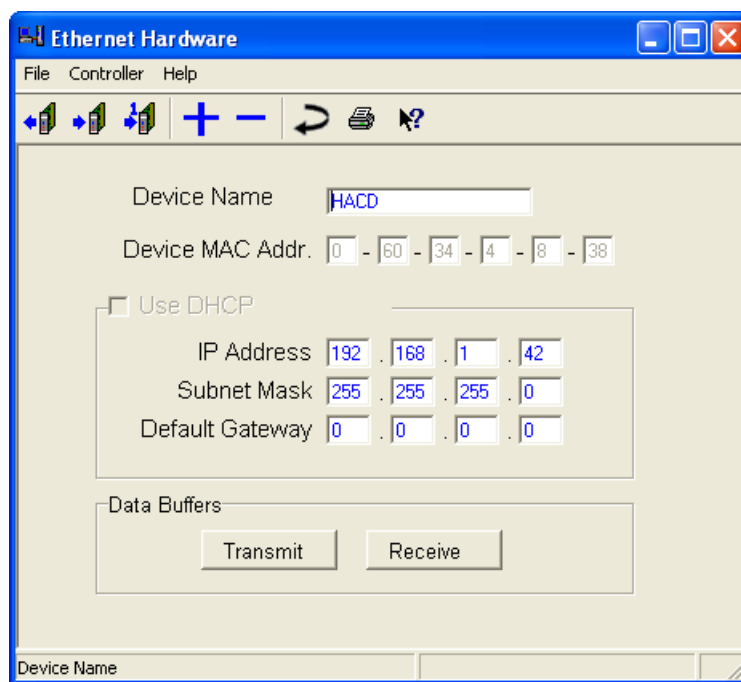


Fig. 4 Ethernet Hardware Screen with DHCP deactivated

3 PROFINET

To take effect changes in this data have to be written to the card and set permanently to memory. After that the card will be reinitialized whereupon the voltage of the card will be switched off and on again.



If you have linked more than one Ethernet capable HACD in a line, this line will shortly be disconnected while reinitializing.

The PROFINET specification defines that in the as-supplied condition, a PROFINET IO device should not have a device name and its IP address should be 0.0.0.0. That's why all DIL switches will be in the OFF position when you receive the VT-HACD-3-2x.



The address specified by the DIL switch setting is read at power-up of the VT-HACD-3-2x. An address change does not become effective until the power of the VT-HACD-3-2x is toggled. When configuring the IP address and the device name the user has to ensure that every PROFINET device connected to the fieldbus has a unique address and name. The MAC address is saved in the VT-HACD-3-2x and cannot be changed by the user.

A valid IP address and a valid device name is subject to following conditions:

- No IP and gateway address starts with 127.x.x.x (Loopback addresses)
- No IP and gateway address starts with 224.x.x.x (Multicast addresses)
- No IP address ends with x.x.x.0 (Network address)
- No IP address ends with x.x.x.255 (Broadcast address with a subnet mask of 255.255.255.00)
- The binary value of a Subnet Mask must start with ones and end with zeros (i.e. hexadecimal FF.FF.F8.00)
- Gateway address must be in the same subnet as the IP address
- Device names can:
 - o contain ≤ 240 characters (letters, numbers, "." Or "-") in total
 - o be composed of labels with a dot in between, i.e. label1.label2...
 - in which a label has 1..63 characters
 - that does not end with "-"
 - and begins with a letter or a number.
 - o A device name must not look like an IP address.

3.4 Bus fault

The status "Bus fault" appears, if there is a failure in the bus initialization or bus communication.

If there is no bus active in the beginning, then this fault shows the state of the bus after the initialization.

However, after a bus communication was established, the “bus fault” will report a failure in the communication.

3.5 Transferring data

If the bus has not established a communication the stored parameters in the module are active (parameter file).

While the bus is running, data will be exchanged with the master (PLC) and written to the module. Now the values transferred over bus are valid.

When the bus communication is stopped, the parameter value received last will be valid. This one will remain valid until the module will be shut down and restarted.

After this the last active bus parameter is cleared because the value was only stored in the RAM. Now again the data firmly stored inside the module (parameter file) are active until the bus is reactivated (COM_ACTIVE).

3.6 Network considerations

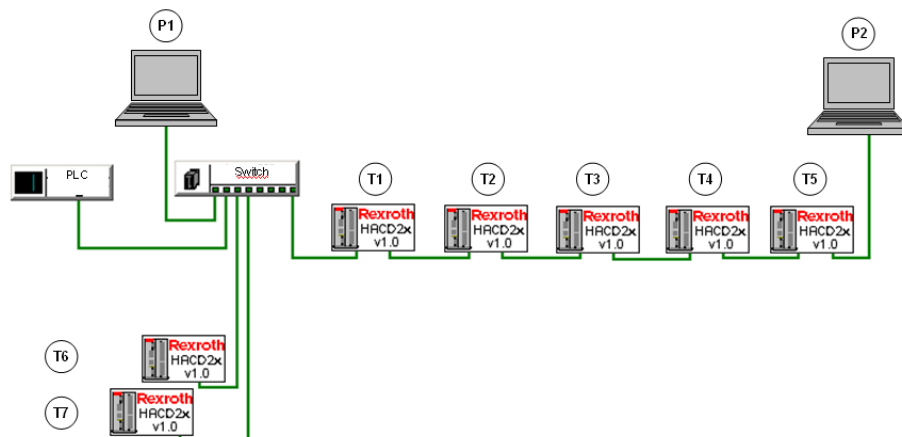


Fig. 5 Example of VT-HACD-3-2x in a network

Ethernet capable HACDs can either be linked together in a line (T1-T5) or you can use the star topology as shown with T6 and T7.

Please notice, that the communication will be momentarily disrupted, when there is a reset on any of the line-connected HACDs. For example, while T3 is initializing, T4 and T5 will not be able to communicate with the computer P1.

Real-time data should not be passed through an HACD. That means, that the computer P2 is only appropriate for service communication, i.e. parameterization, and is not suitable for real-time communication as P1.

4 Definition of cyclic data

4 Definition of cyclic data

4.1 Example of a PROFINET fieldbus communication

The parameters that are to be transferred have to be configured in the VT-HACD-3-2x as well as in the PLC. The following example illustrates this process.

At first the HACD must be assigned an IP address and a device name, see also section "IP address and device name".

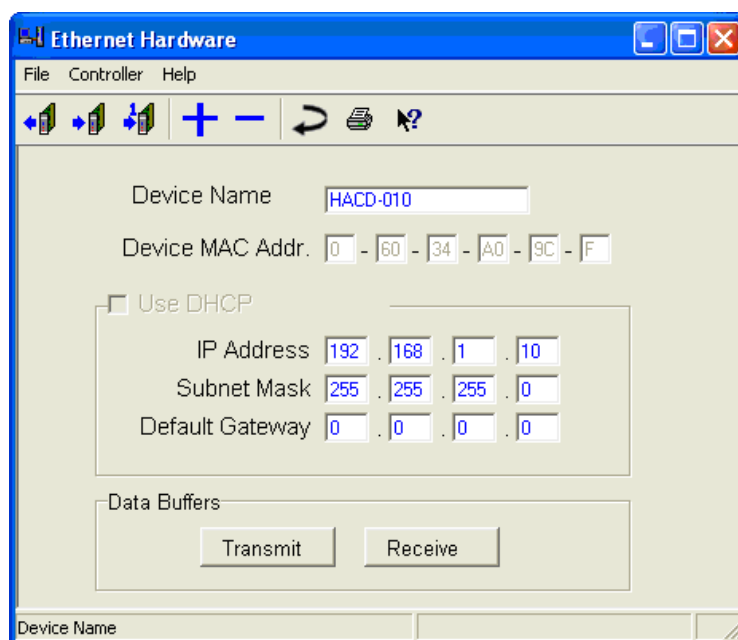


Fig. 6 Ethernet Hardware Screen: Configuration example

The following parameters are to be transferred:

Data to the VT-HACD-3-2x:
4 byte Command Loop 1 Block 1

Data from the VT-HACD-3-2x:
4 byte CON 1

Save the parameters in BODAC under menu item "Configure / Ethernet" in the memory area for Transmit and Receive data (64 byte each) in the order, in which they will have to be transmitted.

4.2 Definition of data from the VT-HACD-3-2x

The following Mapping table contains all the parameters that can be transferred from the VT-HACD-3-2x to the Master. 2-byte or 4-byte values can be selected. The figure below shows the configuration of our example:

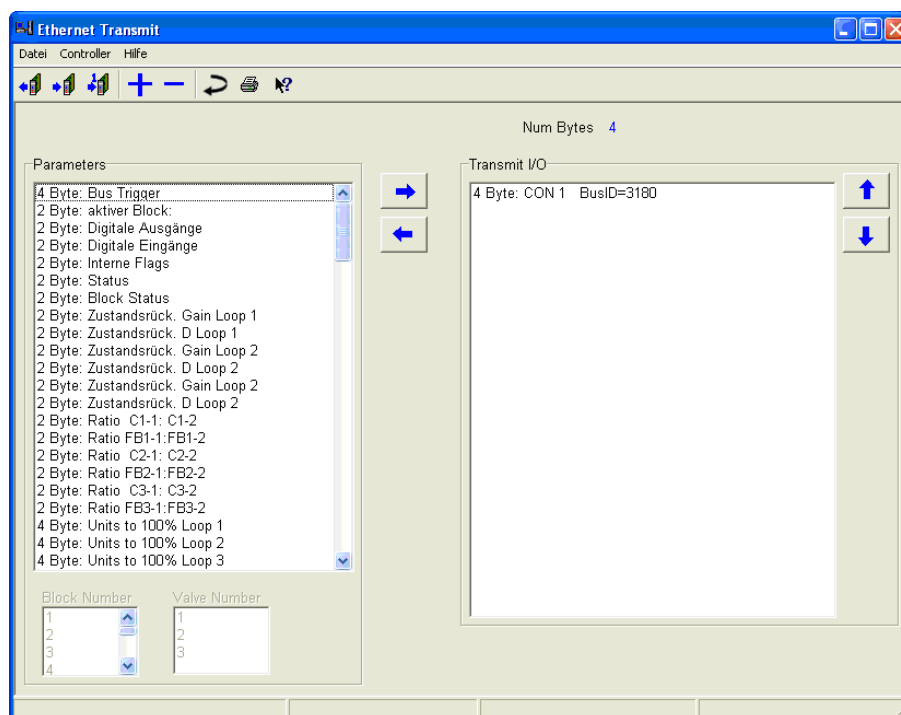


Fig. 7 "Ethernet Transmit" screen in the Bodac menu "Configure / Ethernet / Transmit"

4 Definition of cyclic data

4.3 Definition of data to the VT-HACD-3-2x

Data that is to be sent to the VT-HACD-3-2x by the Master also can be configured in the Bodac Mapping table. Below is the configuration of our example:

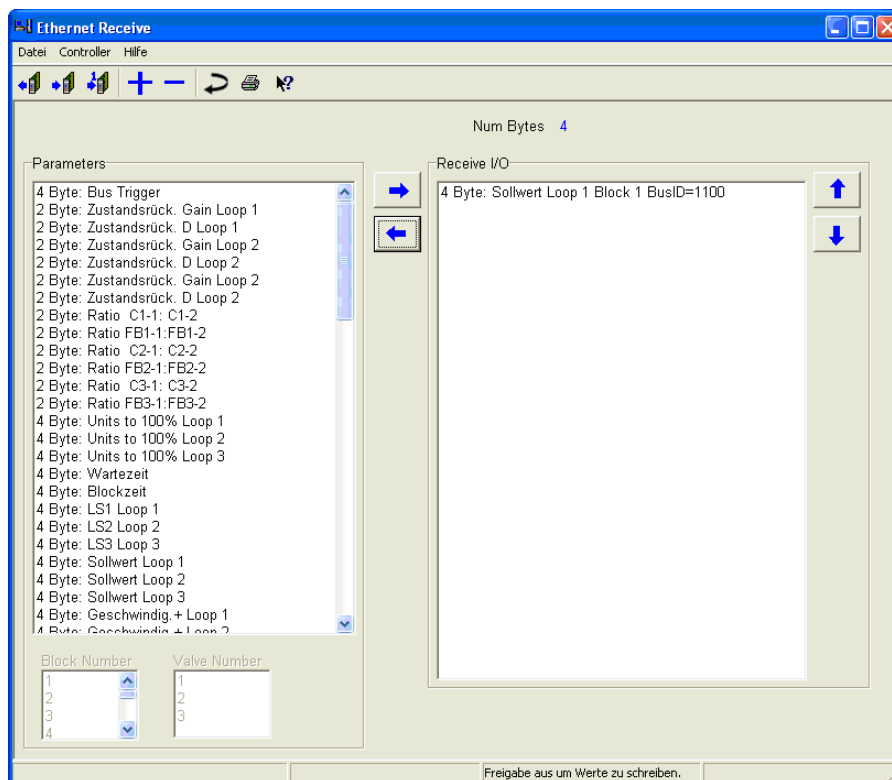


Fig. 8 "Ethernet Receive" screen in the Bodac menu "Configure /Ethernet / Receive"



After having finalized the mapped parameters this data must be stored permanently on the VT-HACD-3-2x (FLASH EPROM).

4.1 Definition of data on the PLC side (Example IndraMotion MLC)

The following configuration example is using an IndraMotion MLC L45 control of Bosch Rexroth. Therefore the screenshots shown below were taken from the Bosch Rexroth programming tool "IndraWorks" for Bosch Rexroth controls. If you use another control, the process of defining data on the PLC side may differ from the example shown here.

In the PLC the same parameters need to be configured as in the VT-HACD-3-2x.

The first step to accomplish this is to register the VT-HACD-3-2x in the IndraWorks library. When using Bosch Rexroth IndraWorks software, the user can add the VT-HACD-3-2x in the library by entering the file "GSDML-V2.1-Bosch-Rexroth-011F-HACD-3-2x-20100714.xml" under the menu "Device Database...".

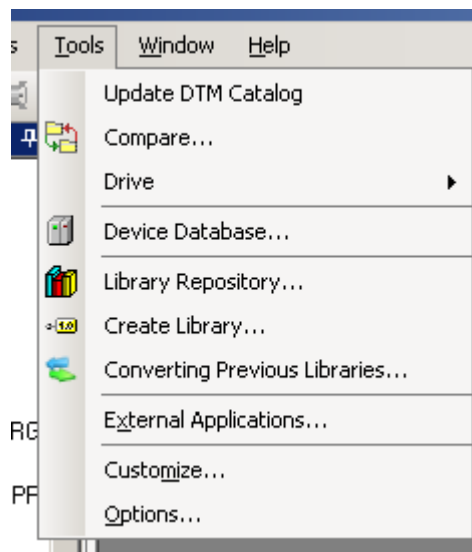


Fig. 9 Install GSDML File in IndraWorks



The GSDML file is part of BODAC (see folder "Field bus") and can be downloaded from the Bosch Rexroth Homepage.

As a result the VT-HACD-3-2x together with its 2- and 4-byte values is listed under "Peripherals / ProfinetIO / Controllers" and can be drawn and dropped from the library into the project.



The structure of the transferred parameters in the PLC has to be the same as in the bus manager of BODAC. You have to start with the data from the VT-HACD-3-2x. If the lists of the PLC and the VT-HACD-3-2x do not match, a Configuration Error is the result and the bus communication is stopped.

4 Definition of cyclic data

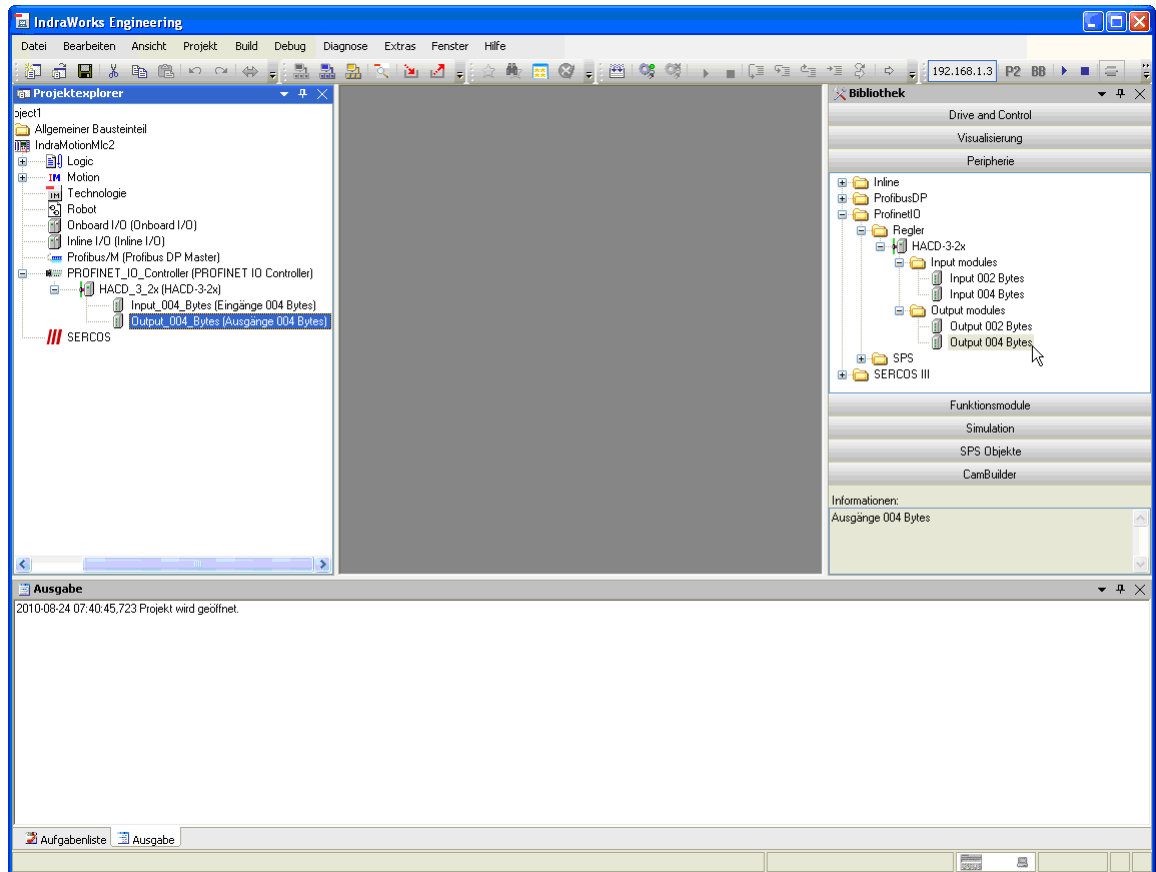


Fig. 10 IndraWorks Library and Project Explorer

The IP address and the station name can be set in the module configuration, which opens by double clicking on the module. The station name has to be identical with the device name given to the VT-HACD-3-2x modul in the Bodac "Ethernet Hardware Screen".

Definition of cyclic data 4

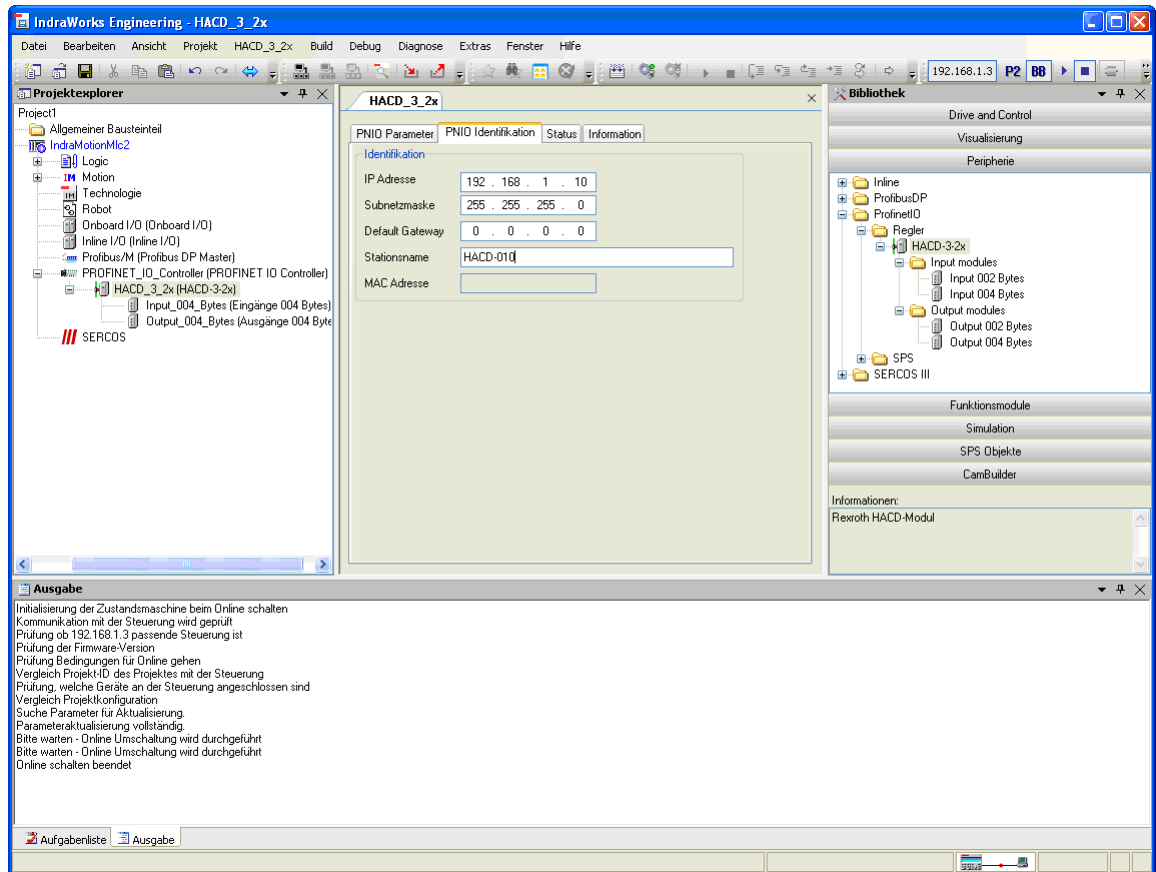


Fig. 11 IndraWorks Module settings of the HACD-3-2x

4 Definition of cyclic data

4.2 Definition of data on the PLC side (example Siemens S7)

The following configuration example is using a Siemens S7 PLC. Therefore the pictures shown below were taken from the Siemens programming tool "Step 7". The definition of data on the PLC side can look different to this if you are using a different PLC.

In the PLC the same parameters need to be configured as in the VT-HACD-3-2x.

The first step to accomplish this is to register the VT-HACD-3-2x in the PROFINET system. When using Siemens STEP 7 software, the user can add the VT-HACD-3-2x in the Hardware Catalog by entering the file "GSDML-V2.1-Bosch-Rexroth-011F-HACD-3-2x-20100714.xml" under the menu "Install GSD files".

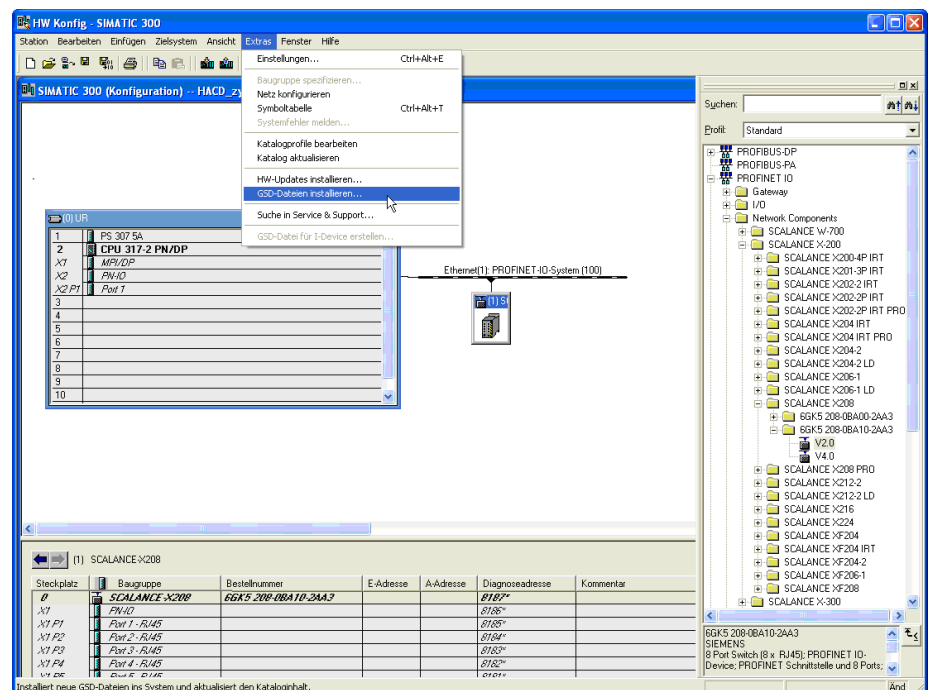


Fig. 12 Install GSDML File in Step 7



The GSDML file is part of BODAC (see folder "Fieldbus") and can be downloaded from the Bosch Rexroth Homepage.

As a result the VT-HACD-3-2x is listed under "Weitere Feldgeräte / Controllers / Rexroth /" and can be drawn and dropped from the Hardware Catalog into the project.

The station name has to be identical with the device name given to the VT-HACD-3-2x module in the Bodac "Ethernet Hardware Screen".

Now the 2- and 4-byte values have to be configured. The configuration of these values on the PLC side have to correspond to the configuration of the VT-HACD-3-2x. In the following figure the configuration on the PLC side is shown for our example:

Definition of cyclic data 4

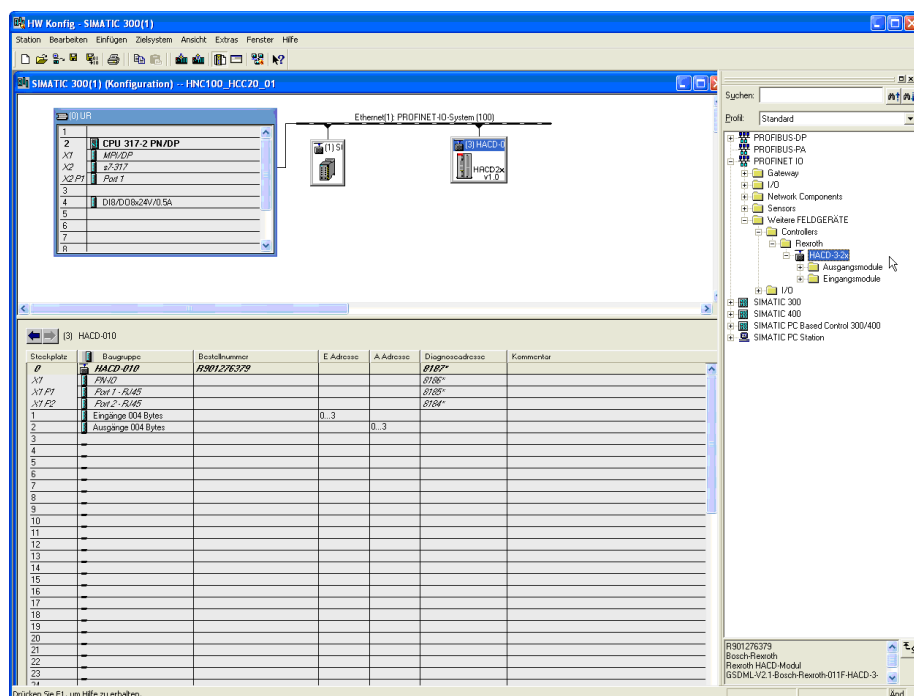


Fig. 13 S7 Hardware catalog and Hardware configuration



The structure of the parameter list must have the same order on the PLC side and in the bus manager of BODAC. The configuration is started with the data from the VT-HACD-3-2x. If the configuration of the PLC and the VT-HACD-3-2x do not match, a Configuration Error is the result and the bus communication is stopped.

4 Definition of cyclic data

4.3 Data conversion

The internal data format of the VT-HACD-3-2x is used for the data transfer. Therefore all data to and from the VT-HACD-3-2x has to be converted in the PLC. "Offset" and "Scale" are needed for this conversion for each parameter and can be found in the bus parameter table. The values for both, "Scale" and "Offset", can differ from parameter to parameter.

Use the following convention for the data format conversion.

PLC -> VT-HACD-3-2x:
 $(\text{EU\_Value} - \text{offset}) * \text{scale} = \text{Internal\_transfervalue}$

VT-HACD-3-2x -> PLC:
 $(\text{Internal\_transfervalue} / \text{scale}) + \text{offset} = \text{EU\_Value}$

EU_value = Engineering Unit

Internal_transfervalue = Internal data format of the VT-HACD-3-2x

If you want to transfer, for example, the command value "CMD1" to the VT-HACD-3-2x the following values from the parameter table need to be used:

Name		CMD1	
Slot	Index	0x11	0xFE
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enable	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

$$(4,00 - 0,00) * 327,67 = 1310,68 \text{ (decimal)}$$

This value is mathematically rounded (= 1311) and converted into a hexadecimal value (= 0x051F). Now the value can be transferred.



Testing transfer data for limits (min/max value) also has to be performed by the PLC. Values that are outside the parameter limits can result in incorrect data being used by the VT-HACD-3-2x (e.g. overflow can result in a negative number instead of a large positive number).



In Min./Max. Value, Scale and Offset, commas will be used as decimal separator. This is the Middle European standard instead of using the decimal point.

5 Bus parameters

5.1 Accel. Rate Loop 1 Block 1

Name		Accel. Rate Loop 1 Block 1	
Slot	Index	0x07	0x67
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.2 Accel. Rate Loop 1 Block 2

Name		Accel. Rate Loop 1 Block 2	
Slot	Index	0x07	0x68
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.3 Accel. Rate Loop 1 Block 3

Name		Accel. Rate Loop 1 Block 3	
Slot	Index	0x07	0x69
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.4 Accel. Rate Loop 1 Block 4

Name		Accel. Rate Loop 1 Block 4	
Slot	Index	0x07	0x6A
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.5 Accel. Rate Loop 1 Block 5

Name		Accel. Rate Loop 1 Block 5	
Slot	Index	0x07	0x6B
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.6 Accel. Rate Loop 1 Block 6

Name		Accel. Rate Loop 1 Block 6	
Slot	Index	0x07	0x6C
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.7 Accel. Rate Loop 1 Block 7

Name		Accel. Rate Loop 1 Block 7	
Slot	Index	0x07	0x6D
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.8 Accel. Rate Loop 1 Block 8

Name		Accel. Rate Loop 1 Block 8	
Slot	Index	0x07	0x6E
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.9 Accel. Rate Loop 1 Block 9

Name		Accel. Rate Loop 1 Block 9	
Slot	Index	0x07	0x6F
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.10 Accel. Rate Loop 1 Block 10

Name		Accel. Rate Loop 1 Block 10	
Slot	Index	0x07	0x70
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.11 Accel. Rate Loop 1 Block 11

Name		Accel. Rate Loop 1 Block 11	
Slot	Index	0x07	0x71
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.12 Accel. Rate Loop 1 Block 12

Name		Accel. Rate Loop 1 Block 12	
Slot	Index	0x07	0x72
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.13 Accel. Rate Loop 1 Block 13

Name		Accel. Rate Loop 1 Block 13	
Slot	Index	0x07	0x73
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.14 Accel. Rate Loop 1 Block 14

Name		Accel. Rate Loop 1 Block 14	
Slot	Index	0x07	0x74
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.15 Accel. Rate Loop 1 Block 15

Name		Accel. Rate Loop 1 Block 15	
Slot	Index	0x07	0x75
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.16 Accel. Rate Loop 1 Block 16

Name		Accel. Rate Loop 1 Block 16	
Slot	Index	0x07	0x76
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.17 Accel. Rate Loop 1 Block 17

Name		Accel. Rate Loop 1 Block 17	
Slot	Index	0x07	0x77
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.18 Accel. Rate Loop 1 Block 18

Name		Accel. Rate Loop 1 Block 18	
Slot	Index	0x07	0x78
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.19 Accel. Rate Loop 1 Block 19

Name		Accel. Rate Loop 1 Block 19	
Slot	Index	0x07	0x79
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.20 Accel. Rate Loop 1 Block 20

Name		Accel. Rate Loop 1 Block 20	
Slot	Index	0x07	0x7A
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.21 Accel. Rate Loop 1 Block 21

Name		Accel. Rate Loop 1 Block 21	
Slot	Index	0x07	0x7B
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.22 Accel. Rate Loop 1 Block 22

Name		Accel. Rate Loop 1 Block 22	
Slot	Index	0x07	0x7C
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.23 Accel. Rate Loop 1 Block 23

Name		Accel. Rate Loop 1 Block 23	
Slot	Index	0x07	0x7D
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.24 Accel. Rate Loop 1 Block 24

Name		Accel. Rate Loop 1 Block 24	
Slot	Index	0x07	0x7E
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.25 Accel. Rate Loop 1 Block 25

Name		Accel. Rate Loop 1 Block 25	
Slot	Index	0x07	0x7F
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.26 Accel. Rate Loop 1 Block 26

Name		Accel. Rate Loop 1 Block 26	
Slot	Index	0x07	0x80
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.27 Accel. Rate Loop 1 Block 27

Name		Accel. Rate Loop 1 Block 27	
Slot	Index	0x07	0x81
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.28 Accel. Rate Loop 1 Block 28

Name		Accel. Rate Loop 1 Block 28	
Slot	Index	0x07	0x82
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.29 Accel. Rate Loop 1 Block 29

Name		Accel. Rate Loop 1 Block 29	
Slot	Index	0x07	0x83
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.30 Accel. Rate Loop 1 Block 30

Name		Accel. Rate Loop 1 Block 30	
Slot	Index	0x07	0x84
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.31 Accel. Rate Loop 1 Block 31

Name		Accel. Rate Loop 1 Block 31	
Slot	Index	0x07	0x85
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.32 Accel. Rate Loop 1 Block 32

Name		Accel. Rate Loop 1 Block 32	
Slot	Index	0x07	0x86
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.33 Accel. Rate Loop 2 Block 1

Name		Accel. Rate Loop 2 Block 1	
Slot	Index	0x07	0x89
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.34 Accel. Rate Loop 2 Block 2

Name		Accel. Rate Loop 2 Block 2	
Slot	Index	0x07	0x8A
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.35 Accel. Rate Loop 2 Block 3

Name		Accel. Rate Loop 2 Block 3	
Slot	Index	0x07	0x8B
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.36 Accel. Rate Loop 2 Block 4

Name		Accel. Rate Loop 2 Block 4	
Slot	Index	0x07	0x8C
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.37 Accel. Rate Loop 2 Block 5

Name		Accel. Rate Loop 2 Block 5	
Slot	Index	0x07	0x8D
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.38 Accel. Rate Loop 2 Block 6

Name		Accel. Rate Loop 2 Block 6	
Slot	Index	0x07	0x8E
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.39 Accel. Rate Loop 2 Block 7

Name		Accel. Rate Loop 2 Block 7	
Slot	Index	0x07	0x8F
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.40 Accel. Rate Loop 2 Block 8

Name		Accel. Rate Loop 2 Block 8	
Slot	Index	0x07	0x90
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.41 Accel. Rate Loop 2 Block 9

Name		Accel. Rate Loop 2 Block 9	
Slot	Index	0x07	0x91
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.42 Accel. Rate Loop 2 Block 10

Name		Accel. Rate Loop 2 Block 10	
Slot	Index	0x07	0x92
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.43 Accel. Rate Loop 2 Block 11

Name		Accel. Rate Loop 2 Block 11	
Slot	Index	0x07	0x93
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.44 Accel. Rate Loop 2 Block 12

Name		Accel. Rate Loop 2 Block 12	
Slot	Index	0x07	0x94
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.45 Accel. Rate Loop 2 Block 13

Name		Accel. Rate Loop 2 Block 13	
Slot	Index	0x07	0x95
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.46 Accel. Rate Loop 2 Block 14

Name		Accel. Rate Loop 2 Block 14	
Slot	Index	0x07	0x96
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.47 Accel. Rate Loop 2 Block 15

Name		Accel. Rate Loop 2 Block 15	
Slot	Index	0x07	0x97
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.48 Accel. Rate Loop 2 Block 16

Name		Accel. Rate Loop 2 Block 16	
Slot	Index	0x07	0x98
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.49 Accel. Rate Loop 2 Block 17

Name		Accel. Rate Loop 2 Block 17	
Slot	Index	0x07	0x99
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.50 Accel. Rate Loop 2 Block 18

Name		Accel. Rate Loop 2 Block 18	
Slot	Index	0x07	0x9A
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.51 Accel. Rate Loop 2 Block 19

Name		Accel. Rate Loop 2 Block 19	
Slot	Index	0x07	0x9B
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.52 Accel. Rate Loop 2 Block 20

Name		Accel. Rate Loop 2 Block 20	
Slot	Index	0x07	0x9C
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.53 Accel. Rate Loop 2 Block 21

Name		Accel. Rate Loop 2 Block 21	
Slot	Index	0x07	0x9D
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.54 Accel. Rate Loop 2 Block 22

Name		Accel. Rate Loop 2 Block 22	
Slot	Index	0x07	0x9E
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.55 Accel. Rate Loop 2 Block 23

Name		Accel. Rate Loop 2 Block 23	
Slot	Index	0x07	0x9F
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.56 Accel. Rate Loop 2 Block 24

Name		Accel. Rate Loop 2 Block 24	
Slot	Index	0x07	0xA0
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.57 Accel. Rate Loop 2 Block 25

Name		Accel. Rate Loop 2 Block 25	
Slot	Index	0x07	0xA1
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.58 Accel. Rate Loop 2 Block 26

Name		Accel. Rate Loop 2 Block 26	
Slot	Index	0x07	0xA2
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.59 Accel. Rate Loop 2 Block 27

Name		Accel. Rate Loop 2 Block 27	
Slot	Index	0x07	0xA3
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.60 Accel. Rate Loop 2 Block 28

Name		Accel. Rate Loop 2 Block 28	
Slot	Index	0x07	0xA4
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.61 Accel. Rate Loop 2 Block 29

Name		Accel. Rate Loop 2 Block 29	
Slot	Index	0x07	0xA5
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.62 Accel. Rate Loop 2 Block 30

Name		Accel. Rate Loop 2 Block 30	
Slot	Index	0x07	0xA6
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.63 Accel. Rate Loop 2 Block 31

Name		Accel. Rate Loop 2 Block 31	
Slot	Index	0x07	0xA7
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.64 Accel. Rate Loop 2 Block 32

Name		Accel. Rate Loop 2 Block 32	
Slot	Index	0x07	0xA8
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.65 Accel. Rate Loop 3 Block 1

Name		Accel. Rate Loop 3 Block 1	
Slot	Index	0x07	0xAB
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.66 Accel. Rate Loop 3 Block 2

Name		Accel. Rate Loop 3 Block 2	
Slot	Index	0x07	0xAC
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.67 Accel. Rate Loop 3 Block 3

Name		Accel. Rate Loop 3 Block 3	
Slot	Index	0x07	0xAD
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.68 Accel. Rate Loop 3 Block 4

Name		Accel. Rate Loop 3 Block 4	
Slot	Index	0x07	0xAE
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.69 Accel. Rate Loop 3 Block 5

Name		Accel. Rate Loop 3 Block 5	
Slot	Index	0x07	0xAF
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.70 Accel. Rate Loop 3 Block 6

Name		Accel. Rate Loop 3 Block 6	
Slot	Index	0x07	0xB0
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.71 Accel. Rate Loop 3 Block 7

Name		Accel. Rate Loop 3 Block 7	
Slot	Index	0x07	0xB1
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.72 Accel. Rate Loop 3 Block 8

Name		Accel. Rate Loop 3 Block 8	
Slot	Index	0x07	0xB2
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.73 Accel. Rate Loop 3 Block 9

Name		Accel. Rate Loop 3 Block 9	
Slot	Index	0x07	0xB3
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.74 Accel. Rate Loop 3 Block 10

Name		Accel. Rate Loop 3 Block 10	
Slot	Index	0x07	0xB4
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.75 Accel. Rate Loop 3 Block 11

Name		Accel. Rate Loop 3 Block 11	
Slot	Index	0x07	0xB5
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.76 Accel. Rate Loop 3 Block 12

Name		Accel. Rate Loop 3 Block 12	
Slot	Index	0x07	0xB6
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.77 Accel. Rate Loop 3 Block 13

Name		Accel. Rate Loop 3 Block 13	
Slot	Index	0x07	0xB7
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.78 Accel. Rate Loop 3 Block 14

Name		Accel. Rate Loop 3 Block 14	
Slot	Index	0x07	0xB8
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.79 Accel. Rate Loop 3 Block 15

Name		Accel. Rate Loop 3 Block 15	
Slot	Index	0x07	0xB9
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.80 Accel. Rate Loop 3 Block 16

Name		Accel. Rate Loop 3 Block 16	
Slot	Index	0x07	0xBA
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.81 Accel. Rate Loop 3 Block 17

Name		Accel. Rate Loop 3 Block 17	
Slot	Index	0x07	0xBB
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.82 Accel. Rate Loop 3 Block 18

Name		Accel. Rate Loop 3 Block 18	
Slot	Index	0x07	0xBC
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.83 Accel. Rate Loop 3 Block 19

Name		Accel. Rate Loop 3 Block 19	
Slot	Index	0x07	0xBD
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.84 Accel. Rate Loop 3 Block 20

Name		Accel. Rate Loop 3 Block 20	
Slot	Index	0x07	0xBE
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.85 Accel. Rate Loop 3 Block 21

Name		Accel. Rate Loop 3 Block 21	
Slot	Index	0x07	0xBF
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.86 Accel. Rate Loop 3 Block 22

Name		Accel. Rate Loop 3 Block 22	
Slot	Index	0x07	0xC0
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.87 Accel. Rate Loop 3 Block 23

Name		Accel. Rate Loop 3 Block 23	
Slot	Index	0x07	0xC1
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.88 Accel. Rate Loop 3 Block 24

Name		Accel. Rate Loop 3 Block 24	
Slot	Index	0x07	0xC2
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.89 Accel. Rate Loop 3 Block 25

Name		Accel. Rate Loop 3 Block 25	
Slot	Index	0x07	0xC3
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.90 Accel. Rate Loop 3 Block 26

Name		Accel. Rate Loop 3 Block 26	
Slot	Index	0x07	0xC4
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.91 Accel. Rate Loop 3 Block 27

Name		Accel. Rate Loop 3 Block 27	
Slot	Index	0x07	0xC5
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.92 Accel. Rate Loop 3 Block 28

Name		Accel. Rate Loop 3 Block 28	
Slot	Index	0x07	0xC6
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.93 Accel. Rate Loop 3 Block 29

Name		Accel. Rate Loop 3 Block 29	
Slot	Index	0x07	0xC7
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.94 Accel. Rate Loop 3 Block 30

Name		Accel. Rate Loop 3 Block 30	
Slot	Index	0x07	0xC8
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.95 Accel. Rate Loop 3 Block 31

Name		Accel. Rate Loop 3 Block 31	
Slot	Index	0x07	0xC9
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.96 Accel. Rate Loop 3 Block 32

Name		Accel. Rate Loop 3 Block 32	
Slot	Index	0x07	0xCA
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.97 Accuracy window Valve 1

Name		Accuracy window Valve 1	
Slot	Index	0x10	0x3F
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	100,0
Scale	Offset	327,7	0,0

5.98 Accuracy window Valve 2

Name		Accuracy window Valve 2	
Slot	Index	0x10	0x40
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	100,0
Scale	Offset	327,7	0,0

5.99 Accuracy window Valve 3

Name		Accuracy window Valve 3	
Slot	Index	0x10	0x41
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	100,0
Scale	Offset	327,7	0,0

5 Bus parameters

5.100 Active Block

Name		Active Block	
Slot	Index	0x10	0x25
Bytes	Units	2	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	32
Scale	Offset	1	1

5.101 AI1 max

Name		AI1 max	
Slot	Index	0x0F	0x7C
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,00 / -2,00	11,00 / 22,00
Scale	Offset	1638,35 / 819,18	0,00

5.102 AI1 max fault

Name		AI1 max fault	
Slot	Index	0x0F	0x92
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,0 / -2,0	11,0 / 22,0
Scale	Offset	1638,4 / 819,2	0,0

5.103 AI1 max Units

Name		AI1 max Units	
Slot	Index	0x0F	0x9D
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,0	50000,0
Scale	Offset	327,7	0,0

5.104 AI1 min

Name		AI1 min	
Slot	Index	0x0F	0x71
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,00 / -2,00	11,00 / 22,00
Scale	Offset	1638,35 / 819,18	0,00

5.105 AI1 min fault

Name		AI1 min fault	
Slot	Index	0x0F	0x87
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,0 / -2,0	11,0 / 22,0
Scale	Offset	1638,4 / 819,2	0,0

5 Bus parameters

5.106 AI1 Range

Name		AI1 Range	
Slot	Index	0x0D	0xAB
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0
Description		+/-100% = 0x00 0~100% = 0x01	

5.107 AI1 Type

Name		AI1 Type	
Slot	Index	0x0D	0xA2
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		not available	
Min./Max. Value		0	3
Scale	Offset	1	0
Description		+/-10V = 0x00 0~10V = 0x01 0~20mA = 0x02 4~20mA = 0x03	

5.108 AI2 max

Name		AI2 max	
Slot	Index	0x0F	0x7D
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,00 / -2,00	11,00 / 22,00
Scale	Offset	1638,35 / 819,18	0,00

5.109 AI2 max fault

Name		AI2 max fault	
Slot	Index	0x0F	0x93
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,0 / -2,0	11,0 / 22,0
Scale	Offset	1638,4 / 819,2	0,0

5.110 AI2 max Units

Name		AI2 max Units	
Slot	Index	0x0F	0x9E
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,0	50000,0
Scale	Offset	327,7	0,0

5.111 AI2 min

Name		AI2 min	
Slot	Index	0x0F	0x72
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,00 / -2,00	11,00 / 22,00
Scale	Offset	1638,35 / 819,18	0,00

5 Bus parameters

5.112 AI2 min fault

Name		AI2 min fault	
Slot	Index	0x0F	0x88
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,0 / -2,0	11,0 / 22,0
Scale	Offset	1638,4 / 819,2	0,0

5.113 AI2 Range

Name		AI2 Range	
Slot	Index	0x0D	0xAC
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0
Description		+/-100% = 0x00 0~100% = 0x01	

5.114 AI2 Type

Name		AI2 Type	
Slot	Index	0x0D	0xA3
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		not available	
Min./Max. Value		0	3
Scale	Offset	1	0
Description		+/-10V = 0x00 0~10V = 0x01 0~20mA = 0x02 4~20mA = 0x03	

5.115 AI3 max

Name		AI3 max	
Slot	Index	0x0F	0x7E
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,00 / -2,00	11,00 / 22,00
Scale	Offset	1638,35 / 819,18	0,00

5.116 AI3 max fault

Name		AI3 max fault	
Slot	Index	0x0F	0x94
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,0 / -2,0	11,0 / 22,0
Scale	Offset	1638,4 / 819,2	0,0

5.117 AI3 max Units

Name		AI3 max Units	
Slot	Index	0x0F	0x9F
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,0	50000,0
Scale	Offset	327,7	0,0

5 Bus parameters

5.118 AI3 min

Name		AI3 min	
Slot	Index	0x0F	0x73
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,00 / -2,00	11,00 / 22,00
Scale	Offset	1638,35 / 819,18	0,00

5.119 AI3 min fault

Name		AI3 min fault	
Slot	Index	0x0F	0x89
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,0 / -2,0	11,0 / 22,0
Scale	Offset	1638,4 / 819,2	0,0

5.120 AI3 Range

Name		AI3 Range	
Slot	Index	0x0D	0xAD
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0
Description		+/-100% = 0x00 0~100% = 0x01	

5.121 AI3 Type

Name		AI3 Type	
Slot	Index	0x0D	0xA4
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		not available	
Min./Max. Value		0	3
Scale	Offset	1	0
Description		+/-10V = 0x00 0~10V = 0x01 0~20mA = 0x02 4~20mA = 0x03	

5.122 AI4 max

Name		AI4 max	
Slot	Index	0x0F	0x7F
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,00 / -2,00	11,00 / 22,00
Scale	Offset	1638,35 / 819,18	0,00

5.123 AI4 max fault

Name		AI4 max fault	
Slot	Index	0x0F	0x95
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,0 / -2,0	11,0 / 22,0
Scale	Offset	1638,4 / 819,2	0,0

5 Bus parameters

5.124 AI4 max Units

Name		AI4 max Units	
Slot	Index	0x0F	0xA0
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,0	50000,0
Scale	Offset	327,7	0,0

5.125 AI4 min

Name		AI4 min	
Slot	Index	0x0F	0x74
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,00 / -2,00	11,00 / 22,00
Scale	Offset	1638,35 / 819,18	0,00

5.126 AI4 min fault

Name		AI4 min fault	
Slot	Index	0x0F	0x8A
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,0 / -2,0	11,0 / 22,0
Scale	Offset	1638,4 / 819,2	0,0

5.127 AI4 Range

Name		AI4 Range	
Slot	Index	0x0D	0xAE
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0
Description		+/-100% = 0x00 0~100% = 0x01	

5.128 AI4 Type

Name		AI4 Type	
Slot	Index	0x0D	0xA5
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		not available	
Min./Max. Value		0	3
Scale	Offset	1	0
Description		+/-10V = 0x00 0~10V = 0x01 0~20mA = 0x02 4~20mA = 0x03	

5.129 AI5 max

Name		AI5 max	
Slot	Index	0x0F	0x80
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,00 / -2,00	11,00 / 22,00
Scale	Offset	1638,35 / 819,18	0,00

5 Bus parameters

5.130 AI5 max fault

Name		AI5 max fault	
Slot	Index	0x0F	0x96
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,0 / -2,0	11,0 / 22,0
Scale	Offset	1638,4 / 819,2	0,0

5.131 AI5 max Units

Name		AI5 max Units	
Slot	Index	0x0F	0xA1
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,0	50000,0
Scale	Offset	327,7	0,0

5.132 AI5 min

Name		AI5 min	
Slot	Index	0x0F	0x75
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,00 / -2,00	11,00 / 22,00
Scale	Offset	1638,35 / 819,18	0,00

5.133 AI5 min fault

Name		AI5 min fault	
Slot	Index	0x0F	0x8B
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,0 / -2,0	11,0 / 22,0
Scale	Offset	1638,4 / 819,2	0,0

5.134 AI5 Range

Name		AI5 Range	
Slot	Index	0x0D	0xAF
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0
Description		+/-100% = 0x00 0~100% = 0x01	

5.135 AI5 Type

Name		AI5 Type	
Slot	Index	0x0D	0xA6
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		not available	
Min./Max. Value		0	3
Scale	Offset	1	0
Description		+/-10V = 0x00 0~10V = 0x01 0~20mA = 0x02 4~20mA = 0x03	

5 Bus parameters

5.136 AI6 max

Name		AI6 max	
Slot	Index	0x0F	0x81
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,00 / -2,00	11,00 / 22,00
Scale	Offset	1638,35 / 819,18	0,00

5.137 AI6 max fault

Name		AI6 max fault	
Slot	Index	0x0F	0x97
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,0 / -2,0	11,0 / 22,0
Scale	Offset	1638,4 / 819,2	0,0

5.138 AI6 max Units

Name		AI6 max Units	
Slot	Index	0x0F	0xA2
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,0	50000,0
Scale	Offset	327,7	0,0

5.139 AI6 min

Name		AI6 min	
Slot	Index	0x0F	0x76
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,00 / -2,00	11,00 / 22,00
Scale	Offset	1638,35 / 819,18	0,00

5.140 AI6 min fault

Name		AI6 min fault	
Slot	Index	0x0F	0x8C
Bytes	Units	2	V / mA
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-11,0 / -2,0	11,0 / 22,0
Scale	Offset	1638,4 / 819,2	0,0

5.141 AI6 Range

Name		AI6 Range	
Slot	Index	0x0D	0xB0
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0
Description		+/-100% = 0x00 0~100% = 0x01	

5 Bus parameters

5.142 AI6 Type

Name		AI6 Type	
Slot	Index	0x0D	0xA7
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		not available	
Min./Max. Value		0	3
Scale	Offset	1	0
Description		+/-10V = 0x00 0~10V = 0x01 0~20mA = 0x02 4~20mA = 0x03	

5.143 Block Status

Name		Block Status	
Slot	Index	0x11	0x34
Bytes	Units	2	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	5
Scale	Offset	1	0
Description		0x0101 Stop 0x0001 Pause 0x0000 Active	

5.144 Blocktime Block 1

Name		Blocktime Block 1	
Slot	Index	0x0C	0x01
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.145 Blocktime Block 2

Name		Blocktime Block 2	
Slot	Index	0x0C	0x02
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.146 Blocktime Block 3

Name		Blocktime Block 3	
Slot	Index	0x0C	0x03
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5 Bus parameters

5.147 Blocktime Block 4

Name		Blocktime Block 4	
Slot	Index	0x0C	0x04
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.148 Blocktime Block 5

Name		Blocktime Block 5	
Slot	Index	0x0C	0x05
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.149 Blocktime Block 6

Name		Blocktime Block 6	
Slot	Index	0x0C	0x06
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.150 Blocktime Block 7

Name		Blocktime Block 7	
Slot	Index	0x0C	0x07
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.151 Blocktime Block 8

Name		Blocktime Block 8	
Slot	Index	0x0C	0x08
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.152 Blocktime Block 9

Name		Blocktime Block 9	
Slot	Index	0x0C	0x09
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5 Bus parameters

5.153 Blocktime Block 10

Name		Blocktime Block 10	
Slot	Index	0x0C	0x0A
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.154 Blocktime Block 11

Name		Blocktime Block 11	
Slot	Index	0x0C	0x0B
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.155 Blocktime Block 12

Name		Blocktime Block 12	
Slot	Index	0x0C	0x0C
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.156 Blocktime Block 13

Name		Blocktime Block 13	
Slot	Index	0x0C	0x0D
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.157 Blocktime Block 14

Name		Blocktime Block 14	
Slot	Index	0x0C	0x0E
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.158 Blocktime Block 15

Name		Blocktime Block 15	
Slot	Index	0x0C	0x0F
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5 Bus parameters

5.159 Blocktime Block 16

Name		Blocktime Block 16	
Slot	Index	0x0C	0x10
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.160 Blocktime Block 17

Name		Blocktime Block 17	
Slot	Index	0x0C	0x11
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.161 Blocktime Block 18

Name		Blocktime Block 18	
Slot	Index	0x0C	0x12
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.162 Blocktime Block 19

Name		Blocktime Block 19	
Slot	Index	0x0C	0x13
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.163 Blocktime Block 20

Name		Blocktime Block 20	
Slot	Index	0x0C	0x14
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.164 Blocktime Block 21

Name		Blocktime Block 21	
Slot	Index	0x0C	0x15
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5 Bus parameters

5.165 Blocktime Block 22

Name		Blocktime Block 22	
Slot	Index	0x0C	0x16
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.166 Blocktime Block 23

Name		Blocktime Block 23	
Slot	Index	0x0C	0x17
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.167 Blocktime Block 24

Name		Blocktime Block 24	
Slot	Index	0x0C	0x18
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.168 Blocktime Block 25

Name		Blocktime Block 25	
Slot	Index	0x0C	0x19
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.169 Blocktime Block 26

Name		Blocktime Block 26	
Slot	Index	0x0C	0x1A
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.170 Blocktime Block 27

Name		Blocktime Block 27	
Slot	Index	0x0C	0x1B
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5 Bus parameters

5.171 Blocktime Block 28

Name		Blocktime Block 28	
Slot	Index	0x0C	0x1C
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.172 Blocktime Block 29

Name		Blocktime Block 29	
Slot	Index	0x0C	0x1D
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.173 Blocktime Block 30

Name		Blocktime Block 30	
Slot	Index	0x0C	0x1E
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.174 Blocktime Block 31

Name		Blocktime Block 31	
Slot	Index	0x0C	0x1F
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.175 Blocktime Block 32

Name		Blocktime Block 32	
Slot	Index	0x0C	0x20
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5 Bus parameters

5.176 Bus Trigger

Name		Bus Trigger	
Slot	Index	0x0D	0x67
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	2147483648
Scale	Offset	1	0
Description		Bit 0 = Block 1 Bit 1 = Block 2 Bit 2 = Block 3 Bit 3 = Block 4 Bit 4 = Block 5 Bit 5 = Block 6 Bit 6 = Block 7 Bit 7 = Block 8 Bit 8 = Block 9 Bit 9 = Block 10 Bit 10 = Block 11 Bit 11 = Block 12 Bit 12 = Block 13 Bit 13 = Block 14 Bit 14 = Block 15 Bit 15 = Block 16 Bit 16 = Block 17 Bit 17 = Block 18 Bit 18 = Block 19 Bit 19 = Block 20 Bit 20 = Block 21 Bit 21 = Block 22 Bit 22 = Block 23 Bit 23 = Block 24 Bit 24 = Block 25 Bit 25 = Block 26 Bit 26 = Block 27 Bit 27 = Block 28 Bit 28 = Block 29 Bit 29 = Block 30 Bit 30 = Block 31 Bit 31 = Block 32	

5.177 C1

Name		C1	
Slot	Index	0x11	0x03
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.178 C1-1

Name		C1-1	
Slot	Index	0x11	0x01
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.179 C1-2

Name		C1-2	
Slot	Index	0x11	0x02
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.180 C2

Name		C2	
Slot	Index	0x11	0x0D
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.181 C2-1

Name		C2-1	
Slot	Index	0x11	0x0B
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.182 C2-2

Name		C2-2	
Slot	Index	0x11	0x0C
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.183 C3

Name		C3	
Slot	Index	0x11	0x17
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.184 C3-1

Name		C3-1	
Slot	Index	0x11	0x15
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.185 C3-2

Name		C3-2	
Slot	Index	0x11	0x16
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.186 CMD1

Name		CMD1	
Slot	Index	0x10	0xFE
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.187 CMD2

Name		CMD2	
Slot	Index	0x10	0xFF
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.188 CMD3

Name		CMD3	
Slot	Index	0x11	0x00
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.189 Command Loop 1 Block 1

Name		Command Loop 1 Block 1	
Slot	Index	0x01	0x01
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.190 Command Loop 1 Block 2

Name		Command Loop 1 Block 2	
Slot	Index	0x01	0x02
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.191 Command Loop 1 Block 3

Name		Command Loop 1 Block 3	
Slot	Index	0x01	0x03
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.192 Command Loop 1 Block 4

Name		Command Loop 1 Block 4	
Slot	Index	0x01	0x04
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.193 Command Loop 1 Block 5

Name		Command Loop 1 Block 5	
Slot	Index	0x01	0x05
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.194 Command Loop 1 Block 6

Name		Command Loop 1 Block 6	
Slot	Index	0x01	0x06
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.195 Command Loop 1 Block 7

Name		Command Loop 1 Block 7	
Slot	Index	0x01	0x07
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.196 Command Loop 1 Block 8

Name		Command Loop 1 Block 8	
Slot	Index	0x01	0x08
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.197 Command Loop 1 Block 9

Name		Command Loop 1 Block 9	
Slot	Index	0x01	0x09
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.198 Command Loop 1 Block 10

Name		Command Loop 1 Block 10	
Slot	Index	0x01	0x0A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.199 Command Loop 1 Block 11

Name		Command Loop 1 Block 11	
Slot	Index	0x01	0x0B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.200 Command Loop 1 Block 12

Name		Command Loop 1 Block 12	
Slot	Index	0x01	0x0C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.201 Command Loop 1 Block 13

Name		Command Loop 1 Block 13	
Slot	Index	0x01	0x0D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.202 Command Loop 1 Block 14

Name		Command Loop 1 Block 14	
Slot	Index	0x01	0x0E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.203 Command Loop 1 Block 15

Name		Command Loop 1 Block 15	
Slot	Index	0x01	0x0F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.204 Command Loop 1 Block 16

Name		Command Loop 1 Block 16	
Slot	Index	0x01	0x10
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.205 Command Loop 1 Block 17

Name		Command Loop 1 Block 17	
Slot	Index	0x01	0x11
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.206 Command Loop 1 Block 18

Name		Command Loop 1 Block 18	
Slot	Index	0x01	0x12
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.207 Command Loop 1 Block 19

Name		Command Loop 1 Block 19	
Slot	Index	0x01	0x13
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.208 Command Loop 1 Block 20

Name		Command Loop 1 Block 20	
Slot	Index	0x01	0x14
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.209 Command Loop 1 Block 21

Name		Command Loop 1 Block 21	
Slot	Index	0x01	0x15
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.210 Command Loop 1 Block 22

Name		Command Loop 1 Block 22	
Slot	Index	0x01	0x16
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.211 Command Loop 1 Block 23

Name		Command Loop 1 Block 23	
Slot	Index	0x01	0x17
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.212 Command Loop 1 Block 24

Name		Command Loop 1 Block 24	
Slot	Index	0x01	0x18
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.213 Command Loop 1 Block 25

Name		Command Loop 1 Block 25	
Slot	Index	0x01	0x19
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.214 Command Loop 1 Block 26

Name		Command Loop 1 Block 26	
Slot	Index	0x01	0x1A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.215 Command Loop 1 Block 27

Name		Command Loop 1 Block 27	
Slot	Index	0x01	0x1B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.216 Command Loop 1 Block 28

Name		Command Loop 1 Block 28	
Slot	Index	0x01	0x1C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.217 Command Loop 1 Block 29

Name		Command Loop 1 Block 29	
Slot	Index	0x01	0x1D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.218 Command Loop 1 Block 30

Name		Command Loop 1 Block 30	
Slot	Index	0x01	0x1E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.219 Command Loop 1 Block 31

Name		Command Loop 1 Block 31	
Slot	Index	0x01	0x1F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.220 Command Loop 1 Block 32

Name		Command Loop 1 Block 32	
Slot	Index	0x01	0x20
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.221 Command Loop 2 Block 1

Name		Command Loop 2 Block 1	
Slot	Index	0x01	0x23
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.222 Command Loop 2 Block 2

Name		Command Loop 2 Block 2	
Slot	Index	0x01	0x24
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.223 Command Loop 2 Block 3

Name		Command Loop 2 Block 3	
Slot	Index	0x01	0x25
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.224 Command Loop 2 Block 4

Name		Command Loop 2 Block 4	
Slot	Index	0x01	0x26
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.225 Command Loop 2 Block 5

Name		Command Loop 2 Block 5	
Slot	Index	0x01	0x27
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.226 Command Loop 2 Block 6

Name		Command Loop 2 Block 6	
Slot	Index	0x01	0x28
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.227 Command Loop 2 Block 7

Name		Command Loop 2 Block 7	
Slot	Index	0x01	0x29
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.228 Command Loop 2 Block 8

Name		Command Loop 2 Block 8	
Slot	Index	0x01	0x2A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.229 Command Loop 2 Block 9

Name		Command Loop 2 Block 9	
Slot	Index	0x01	0x2B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.230 Command Loop 2 Block 10

Name		Command Loop 2 Block 10	
Slot	Index	0x01	0x2C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.231 Command Loop 2 Block 11

Name		Command Loop 2 Block 11	
Slot	Index	0x01	0x2D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.232 Command Loop 2 Block 12

Name		Command Loop 2 Block 12	
Slot	Index	0x01	0x2E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.233 Command Loop 2 Block 13

Name		Command Loop 2 Block 13	
Slot	Index	0x01	0x2F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.234 Command Loop 2 Block 14

Name		Command Loop 2 Block 14	
Slot	Index	0x01	0x30
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.235 Command Loop 2 Block 15

Name		Command Loop 2 Block 15	
Slot	Index	0x01	0x31
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.236 Command Loop 2 Block 16

Name		Command Loop 2 Block 16	
Slot	Index	0x01	0x32
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.237 Command Loop 2 Block 17

Name		Command Loop 2 Block 17	
Slot	Index	0x01	0x33
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.238 Command Loop 2 Block 18

Name		Command Loop 2 Block 18	
Slot	Index	0x01	0x34
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.239 Command Loop 2 Block 19

Name		Command Loop 2 Block 19	
Slot	Index	0x01	0x35
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.240 Command Loop 2 Block 20

Name		Command Loop 2 Block 20	
Slot	Index	0x01	0x36
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.241 Command Loop 2 Block 21

Name		Command Loop 2 Block 21	
Slot	Index	0x01	0x37
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.242 Command Loop 2 Block 22

Name		Command Loop 2 Block 22	
Slot	Index	0x01	0x38
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.243 Command Loop 2 Block 23

Name		Command Loop 2 Block 23	
Slot	Index	0x01	0x39
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.244 Command Loop 2 Block 24

Name		Command Loop 2 Block 24	
Slot	Index	0x01	0x3A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.245 Command Loop 2 Block 25

Name		Command Loop 2 Block 25	
Slot	Index	0x01	0x3B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.246 Command Loop 2 Block 26

Name		Command Loop 2 Block 26	
Slot	Index	0x01	0x3C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.247 Command Loop 2 Block 27

Name		Command Loop 2 Block 27	
Slot	Index	0x01	0x3D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.248 Command Loop 2 Block 28

Name		Command Loop 2 Block 28	
Slot	Index	0x01	0x3E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.249 Command Loop 2 Block 29

Name		Command Loop 2 Block 29	
Slot	Index	0x01	0x3F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.250 Command Loop 2 Block 30

Name		Command Loop 2 Block 30	
Slot	Index	0x01	0x40
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.251 Command Loop 2 Block 31

Name		Command Loop 2 Block 31	
Slot	Index	0x01	0x41
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.252 Command Loop 2 Block 32

Name		Command Loop 2 Block 32	
Slot	Index	0x01	0x42
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.253 Command Loop 3 Block 1

Name		Command Loop 3 Block 1	
Slot	Index	0x01	0x45
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.254 Command Loop 3 Block 2

Name		Command Loop 3 Block 2	
Slot	Index	0x01	0x46
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.255 Command Loop 3 Block 3

Name		Command Loop 3 Block 3	
Slot	Index	0x01	0x47
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.256 Command Loop 3 Block 4

Name		Command Loop 3 Block 4	
Slot	Index	0x01	0x48
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.257 Command Loop 3 Block 5

Name		Command Loop 3 Block 5	
Slot	Index	0x01	0x49
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.258 Command Loop 3 Block 6

Name		Command Loop 3 Block 6	
Slot	Index	0x01	0x4A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.259 Command Loop 3 Block 7

Name		Command Loop 3 Block 7	
Slot	Index	0x01	0x4B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.260 Command Loop 3 Block 8

Name		Command Loop 3 Block 8	
Slot	Index	0x01	0x4C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.261 Command Loop 3 Block 9

Name		Command Loop 3 Block 9	
Slot	Index	0x01	0x4D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.262 Command Loop 3 Block 10

Name		Command Loop 3 Block 10	
Slot	Index	0x01	0x4E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.263 Command Loop 3 Block 11

Name		Command Loop 3 Block 11	
Slot	Index	0x01	0x4F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.264 Command Loop 3 Block 12

Name		Command Loop 3 Block 12	
Slot	Index	0x01	0x50
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.265 Command Loop 3 Block 13

Name		Command Loop 3 Block 13	
Slot	Index	0x01	0x51
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.266 Command Loop 3 Block 14

Name		Command Loop 3 Block 14	
Slot	Index	0x01	0x52
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.267 Command Loop 3 Block 15

Name		Command Loop 3 Block 15	
Slot	Index	0x01	0x53
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.268 Command Loop 3 Block 16

Name		Command Loop 3 Block 16	
Slot	Index	0x01	0x54
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.269 Command Loop 3 Block 17

Name		Command Loop 3 Block 17	
Slot	Index	0x01	0x55
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.270 Command Loop 3 Block 18

Name		Command Loop 3 Block 18	
Slot	Index	0x01	0x56
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.271 Command Loop 3 Block 19

Name		Command Loop 3 Block 19	
Slot	Index	0x01	0x57
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.272 Command Loop 3 Block 20

Name		Command Loop 3 Block 20	
Slot	Index	0x01	0x58
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.273 Command Loop 3 Block 21

Name		Command Loop 3 Block 21	
Slot	Index	0x01	0x59
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.274 Command Loop 3 Block 22

Name		Command Loop 3 Block 22	
Slot	Index	0x01	0x5A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.275 Command Loop 3 Block 23

Name		Command Loop 3 Block 23	
Slot	Index	0x01	0x5B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.276 Command Loop 3 Block 24

Name		Command Loop 3 Block 24	
Slot	Index	0x01	0x5C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.277 Command Loop 3 Block 25

Name		Command Loop 3 Block 25	
Slot	Index	0x01	0x5D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.278 Command Loop 3 Block 26

Name		Command Loop 3 Block 26	
Slot	Index	0x01	0x5E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.279 Command Loop 3 Block 27

Name		Command Loop 3 Block 27	
Slot	Index	0x01	0x5F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.280 Command Loop 3 Block 28

Name		Command Loop 3 Block 28	
Slot	Index	0x01	0x60
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.281 Command Loop 3 Block 29

Name		Command Loop 3 Block 29	
Slot	Index	0x01	0x61
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.282 Command Loop 3 Block 30

Name		Command Loop 3 Block 30	
Slot	Index	0x01	0x62
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.283 Command Loop 3 Block 31

Name		Command Loop 3 Block 31	
Slot	Index	0x01	0x63
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.284 Command Loop 3 Block 32

Name		Command Loop 3 Block 32	
Slot	Index	0x01	0x64
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.285 CON 1

Name		CON 1	
Slot	Index	0x0D	0x69
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.286 CON 2

Name		CON 2	
Slot	Index	0x0D	0x6A
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.287 CON 3

Name		CON 3	
Slot	Index	0x0D	0x6B
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.288 CON 4

Name		CON 4	
Slot	Index	0x0D	0x6C
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.289 CON 5

Name		CON 5	
Slot	Index	0x0D	0x6D
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.290 CON 6

Name		CON 6	
Slot	Index	0x0D	0x6E
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.291 CON 7

Name		CON 7	
Slot	Index	0x0D	0x6F
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.292 CON 8

Name		CON 8	
Slot	Index	0x0D	0x70
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.293 CON 9

Name		CON 9	
Slot	Index	0x0D	0xB4
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.294 CON 10

Name		CON 10	
Slot	Index	0x0D	0xB5
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.295 CON 11

Name		CON 11	
Slot	Index	0x0D	0xB6
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.296 CON 12

Name		CON 12	
Slot	Index	0x0D	0xB7
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.297 CON 13

Name		CON 13	
Slot	Index	0x0D	0xB8
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.298 CON 14

Name		CON 14	
Slot	Index	0x0D	0xB9
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.299 CON 15

Name		CON 15	
Slot	Index	0x0D	0xBA
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.300 CON 16

Name		CON 16	
Slot	Index	0x0D	0xBB
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.301 Damping D Loop 1

Name		Damping D Loop 1	
Slot	Index	0x0F	0x01
Bytes	Units	2	HZ
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.302 Damping D Loop 2

Name		Damping D Loop 2	
Slot	Index	0x0F	0x02
Bytes	Units	2	HZ
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.303 Damping D Loop 3

Name		Damping D Loop 3	
Slot	Index	0x0F	0x03
Bytes	Units	2	HZ
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.304 Damping Gain Loop 1

Name		Damping Gain Loop 1	
Slot	Index	0x0F	0x04
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	255,90
Scale	Offset	128,00	0,00

5.305 Damping Gain Loop 2

Name		Damping Gain Loop 2	
Slot	Index	0x0F	0x05
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	255,90
Scale	Offset	128,00	0,00

5 Bus parameters

5.306 Damping Gain Loop 3

Name		Damping Gain Loop 3	
Slot	Index	0x0F	0x06
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	255,90
Scale	Offset	128,00	0,00

5.307 Deadband Valve 1

Name		Deadband Valve 1	
Slot	Index	0x10	0x30
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100,00
Scale	Offset	327,67	0,00

5.308 Deadband Valve 2

Name		Deadband Valve 2	
Slot	Index	0x10	0x31
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100,00
Scale	Offset	327,67	0,00

5.309 Deadband Valve 3

Name		Deadband Valve 3	
Slot	Index	0x10	0x32
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100,00
Scale	Offset	327,67	0,00

5.310 Decel Rate Loop 1 Block 1

Name		Decel Rate Loop 1 Block 1	
Slot	Index	0x08	0x67
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.311 Decel Rate Loop 1 Block 2

Name		Decel Rate Loop 1 Block 2	
Slot	Index	0x08	0x68
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.312 Decel Rate Loop 1 Block 3

Name		Decel Rate Loop 1 Block 3	
Slot	Index	0x08	0x69
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.313 Decel Rate Loop 1 Block 4

Name		Decel Rate Loop 1 Block 4	
Slot	Index	0x08	0x6A
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.314 Decel Rate Loop 1 Block 5

Name		Decel Rate Loop 1 Block 5	
Slot	Index	0x08	0x6B
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.315 Decel Rate Loop 1 Block 6

Name		Decel Rate Loop 1 Block 6	
Slot	Index	0x08	0x6C
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.316 Decel Rate Loop 1 Block 7

Name		Decel Rate Loop 1 Block 7	
Slot	Index	0x08	0x6D
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.317 Decel Rate Loop 1 Block 8

Name		Decel Rate Loop 1 Block 8	
Slot	Index	0x08	0x6E
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.318 Decel Rate Loop 1 Block 9

Name		Decel Rate Loop 1 Block 9	
Slot	Index	0x08	0x6F
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.319 Decel Rate Loop 1 Block 10

Name		Decel Rate Loop 1 Block 10	
Slot	Index	0x08	0x70
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.320 Decel Rate Loop 1 Block 11

Name		Decel Rate Loop 1 Block 11	
Slot	Index	0x08	0x71
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.321 Decel Rate Loop 1 Block 12

Name		Decel Rate Loop 1 Block 12	
Slot	Index	0x08	0x72
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.322 Decel Rate Loop 1 Block 13

Name		Decel Rate Loop 1 Block 13	
Slot	Index	0x08	0x73
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.323 Decel Rate Loop 1 Block 14

Name		Decel Rate Loop 1 Block 14	
Slot	Index	0x08	0x74
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.324 Decel Rate Loop 1 Block 15

Name		Decel Rate Loop 1 Block 15	
Slot	Index	0x08	0x75
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.325 Decel Rate Loop 1 Block 16

Name		Decel Rate Loop 1 Block 16	
Slot	Index	0x08	0x76
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.326 Decel Rate Loop 1 Block 17

Name		Decel Rate Loop 1 Block 17	
Slot	Index	0x08	0x77
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.327 Decel Rate Loop 1 Block 18

Name		Decel Rate Loop 1 Block 18	
Slot	Index	0x08	0x78
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.328 Decel Rate Loop 1 Block 19

Name		Decel Rate Loop 1 Block 19	
Slot	Index	0x08	0x79
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.329 Decel Rate Loop 1 Block 20

Name		Decel Rate Loop 1 Block 20	
Slot	Index	0x08	0x7A
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.330 Decel Rate Loop 1 Block 21

Name		Decel Rate Loop 1 Block 21	
Slot	Index	0x08	0x7B
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.331 Decel Rate Loop 1 Block 22

Name		Decel Rate Loop 1 Block 22	
Slot	Index	0x08	0x7C
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.332 Decel Rate Loop 1 Block 23

Name		Decel Rate Loop 1 Block 23	
Slot	Index	0x08	0x7D
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.333 Decel Rate Loop 1 Block 24

Name		Decel Rate Loop 1 Block 24	
Slot	Index	0x08	0x7E
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.334 Decel Rate Loop 1 Block 25

Name		Decel Rate Loop 1 Block 25	
Slot	Index	0x08	0x7F
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.335 Decel Rate Loop 1 Block 26

Name		Decel Rate Loop 1 Block 26	
Slot	Index	0x08	0x80
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.336 Decel Rate Loop 1 Block 27

Name		Decel Rate Loop 1 Block 27	
Slot	Index	0x08	0x81
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.337 Decel Rate Loop 1 Block 28

Name		Decel Rate Loop 1 Block 28	
Slot	Index	0x08	0x82
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.338 Decel Rate Loop 1 Block 29

Name		Decel Rate Loop 1 Block 29	
Slot	Index	0x08	0x83
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.339 Decel Rate Loop 1 Block 30

Name		Decel Rate Loop 1 Block 30	
Slot	Index	0x08	0x84
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.340 Decel Rate Loop 1 Block 31

Name		Decel Rate Loop 1 Block 31	
Slot	Index	0x08	0x85
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.341 Decel Rate Loop 1 Block 32

Name		Decel Rate Loop 1 Block 32	
Slot	Index	0x08	0x86
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.342 Decel Rate Loop 2 Block 1

Name		Decel Rate Loop 2 Block 1	
Slot	Index	0x08	0x89
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.343 Decel Rate Loop 2 Block 2

Name		Decel Rate Loop 2 Block 2	
Slot	Index	0x08	0x8A
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.344 Decel Rate Loop 2 Block 3

Name		Decel Rate Loop 2 Block 3	
Slot	Index	0x08	0x8B
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.345 Decel Rate Loop 2 Block 4

Name		Decel Rate Loop 2 Block 4	
Slot	Index	0x08	0x8C
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.346 Decel Rate Loop 2 Block 5

Name		Decel Rate Loop 2 Block 5	
Slot	Index	0x08	0x8D
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.347 Decel Rate Loop 2 Block 6

Name		Decel Rate Loop 2 Block 6	
Slot	Index	0x08	0x8E
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.348 Decel Rate Loop 2 Block 7

Name		Decel Rate Loop 2 Block 7	
Slot	Index	0x08	0x8F
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.349 Decel Rate Loop 2 Block 8

Name		Decel Rate Loop 2 Block 8	
Slot	Index	0x08	0x90
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.350 Decel Rate Loop 2 Block 9

Name		Decel Rate Loop 2 Block 9	
Slot	Index	0x08	0x91
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.351 Decel Rate Loop 2 Block 10

Name		Decel Rate Loop 2 Block 10	
Slot	Index	0x08	0x92
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.352 Decel Rate Loop 2 Block 11

Name		Decel Rate Loop 2 Block 11	
Slot	Index	0x08	0x93
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.353 Decel Rate Loop 2 Block 12

Name		Decel Rate Loop 2 Block 12	
Slot	Index	0x08	0x94
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.354 Decel Rate Loop 2 Block 13

Name		Decel Rate Loop 2 Block 13	
Slot	Index	0x08	0x95
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.355 Decel Rate Loop 2 Block 14

Name		Decel Rate Loop 2 Block 14	
Slot	Index	0x08	0x96
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.356 Decel Rate Loop 2 Block 15

Name		Decel Rate Loop 2 Block 15	
Slot	Index	0x08	0x97
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.357 Decel Rate Loop 2 Block 16

Name		Decel Rate Loop 2 Block 16	
Slot	Index	0x08	0x98
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.358 Decel Rate Loop 2 Block 17

Name		Decel Rate Loop 2 Block 17	
Slot	Index	0x08	0x99
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.359 Decel Rate Loop 2 Block 18

Name		Decel Rate Loop 2 Block 18	
Slot	Index	0x08	0x9A
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.360 Decel Rate Loop 2 Block 19

Name		Decel Rate Loop 2 Block 19	
Slot	Index	0x08	0x9B
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.361 Decel Rate Loop 2 Block 20

Name		Decel Rate Loop 2 Block 20	
Slot	Index	0x08	0x9C
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.362 Decel Rate Loop 2 Block 21

Name		Decel Rate Loop 2 Block 21	
Slot	Index	0x08	0x9D
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.363 Decel Rate Loop 2 Block 22

Name		Decel Rate Loop 2 Block 22	
Slot	Index	0x08	0x9E
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.364 Decel Rate Loop 2 Block 23

Name		Decel Rate Loop 2 Block 23	
Slot	Index	0x08	0x9F
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.365 Decel Rate Loop 2 Block 24

Name		Decel Rate Loop 2 Block 24	
Slot	Index	0x08	0xA0
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.366 Decel Rate Loop 2 Block 25

Name		Decel Rate Loop 2 Block 25	
Slot	Index	0x08	0xA1
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.367 Decel Rate Loop 2 Block 26

Name		Decel Rate Loop 2 Block 26	
Slot	Index	0x08	0xA2
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.368 Decel Rate Loop 2 Block 27

Name		Decel Rate Loop 2 Block 27	
Slot	Index	0x08	0xA3
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.369 Decel Rate Loop 2 Block 28

Name		Decel Rate Loop 2 Block 28	
Slot	Index	0x08	0xA4
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.370 Decel Rate Loop 2 Block 29

Name		Decel Rate Loop 2 Block 29	
Slot	Index	0x08	0xA5
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.371 Decel Rate Loop 2 Block 30

Name		Decel Rate Loop 2 Block 30	
Slot	Index	0x08	0xA6
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.372 Decel Rate Loop 2 Block 31

Name		Decel Rate Loop 2 Block 31	
Slot	Index	0x08	0xA7
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.373 Decel Rate Loop 2 Block 32

Name		Decel Rate Loop 2 Block 32	
Slot	Index	0x08	0xA8
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.374 Decel Rate Loop 3 Block 1

Name		Decel Rate Loop 3 Block 1	
Slot	Index	0x08	0xAB
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.375 Decel Rate Loop 3 Block 2

Name		Decel Rate Loop 3 Block 2	
Slot	Index	0x08	0xAC
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.376 Decel Rate Loop 3 Block 3

Name		Decel Rate Loop 3 Block 3	
Slot	Index	0x08	0xAD
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.377 Decel Rate Loop 3 Block 4

Name		Decel Rate Loop 3 Block 4	
Slot	Index	0x08	0xAE
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.378 Decel Rate Loop 3 Block 5

Name		Decel Rate Loop 3 Block 5	
Slot	Index	0x08	0xAF
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.379 Decel Rate Loop 3 Block 6

Name		Decel Rate Loop 3 Block 6	
Slot	Index	0x08	0xB0
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.380 Decel Rate Loop 3 Block 7

Name		Decel Rate Loop 3 Block 7	
Slot	Index	0x08	0xB1
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.381 Decel Rate Loop 3 Block 8

Name		Decel Rate Loop 3 Block 8	
Slot	Index	0x08	0xB2
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.382 Decel Rate Loop 3 Block 9

Name		Decel Rate Loop 3 Block 9	
Slot	Index	0x08	0xB3
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.383 Decel Rate Loop 3 Block 10

Name		Decel Rate Loop 3 Block 10	
Slot	Index	0x08	0xB4
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.384 Decel Rate Loop 3 Block 11

Name		Decel Rate Loop 3 Block 11	
Slot	Index	0x08	0xB5
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.385 Decel Rate Loop 3 Block 12

Name		Decel Rate Loop 3 Block 12	
Slot	Index	0x08	0xB6
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.386 Decel Rate Loop 3 Block 13

Name		Decel Rate Loop 3 Block 13	
Slot	Index	0x08	0xB7
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.387 Decel Rate Loop 3 Block 14

Name		Decel Rate Loop 3 Block 14	
Slot	Index	0x08	0xB8
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.388 Decel Rate Loop 3 Block 15

Name		Decel Rate Loop 3 Block 15	
Slot	Index	0x08	0xB9
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.389 Decel Rate Loop 3 Block 16

Name		Decel Rate Loop 3 Block 16	
Slot	Index	0x08	0xBA
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.390 Decel Rate Loop 3 Block 17

Name		Decel Rate Loop 3 Block 17	
Slot	Index	0x08	0xBB
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.391 Decel Rate Loop 3 Block 18

Name		Decel Rate Loop 3 Block 18	
Slot	Index	0x08	0xBC
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.392 Decel Rate Loop 3 Block 19

Name		Decel Rate Loop 3 Block 19	
Slot	Index	0x08	0xBD
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.393 Decel Rate Loop 3 Block 20

Name		Decel Rate Loop 3 Block 20	
Slot	Index	0x08	0xBE
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.394 Decel Rate Loop 3 Block 21

Name		Decel Rate Loop 3 Block 21	
Slot	Index	0x08	0xBF
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.395 Decel Rate Loop 3 Block 22

Name		Decel Rate Loop 3 Block 22	
Slot	Index	0x08	0xC0
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.396 Decel Rate Loop 3 Block 23

Name		Decel Rate Loop 3 Block 23	
Slot	Index	0x08	0xC1
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.397 Decel Rate Loop 3 Block 24

Name		Decel Rate Loop 3 Block 24	
Slot	Index	0x08	0xC2
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.398 Decel Rate Loop 3 Block 25

Name		Decel Rate Loop 3 Block 25	
Slot	Index	0x08	0xC3
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.399 Decel Rate Loop 3 Block 26

Name		Decel Rate Loop 3 Block 26	
Slot	Index	0x08	0xC4
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.400 Decel Rate Loop 3 Block 27

Name		Decel Rate Loop 3 Block 27	
Slot	Index	0x08	0xC5
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.401 Decel Rate Loop 3 Block 28

Name		Decel Rate Loop 3 Block 28	
Slot	Index	0x08	0xC6
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5 Bus parameters

5.402 Decel Rate Loop 3 Block 29

Name		Decel Rate Loop 3 Block 29	
Slot	Index	0x08	0xC7
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.403 Decel Rate Loop 3 Block 30

Name		Decel Rate Loop 3 Block 30	
Slot	Index	0x08	0xC8
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.404 Decel Rate Loop 3 Block 31

Name		Decel Rate Loop 3 Block 31	
Slot	Index	0x08	0xC9
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.405 Decel Rate Loop 3 Block 32

Name		Decel Rate Loop 3 Block 32	
Slot	Index	0x08	0xCA
Bytes	Units	4	Unit/s ²
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	1000000,0
Scale	Offset	85,9	0,0

5.406 Discrete Inputs

Name		Discrete Inputs	
Slot	Index	0x10	0x27
Bytes	Units	2	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	511
Scale	Offset	1	0
Description		DI1 = 0x01 DI2 = 0x02 DI3 = 0x04 DI4 = 0x08 DI5 = 0x10 DI6 = 0x20 DI7 = 0x40 DI8 = 0x80 Enable = 0x100	

5 Bus parameters

5.407 Discrete Outputs

Name		Discrete Outputs	
Slot	Index	0x10	0x26
Bytes	Units	2	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	255
Scale	Offset	1	0
Description		DO1 = 0x01 DO2 = 0x02 DO3 = 0x04 DO4 = 0x08 DO5 = 0x10 DO6 = 0x20 DO7 = 0x40 OK = 0x80	

5.408 DO1 Debounce

Name		DO1 Debounce	
Slot	Index	0x0F	0x11
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.409 DO1 Window

Name		DO1 Window	
Slot	Index	0x0F	0x09
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.410 DO2 Debounce

Name		DO2 Debounce	
Slot	Index	0x0F	0x12
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.411 DO2 Window

Name		DO2 Window	
Slot	Index	0x0F	0x0A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.412 DO3 Debounce

Name		DO3 Debounce	
Slot	Index	0x0F	0x13
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.413 DO3 Window

Name		DO3 Window	
Slot	Index	0x0F	0x0B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.414 DO4 Debounce

Name		DO4 Debounce	
Slot	Index	0x0F	0x14
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.415 DO4 Window

Name		DO4 Window	
Slot	Index	0x0F	0x0C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.416 DO5 Debounce

Name		DO5 Debounce	
Slot	Index	0x0F	0x15
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.417 DO5 Window

Name		DO5 Window	
Slot	Index	0x0F	0x0D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.418 DO6 Debounce

Name		DO6 Debounce	
Slot	Index	0x0F	0x16
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.419 DO6 Window

Name		DO6 Window	
Slot	Index	0x0F	0x0E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.420 DO7 Debounce

Name		DO7 Debounce	
Slot	Index	0x0F	0x17
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.421 DO7 Window

Name		DO7 Window	
Slot	Index	0x0F	0x0F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.422 DT1 Loop 1 Block 1

Name		DT1 Loop 1 Block 1	
Slot	Index	0x07	0x01
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.423 DT1 Loop 1 Block 2

Name		DT1 Loop 1 Block 2	
Slot	Index	0x07	0x02
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.424 DT1 Loop 1 Block 3

Name		DT1 Loop 1 Block 3	
Slot	Index	0x07	0x03
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.425 DT1 Loop 1 Block 4

Name		DT1 Loop 1 Block 4	
Slot	Index	0x07	0x04
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.426 DT1 Loop 1 Block 5

Name		DT1 Loop 1 Block 5	
Slot	Index	0x07	0x05
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.427 DT1 Loop 1 Block 6

Name		DT1 Loop 1 Block 6	
Slot	Index	0x07	0x06
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.428 DT1 Loop 1 Block 7

Name		DT1 Loop 1 Block 7	
Slot	Index	0x07	0x07
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.429 DT1 Loop 1 Block 8

Name		DT1 Loop 1 Block 8	
Slot	Index	0x07	0x08
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.430 DT1 Loop 1 Block 9

Name		DT1 Loop 1 Block 9	
Slot	Index	0x07	0x09
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.431 DT1 Loop 1 Block 10

Name		DT1 Loop 1 Block 10	
Slot	Index	0x07	0x0A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.432 DT1 Loop 1 Block 11

Name		DT1 Loop 1 Block 11	
Slot	Index	0x07	0x0B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.433 DT1 Loop 1 Block 12

Name		DT1 Loop 1 Block 12	
Slot	Index	0x07	0x0C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.434 DT1 Loop 1 Block 13

Name		DT1 Loop 1 Block 13	
Slot	Index	0x07	0x0D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.435 DT1 Loop 1 Block 14

Name		DT1 Loop 1 Block 14	
Slot	Index	0x07	0x0E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.436 DT1 Loop 1 Block 15

Name		DT1 Loop 1 Block 15	
Slot	Index	0x07	0x0F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.437 DT1 Loop 1 Block 16

Name		DT1 Loop 1 Block 16	
Slot	Index	0x07	0x10
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.438 DT1 Loop 1 Block 17

Name		DT1 Loop 1 Block 17	
Slot	Index	0x07	0x11
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.439 DT1 Loop 1 Block 18

Name		DT1 Loop 1 Block 18	
Slot	Index	0x07	0x12
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.440 DT1 Loop 1 Block 19

Name		DT1 Loop 1 Block 19	
Slot	Index	0x07	0x13
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.441 DT1 Loop 1 Block 20

Name		DT1 Loop 1 Block 20	
Slot	Index	0x07	0x14
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.442 DT1 Loop 1 Block 21

Name		DT1 Loop 1 Block 21	
Slot	Index	0x07	0x15
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.443 DT1 Loop 1 Block 22

Name		DT1 Loop 1 Block 22	
Slot	Index	0x07	0x16
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.444 DT1 Loop 1 Block 23

Name		DT1 Loop 1 Block 23	
Slot	Index	0x07	0x17
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.445 DT1 Loop 1 Block 24

Name		DT1 Loop 1 Block 24	
Slot	Index	0x07	0x18
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.446 DT1 Loop 1 Block 25

Name		DT1 Loop 1 Block 25	
Slot	Index	0x07	0x19
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.447 DT1 Loop 1 Block 26

Name		DT1 Loop 1 Block 26	
Slot	Index	0x07	0x1A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.448 DT1 Loop 1 Block 27

Name		DT1 Loop 1 Block 27	
Slot	Index	0x07	0x1B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.449 DT1 Loop 1 Block 28

Name		DT1 Loop 1 Block 28	
Slot	Index	0x07	0x1C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.450 DT1 Loop 1 Block 29

Name		DT1 Loop 1 Block 29	
Slot	Index	0x07	0x1D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.451 DT1 Loop 1 Block 30

Name		DT1 Loop 1 Block 30	
Slot	Index	0x07	0x1E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.452 DT1 Loop 1 Block 31

Name		DT1 Loop 1 Block 31	
Slot	Index	0x07	0x1F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.453 DT1 Loop 1 Block 32

Name		DT1 Loop 1 Block 32	
Slot	Index	0x07	0x20
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.454 DT1 Loop 2 Block 1

Name		DT1 Loop 2 Block 1	
Slot	Index	0x07	0x23
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.455 DT1 Loop 2 Block 2

Name		DT1 Loop 2 Block 2	
Slot	Index	0x07	0x24
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.456 DT1 Loop 2 Block 3

Name		DT1 Loop 2 Block 3	
Slot	Index	0x07	0x25
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.457 DT1 Loop 2 Block 4

Name		DT1 Loop 2 Block 4	
Slot	Index	0x07	0x26
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.458 DT1 Loop 2 Block 5

Name		DT1 Loop 2 Block 5	
Slot	Index	0x07	0x27
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.459 DT1 Loop 2 Block 6

Name		DT1 Loop 2 Block 6	
Slot	Index	0x07	0x28
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.460 DT1 Loop 2 Block 7

Name		DT1 Loop 2 Block 7	
Slot	Index	0x07	0x29
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.461 DT1 Loop 2 Block 8

Name		DT1 Loop 2 Block 8	
Slot	Index	0x07	0x2A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.462 DT1 Loop 2 Block 9

Name		DT1 Loop 2 Block 9	
Slot	Index	0x07	0x2B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.463 DT1 Loop 2 Block 10

Name		DT1 Loop 2 Block 10	
Slot	Index	0x07	0x2C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.464 DT1 Loop 2 Block 11

Name		DT1 Loop 2 Block 11	
Slot	Index	0x07	0x2D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.465 DT1 Loop 2 Block 12

Name		DT1 Loop 2 Block 12	
Slot	Index	0x07	0x2E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.466 DT1 Loop 2 Block 13

Name		DT1 Loop 2 Block 13	
Slot	Index	0x07	0x2F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.467 DT1 Loop 2 Block 14

Name		DT1 Loop 2 Block 14	
Slot	Index	0x07	0x30
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.468 DT1 Loop 2 Block 15

Name		DT1 Loop 2 Block 15	
Slot	Index	0x07	0x31
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.469 DT1 Loop 2 Block 16

Name		DT1 Loop 2 Block 16	
Slot	Index	0x07	0x32
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.470 DT1 Loop 2 Block 17

Name		DT1 Loop 2 Block 17	
Slot	Index	0x07	0x33
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.471 DT1 Loop 2 Block 18

Name		DT1 Loop 2 Block 18	
Slot	Index	0x07	0x34
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.472 DT1 Loop 2 Block 19

Name		DT1 Loop 2 Block 19	
Slot	Index	0x07	0x35
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.473 DT1 Loop 2 Block 20

Name		DT1 Loop 2 Block 20	
Slot	Index	0x07	0x36
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.474 DT1 Loop 2 Block 21

Name		DT1 Loop 2 Block 21	
Slot	Index	0x07	0x37
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.475 DT1 Loop 2 Block 22

Name		DT1 Loop 2 Block 22	
Slot	Index	0x07	0x38
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.476 DT1 Loop 2 Block 23

Name		DT1 Loop 2 Block 23	
Slot	Index	0x07	0x39
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.477 DT1 Loop 2 Block 24

Name		DT1 Loop 2 Block 24	
Slot	Index	0x07	0x3A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.478 DT1 Loop 2 Block 25

Name		DT1 Loop 2 Block 25	
Slot	Index	0x07	0x3B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.479 DT1 Loop 2 Block 26

Name		DT1 Loop 2 Block 26	
Slot	Index	0x07	0x3C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.480 DT1 Loop 2 Block 27

Name		DT1 Loop 2 Block 27	
Slot	Index	0x07	0x3D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.481 DT1 Loop 2 Block 28

Name		DT1 Loop 2 Block 28	
Slot	Index	0x07	0x3E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.482 DT1 Loop 2 Block 29

Name		DT1 Loop 2 Block 29	
Slot	Index	0x07	0x3F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.483 DT1 Loop 2 Block 30

Name		DT1 Loop 2 Block 30	
Slot	Index	0x07	0x40
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.484 DT1 Loop 2 Block 31

Name		DT1 Loop 2 Block 31	
Slot	Index	0x07	0x41
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.485 DT1 Loop 2 Block 32

Name		DT1 Loop 2 Block 32	
Slot	Index	0x07	0x42
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.486 DT1 Loop 3 Block 1

Name		DT1 Loop 3 Block 1	
Slot	Index	0x07	0x45
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.487 DT1 Loop 3 Block 2

Name		DT1 Loop 3 Block 2	
Slot	Index	0x07	0x46
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.488 DT1 Loop 3 Block 3

Name		DT1 Loop 3 Block 3	
Slot	Index	0x07	0x47
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.489 DT1 Loop 3 Block 4

Name		DT1 Loop 3 Block 4	
Slot	Index	0x07	0x48
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.490 DT1 Loop 3 Block 5

Name		DT1 Loop 3 Block 5	
Slot	Index	0x07	0x49
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.491 DT1 Loop 3 Block 6

Name		DT1 Loop 3 Block 6	
Slot	Index	0x07	0x4A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.492 DT1 Loop 3 Block 7

Name		DT1 Loop 3 Block 7	
Slot	Index	0x07	0x4B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.493 DT1 Loop 3 Block 8

Name		DT1 Loop 3 Block 8	
Slot	Index	0x07	0x4C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.494 DT1 Loop 3 Block 9

Name		DT1 Loop 3 Block 9	
Slot	Index	0x07	0x4D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.495 DT1 Loop 3 Block 10

Name		DT1 Loop 3 Block 10	
Slot	Index	0x07	0x4E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.496 DT1 Loop 3 Block 11

Name		DT1 Loop 3 Block 11	
Slot	Index	0x07	0x4F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.497 DT1 Loop 3 Block 12

Name		DT1 Loop 3 Block 12	
Slot	Index	0x07	0x50
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.498 DT1 Loop 3 Block 13

Name		DT1 Loop 3 Block 13	
Slot	Index	0x07	0x51
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.499 DT1 Loop 3 Block 14

Name		DT1 Loop 3 Block 14	
Slot	Index	0x07	0x52
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.500 DT1 Loop 3 Block 15

Name		DT1 Loop 3 Block 15	
Slot	Index	0x07	0x53
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.501 DT1 Loop 3 Block 16

Name		DT1 Loop 3 Block 16	
Slot	Index	0x07	0x54
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.502 DT1 Loop 3 Block 17

Name		DT1 Loop 3 Block 17	
Slot	Index	0x07	0x55
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.503 DT1 Loop 3 Block 18

Name		DT1 Loop 3 Block 18	
Slot	Index	0x07	0x56
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.504 DT1 Loop 3 Block 19

Name		DT1 Loop 3 Block 19	
Slot	Index	0x07	0x57
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.505 DT1 Loop 3 Block 20

Name		DT1 Loop 3 Block 20	
Slot	Index	0x07	0x58
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.506 DT1 Loop 3 Block 21

Name		DT1 Loop 3 Block 21	
Slot	Index	0x07	0x59
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.507 DT1 Loop 3 Block 22

Name		DT1 Loop 3 Block 22	
Slot	Index	0x07	0x5A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.508 DT1 Loop 3 Block 23

Name		DT1 Loop 3 Block 23	
Slot	Index	0x07	0x5B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.509 DT1 Loop 3 Block 24

Name		DT1 Loop 3 Block 24	
Slot	Index	0x07	0x5C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.510 DT1 Loop 3 Block 25

Name		DT1 Loop 3 Block 25	
Slot	Index	0x07	0x5D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.511 DT1 Loop 3 Block 26

Name		DT1 Loop 3 Block 26	
Slot	Index	0x07	0x5E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.512 DT1 Loop 3 Block 27

Name		DT1 Loop 3 Block 27	
Slot	Index	0x07	0x5F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.513 DT1 Loop 3 Block 28

Name		DT1 Loop 3 Block 28	
Slot	Index	0x07	0x60
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.514 DT1 Loop 3 Block 29

Name		DT1 Loop 3 Block 29	
Slot	Index	0x07	0x61
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.515 DT1 Loop 3 Block 30

Name		DT1 Loop 3 Block 30	
Slot	Index	0x07	0x62
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.516 DT1 Loop 3 Block 31

Name		DT1 Loop 3 Block 31	
Slot	Index	0x07	0x63
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.517 DT1 Loop 3 Block 32

Name		DT1 Loop 3 Block 32	
Slot	Index	0x07	0x64
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.518 DT1(LFB1) Loop 1 Block 1

Name		DT1(LFB1) Loop 1 Block 1	
Slot	Index	0x08	0x01
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.519 DT1(LFB1) Loop 1 Block 2

Name		DT1(LFB1) Loop 1 Block 2	
Slot	Index	0x08	0x02
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.520 DT1(LFB1) Loop 1 Block 3

Name		DT1(LFB1) Loop 1 Block 3	
Slot	Index	0x08	0x03
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.521 DT1(LFB1) Loop 1 Block 4

Name		DT1(LFB1) Loop 1 Block 4	
Slot	Index	0x08	0x04
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.522 DT1(LFB1) Loop 1 Block 5

Name		DT1(LFB1) Loop 1 Block 5	
Slot	Index	0x08	0x05
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.523 DT1(LFB1) Loop 1 Block 6

Name		DT1(LFB1) Loop 1 Block 6	
Slot	Index	0x08	0x06
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.524 DT1(LFB1) Loop 1 Block 7

Name		DT1(LFB1) Loop 1 Block 7	
Slot	Index	0x08	0x07
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.525 DT1(LFB1) Loop 1 Block 8

Name		DT1(LFB1) Loop 1 Block 8	
Slot	Index	0x08	0x08
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.526 DT1(LFB1) Loop 1 Block 9

Name		DT1(LFB1) Loop 1 Block 9	
Slot	Index	0x08	0x09
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.527 DT1(LFB1) Loop 1 Block 10

Name		DT1(LFB1) Loop 1 Block 10	
Slot	Index	0x08	0x0A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.528 DT1(LFB1) Loop 1 Block 11

Name		DT1(LFB1) Loop 1 Block 11	
Slot	Index	0x08	0x0B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.529 DT1(LFB1) Loop 1 Block 12

Name		DT1(LFB1) Loop 1 Block 12	
Slot	Index	0x08	0x0C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.530 DT1(LFB1) Loop 1 Block 13

Name		DT1(LFB1) Loop 1 Block 13	
Slot	Index	0x08	0x0D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.531 DT1(LFB1) Loop 1 Block 14

Name		DT1(LFB1) Loop 1 Block 14	
Slot	Index	0x08	0x0E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.532 DT1(LFB1) Loop 1 Block 15

Name		DT1(LFB1) Loop 1 Block 15	
Slot	Index	0x08	0x0F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.533 DT1(LFB1) Loop 1 Block 16

Name		DT1(LFB1) Loop 1 Block 16	
Slot	Index	0x08	0x10
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.534 DT1(LFB1) Loop 1 Block 17

Name		DT1(LFB1) Loop 1 Block 17	
Slot	Index	0x08	0x11
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.535 DT1(LFB1) Loop 1 Block 18

Name		DT1(LFB1) Loop 1 Block 18	
Slot	Index	0x08	0x12
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.536 DT1(LFB1) Loop 1 Block 19

Name		DT1(LFB1) Loop 1 Block 19	
Slot	Index	0x08	0x13
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.537 DT1(LFB1) Loop 1 Block 20

Name		DT1(LFB1) Loop 1 Block 20	
Slot	Index	0x08	0x14
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.538 DT1(LFB1) Loop 1 Block 21

Name		DT1(LFB1) Loop 1 Block 21	
Slot	Index	0x08	0x15
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.539 DT1(LFB1) Loop 1 Block 22

Name		DT1(LFB1) Loop 1 Block 22	
Slot	Index	0x08	0x16
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.540 DT1(LFB1) Loop 1 Block 23

Name		DT1(LFB1) Loop 1 Block 23	
Slot	Index	0x08	0x17
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.541 DT1(LFB1) Loop 1 Block 24

Name		DT1(LFB1) Loop 1 Block 24	
Slot	Index	0x08	0x18
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.542 DT1(LFB1) Loop 1 Block 25

Name		DT1(LFB1) Loop 1 Block 25	
Slot	Index	0x08	0x19
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.543 DT1(LFB1) Loop 1 Block 26

Name		DT1(LFB1) Loop 1 Block 26	
Slot	Index	0x08	0x1A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.544 DT1(LFB1) Loop 1 Block 27

Name		DT1(LFB1) Loop 1 Block 27	
Slot	Index	0x08	0x1B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.545 DT1(LFB1) Loop 1 Block 28

Name		DT1(LFB1) Loop 1 Block 28	
Slot	Index	0x08	0x1C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.546 DT1(LFB1) Loop 1 Block 29

Name		DT1(LFB1) Loop 1 Block 29	
Slot	Index	0x08	0x1D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.547 DT1(LFB1) Loop 1 Block 30

Name		DT1(LFB1) Loop 1 Block 30	
Slot	Index	0x08	0x1E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.548 DT1(LFB1) Loop 1 Block 31

Name		DT1(LFB1) Loop 1 Block 31	
Slot	Index	0x08	0x1F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.549 DT1(LFB1) Loop 1 Block 32

Name		DT1(LFB1) Loop 1 Block 32	
Slot	Index	0x08	0x20
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.550 DT1(LFB2) Loop 2 Block 1

Name		DT1(LFB2) Loop 2 Block 1	
Slot	Index	0x08	0x23
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.551 DT1(LFB2) Loop 2 Block 2

Name		DT1(LFB2) Loop 2 Block 2	
Slot	Index	0x08	0x24
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.552 DT1(LFB2) Loop 2 Block 3

Name		DT1(LFB2) Loop 2 Block 3	
Slot	Index	0x08	0x25
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.553 DT1(LFB2) Loop 2 Block 4

Name		DT1(LFB2) Loop 2 Block 4	
Slot	Index	0x08	0x26
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.554 DT1(LFB2) Loop 2 Block 5

Name		DT1(LFB2) Loop 2 Block 5	
Slot	Index	0x08	0x27
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.555 DT1(LFB2) Loop 2 Block 6

Name		DT1(LFB2) Loop 2 Block 6	
Slot	Index	0x08	0x28
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.556 DT1(LFB2) Loop 2 Block 7

Name		DT1(LFB2) Loop 2 Block 7	
Slot	Index	0x08	0x29
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.557 DT1(LFB2) Loop 2 Block 8

Name		DT1(LFB2) Loop 2 Block 8	
Slot	Index	0x08	0x2A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.558 DT1(LFB2) Loop 2 Block 9

Name		DT1(LFB2) Loop 2 Block 9	
Slot	Index	0x08	0x2B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.559 DT1(LFB2) Loop 2 Block 10

Name		DT1(LFB2) Loop 2 Block 10	
Slot	Index	0x08	0x2C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.560 DT1(LFB2) Loop 2 Block 11

Name		DT1(LFB2) Loop 2 Block 11	
Slot	Index	0x08	0x2D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.561 DT1(LFB2) Loop 2 Block 12

Name		DT1(LFB2) Loop 2 Block 12	
Slot	Index	0x08	0x2E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.562 DT1(LFB2) Loop 2 Block 13

Name		DT1(LFB2) Loop 2 Block 13	
Slot	Index	0x08	0x2F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.563 DT1(LFB2) Loop 2 Block 14

Name		DT1(LFB2) Loop 2 Block 14	
Slot	Index	0x08	0x30
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.564 DT1(LFB2) Loop 2 Block 15

Name		DT1(LFB2) Loop 2 Block 15	
Slot	Index	0x08	0x31
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.565 DT1(LFB2) Loop 2 Block 16

Name		DT1(LFB2) Loop 2 Block 16	
Slot	Index	0x08	0x32
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.566 DT1(LFB2) Loop 2 Block 17

Name		DT1(LFB2) Loop 2 Block 17	
Slot	Index	0x08	0x33
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.567 DT1(LFB2) Loop 2 Block 18

Name		DT1(LFB2) Loop 2 Block 18	
Slot	Index	0x08	0x34
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.568 DT1(LFB2) Loop 2 Block 19

Name		DT1(LFB2) Loop 2 Block 19	
Slot	Index	0x08	0x35
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.569 DT1(LFB2) Loop 2 Block 20

Name		DT1(LFB2) Loop 2 Block 20	
Slot	Index	0x08	0x36
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.570 DT1(LFB2) Loop 2 Block 21

Name		DT1(LFB2) Loop 2 Block 21	
Slot	Index	0x08	0x37
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.571 DT1(LFB2) Loop 2 Block 22

Name		DT1(LFB2) Loop 2 Block 22	
Slot	Index	0x08	0x38
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.572 DT1(LFB2) Loop 2 Block 23

Name		DT1(LFB2) Loop 2 Block 23	
Slot	Index	0x08	0x39
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.573 DT1(LFB2) Loop 2 Block 24

Name		DT1(LFB2) Loop 2 Block 24	
Slot	Index	0x08	0x3A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.574 DT1(LFB2) Loop 2 Block 25

Name		DT1(LFB2) Loop 2 Block 25	
Slot	Index	0x08	0x3B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.575 DT1(LFB2) Loop 2 Block 26

Name		DT1(LFB2) Loop 2 Block 26	
Slot	Index	0x08	0x3C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.576 DT1(LFB2) Loop 2 Block 27

Name		DT1(LFB2) Loop 2 Block 27	
Slot	Index	0x08	0x3D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.577 DT1(LFB2) Loop 2 Block 28

Name		DT1(LFB2) Loop 2 Block 28	
Slot	Index	0x08	0x3E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.578 DT1(LFB2) Loop 2 Block 29

Name		DT1(LFB2) Loop 2 Block 29	
Slot	Index	0x08	0x3F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.579 DT1(LFB2) Loop 2 Block 30

Name		DT1(LFB2) Loop 2 Block 30	
Slot	Index	0x08	0x40
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.580 DT1(LFB2) Loop 2 Block 31

Name		DT1(LFB2) Loop 2 Block 31	
Slot	Index	0x08	0x41
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.581 DT1(LFB2) Loop 2 Block 32

Name		DT1(LFB2) Loop 2 Block 32	
Slot	Index	0x08	0x42
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.582 DT1(LFB3) Loop 3 Block 1

Name		DT1(LFB3) Loop 3 Block 1	
Slot	Index	0x08	0x45
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.583 DT1(LFB3) Loop 3 Block 2

Name		DT1(LFB3) Loop 3 Block 2	
Slot	Index	0x08	0x46
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.584 DT1(LFB3) Loop 3 Block 3

Name		DT1(LFB3) Loop 3 Block 3	
Slot	Index	0x08	0x47
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.585 DT1(LFB3) Loop 3 Block 4

Name		DT1(LFB3) Loop 3 Block 4	
Slot	Index	0x08	0x48
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.586 DT1(LFB3) Loop 3 Block 5

Name		DT1(LFB3) Loop 3 Block 5	
Slot	Index	0x08	0x49
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.587 DT1(LFB3) Loop 3 Block 6

Name		DT1(LFB3) Loop 3 Block 6	
Slot	Index	0x08	0x4A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.588 DT1(LFB3) Loop 3 Block 7

Name		DT1(LFB3) Loop 3 Block 7	
Slot	Index	0x08	0x4B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.589 DT1(LFB3) Loop 3 Block 8

Name		DT1(LFB3) Loop 3 Block 8	
Slot	Index	0x08	0x4C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.590 DT1(LFB3) Loop 3 Block 9

Name		DT1(LFB3) Loop 3 Block 9	
Slot	Index	0x08	0x4D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.591 DT1(LFB3) Loop 3 Block 10

Name		DT1(LFB3) Loop 3 Block 10	
Slot	Index	0x08	0x4E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.592 DT1(LFB3) Loop 3 Block 11

Name		DT1(LFB3) Loop 3 Block 11	
Slot	Index	0x08	0x4F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.593 DT1(LFB3) Loop 3 Block 12

Name		DT1(LFB3) Loop 3 Block 12	
Slot	Index	0x08	0x50
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.594 DT1(LFB3) Loop 3 Block 13

Name		DT1(LFB3) Loop 3 Block 13	
Slot	Index	0x08	0x51
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.595 DT1(LFB3) Loop 3 Block 14

Name		DT1(LFB3) Loop 3 Block 14	
Slot	Index	0x08	0x52
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.596 DT1(LFB3) Loop 3 Block 15

Name		DT1(LFB3) Loop 3 Block 15	
Slot	Index	0x08	0x53
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.597 DT1(LFB3) Loop 3 Block 16

Name		DT1(LFB3) Loop 3 Block 16	
Slot	Index	0x08	0x54
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.598 DT1(LFB3) Loop 3 Block 17

Name		DT1(LFB3) Loop 3 Block 17	
Slot	Index	0x08	0x55
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.599 DT1(LFB3) Loop 3 Block 18

Name		DT1(LFB3) Loop 3 Block 18	
Slot	Index	0x08	0x56
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.600 DT1(LFB3) Loop 3 Block 19

Name		DT1(LFB3) Loop 3 Block 19	
Slot	Index	0x08	0x57
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.601 DT1(LFB3) Loop 3 Block 20

Name		DT1(LFB3) Loop 3 Block 20	
Slot	Index	0x08	0x58
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.602 DT1(LFB3) Loop 3 Block 21

Name		DT1(LFB3) Loop 3 Block 21	
Slot	Index	0x08	0x59
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.603 DT1(LFB3) Loop 3 Block 22

Name		DT1(LFB3) Loop 3 Block 22	
Slot	Index	0x08	0x5A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.604 DT1(LFB3) Loop 3 Block 23

Name		DT1(LFB3) Loop 3 Block 23	
Slot	Index	0x08	0x5B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.605 DT1(LFB3) Loop 3 Block 24

Name		DT1(LFB3) Loop 3 Block 24	
Slot	Index	0x08	0x5C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.606 DT1(LFB3) Loop 3 Block 25

Name		DT1(LFB3) Loop 3 Block 25	
Slot	Index	0x08	0x5D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.607 DT1(LFB3) Loop 3 Block 26

Name		DT1(LFB3) Loop 3 Block 26	
Slot	Index	0x08	0x5E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.608 DT1(LFB3) Loop 3 Block 27

Name		DT1(LFB3) Loop 3 Block 27	
Slot	Index	0x08	0x5F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.609 DT1(LFB3) Loop 3 Block 28

Name		DT1(LFB3) Loop 3 Block 28	
Slot	Index	0x08	0x60
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5 Bus parameters

5.610 DT1(LFB3) Loop 3 Block 29

Name		DT1(LFB3) Loop 3 Block 29	
Slot	Index	0x08	0x61
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.611 DT1(LFB3) Loop 3 Block 30

Name		DT1(LFB3) Loop 3 Block 30	
Slot	Index	0x08	0x62
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.612 DT1(LFB3) Loop 3 Block 31

Name		DT1(LFB3) Loop 3 Block 31	
Slot	Index	0x08	0x63
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.613 DT1(LFB3) Loop 3 Block 32

Name		DT1(LFB3) Loop 3 Block 32	
Slot	Index	0x08	0x64
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	640
Scale	Offset	1	0

5.614 Dwell Block 1

Name		Dwell Block 1	
Slot	Index	0x0C	0x23
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.615 Dwell Block 2

Name		Dwell Block 2	
Slot	Index	0x0C	0x24
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5 Bus parameters

5.616 Dwell Block 3

Name		Dwell Block 3	
Slot	Index	0x0C	0x25
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.617 Dwell Block 4

Name		Dwell Block 4	
Slot	Index	0x0C	0x26
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.618 Dwell Block 5

Name		Dwell Block 5	
Slot	Index	0x0C	0x27
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.619 Dwell Block 6

Name		Dwell Block 6	
Slot	Index	0x0C	0x28
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.620 Dwell Block 7

Name		Dwell Block 7	
Slot	Index	0x0C	0x29
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.621 Dwell Block 8

Name		Dwell Block 8	
Slot	Index	0x0C	0x2A
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5 Bus parameters

5.622 Dwell Block 9

Name		Dwell Block 9	
Slot	Index	0x0C	0x2B
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.623 Dwell Block 10

Name		Dwell Block 10	
Slot	Index	0x0C	0x2C
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.624 Dwell Block 11

Name		Dwell Block 11	
Slot	Index	0x0C	0x2D
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.625 Dwell Block 12

Name		Dwell Block 12	
Slot	Index	0x0C	0x2E
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.626 Dwell Block 13

Name		Dwell Block 13	
Slot	Index	0x0C	0x2F
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.627 Dwell Block 14

Name		Dwell Block 14	
Slot	Index	0x0C	0x30
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5 Bus parameters

5.628 Dwell Block 15

Name		Dwell Block 15	
Slot	Index	0x0C	0x31
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.629 Dwell Block 16

Name		Dwell Block 16	
Slot	Index	0x0C	0x32
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.630 Dwell Block 17

Name		Dwell Block 17	
Slot	Index	0x0C	0x33
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.631 Dwell Block 18

Name		Dwell Block 18	
Slot	Index	0x0C	0x34
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.632 Dwell Block 19

Name		Dwell Block 19	
Slot	Index	0x0C	0x35
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.633 Dwell Block 20

Name		Dwell Block 20	
Slot	Index	0x0C	0x36
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5 Bus parameters

5.634 Dwell Block 21

Name		Dwell Block 21	
Slot	Index	0x0C	0x37
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.635 Dwell Block 22

Name		Dwell Block 22	
Slot	Index	0x0C	0x38
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.636 Dwell Block 23

Name		Dwell Block 23	
Slot	Index	0x0C	0x39
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.637 Dwell Block 24

Name		Dwell Block 24	
Slot	Index	0x0C	0x3A
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.638 Dwell Block 25

Name		Dwell Block 25	
Slot	Index	0x0C	0x3B
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.639 Dwell Block 26

Name		Dwell Block 26	
Slot	Index	0x0C	0x3C
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5 Bus parameters

5.640 Dwell Block 27

Name		Dwell Block 27	
Slot	Index	0x0C	0x3D
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.641 Dwell Block 28

Name		Dwell Block 28	
Slot	Index	0x0C	0x3E
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.642 Dwell Block 29

Name		Dwell Block 29	
Slot	Index	0x0C	0x3F
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.643 Dwell Block 30

Name		Dwell Block 30	
Slot	Index	0x0C	0x40
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.644 Dwell Block 31

Name		Dwell Block 31	
Slot	Index	0x0C	0x41
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5.645 Dwell Block 32

Name		Dwell Block 32	
Slot	Index	0x0C	0x42
Bytes	Units	4	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1000,00
Scale	Offset	500,00	0,00

5 Bus parameters

5.646 FB1

Name		FB1	
Slot	Index	0x11	0x07
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.647 FB1-1

Name		FB1-1	
Slot	Index	0x11	0x05
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.648 FB1-2

Name		FB1-2	
Slot	Index	0x11	0x06
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.649 FB2

Name		FB2	
Slot	Index	0x11	0x11
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.650 FB2-1

Name		FB2-1	
Slot	Index	0x11	0x0F
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.651 FB2-2

Name		FB2-2	
Slot	Index	0x11	0x10
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.652 FB3

Name		FB3	
Slot	Index	0x11	0x1B
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.653 FB3-1

Name		FB3-1	
Slot	Index	0x11	0x19
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.654 FB3-2

Name		FB3-2	
Slot	Index	0x11	0x1A
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.655 Feed Fwd Loop 1 Block 1

Name		Feed Fwd Loop 1 Block 1	
Slot	Index	0x0A	0x01
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.656 Feed Fwd Loop 1 Block 2

Name		Feed Fwd Loop 1 Block 2	
Slot	Index	0x0A	0x02
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.657 Feed Fwd Loop 1 Block 3

Name		Feed Fwd Loop 1 Block 3	
Slot	Index	0x0A	0x03
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5 Bus parameters

5.658 Feed Fwd Loop 1 Block 4

Name		Feed Fwd Loop 1 Block 4	
Slot	Index	0x0A	0x04
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.659 Feed Fwd Loop 1 Block 5

Name		Feed Fwd Loop 1 Block 5	
Slot	Index	0x0A	0x05
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.660 Feed Fwd Loop 1 Block 6

Name		Feed Fwd Loop 1 Block 6	
Slot	Index	0x0A	0x06
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.661 Feed Fwd Loop 1 Block 7

Name		Feed Fwd Loop 1 Block 7	
Slot	Index	0x0A	0x07
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.662 Feed Fwd Loop 1 Block 8

Name		Feed Fwd Loop 1 Block 8	
Slot	Index	0x0A	0x08
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.663 Feed Fwd Loop 1 Block 9

Name		Feed Fwd Loop 1 Block 9	
Slot	Index	0x0A	0x09
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5 Bus parameters

5.664 Feed Fwd Loop 1 Block 10

Name		Feed Fwd Loop 1 Block 10	
Slot	Index	0x0A	0x0A
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.665 Feed Fwd Loop 1 Block 11

Name		Feed Fwd Loop 1 Block 11	
Slot	Index	0x0A	0x0B
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.666 Feed Fwd Loop 1 Block 12

Name		Feed Fwd Loop 1 Block 12	
Slot	Index	0x0A	0x0C
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.667 Feed Fwd Loop 1 Block 13

Name		Feed Fwd Loop 1 Block 13	
Slot	Index	0x0A	0x0D
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.668 Feed Fwd Loop 1 Block 14

Name		Feed Fwd Loop 1 Block 14	
Slot	Index	0x0A	0x0E
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.669 Feed Fwd Loop 1 Block 15

Name		Feed Fwd Loop 1 Block 15	
Slot	Index	0x0A	0x0F
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5 Bus parameters

5.670 Feed Fwd Loop 1 Block 16

Name		Feed Fwd Loop 1 Block 16	
Slot	Index	0x0A	0x10
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.671 Feed Fwd Loop 1 Block 17

Name		Feed Fwd Loop 1 Block 17	
Slot	Index	0x0A	0x11
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.672 Feed Fwd Loop 1 Block 18

Name		Feed Fwd Loop 1 Block 18	
Slot	Index	0x0A	0x12
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.673 Feed Fwd Loop 1 Block 19

Name		Feed Fwd Loop 1 Block 19	
Slot	Index	0x0A	0x13
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.674 Feed Fwd Loop 1 Block 20

Name		Feed Fwd Loop 1 Block 20	
Slot	Index	0x0A	0x14
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.675 Feed Fwd Loop 1 Block 21

Name		Feed Fwd Loop 1 Block 21	
Slot	Index	0x0A	0x15
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5 Bus parameters

5.676 Feed Fwd Loop 1 Block 22

Name		Feed Fwd Loop 1 Block 22	
Slot	Index	0x0A	0x16
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.677 Feed Fwd Loop 1 Block 23

Name		Feed Fwd Loop 1 Block 23	
Slot	Index	0x0A	0x17
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.678 Feed Fwd Loop 1 Block 24

Name		Feed Fwd Loop 1 Block 24	
Slot	Index	0x0A	0x18
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.679 Feed Fwd Loop 1 Block 25

Name		Feed Fwd Loop 1 Block 25	
Slot	Index	0x0A	0x19
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.680 Feed Fwd Loop 1 Block 26

Name		Feed Fwd Loop 1 Block 26	
Slot	Index	0x0A	0x1A
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.681 Feed Fwd Loop 1 Block 27

Name		Feed Fwd Loop 1 Block 27	
Slot	Index	0x0A	0x1B
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5 Bus parameters

5.682 Feed Fwd Loop 1 Block 28

Name		Feed Fwd Loop 1 Block 28	
Slot	Index	0x0A	0x1C
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.683 Feed Fwd Loop 1 Block 29

Name		Feed Fwd Loop 1 Block 29	
Slot	Index	0x0A	0x1D
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.684 Feed Fwd Loop 1 Block 30

Name		Feed Fwd Loop 1 Block 30	
Slot	Index	0x0A	0x1E
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.685 Feed Fwd Loop 1 Block 31

Name		Feed Fwd Loop 1 Block 31	
Slot	Index	0x0A	0x1F
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.686 Feed Fwd Loop 1 Block 32

Name		Feed Fwd Loop 1 Block 32	
Slot	Index	0x0A	0x20
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.687 Feed Fwd Loop 2 Block 1

Name		Feed Fwd Loop 2 Block 1	
Slot	Index	0x0A	0x23
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5 Bus parameters

5.688 Feed Fwd Loop 2 Block 2

Name		Feed Fwd Loop 2 Block 2	
Slot	Index	0x0A	0x24
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.689 Feed Fwd Loop 2 Block 3

Name		Feed Fwd Loop 2 Block 3	
Slot	Index	0x0A	0x25
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.690 Feed Fwd Loop 2 Block 4

Name		Feed Fwd Loop 2 Block 4	
Slot	Index	0x0A	0x26
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.691 Feed Fwd Loop 2 Block 5

Name		Feed Fwd Loop 2 Block 5	
Slot	Index	0x0A	0x27
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.692 Feed Fwd Loop 2 Block 6

Name		Feed Fwd Loop 2 Block 6	
Slot	Index	0x0A	0x28
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.693 Feed Fwd Loop 2 Block 7

Name		Feed Fwd Loop 2 Block 7	
Slot	Index	0x0A	0x29
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5 Bus parameters

5.694 Feed Fwd Loop 2 Block 8

Name		Feed Fwd Loop 2 Block 8	
Slot	Index	0x0A	0x2A
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.695 Feed Fwd Loop 2 Block 9

Name		Feed Fwd Loop 2 Block 9	
Slot	Index	0x0A	0x2B
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.696 Feed Fwd Loop 2 Block 10

Name		Feed Fwd Loop 2 Block 10	
Slot	Index	0x0A	0x2C
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.697 Feed Fwd Loop 2 Block 11

Name		Feed Fwd Loop 2 Block 11	
Slot	Index	0x0A	0x2D
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.698 Feed Fwd Loop 2 Block 12

Name		Feed Fwd Loop 2 Block 12	
Slot	Index	0x0A	0x2E
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.699 Feed Fwd Loop 2 Block 13

Name		Feed Fwd Loop 2 Block 13	
Slot	Index	0x0A	0x2F
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5 Bus parameters

5.700 Feed Fwd Loop 2 Block 14

Name		Feed Fwd Loop 2 Block 14	
Slot	Index	0x0A	0x30
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.701 Feed Fwd Loop 2 Block 15

Name		Feed Fwd Loop 2 Block 15	
Slot	Index	0x0A	0x31
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.702 Feed Fwd Loop 2 Block 16

Name		Feed Fwd Loop 2 Block 16	
Slot	Index	0x0A	0x32
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.703 Feed Fwd Loop 2 Block 17

Name		Feed Fwd Loop 2 Block 17	
Slot	Index	0x0A	0x33
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.704 Feed Fwd Loop 2 Block 18

Name		Feed Fwd Loop 2 Block 18	
Slot	Index	0x0A	0x34
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.705 Feed Fwd Loop 2 Block 19

Name		Feed Fwd Loop 2 Block 19	
Slot	Index	0x0A	0x35
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5 Bus parameters

5.706 Feed Fwd Loop 2 Block 20

Name		Feed Fwd Loop 2 Block 20	
Slot	Index	0x0A	0x36
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.707 Feed Fwd Loop 2 Block 21

Name		Feed Fwd Loop 2 Block 21	
Slot	Index	0x0A	0x37
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.708 Feed Fwd Loop 2 Block 22

Name		Feed Fwd Loop 2 Block 22	
Slot	Index	0x0A	0x38
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.709 Feed Fwd Loop 2 Block 23

Name		Feed Fwd Loop 2 Block 23	
Slot	Index	0x0A	0x39
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.710 Feed Fwd Loop 2 Block 24

Name		Feed Fwd Loop 2 Block 24	
Slot	Index	0x0A	0x3A
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.711 Feed Fwd Loop 2 Block 25

Name		Feed Fwd Loop 2 Block 25	
Slot	Index	0x0A	0x3B
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5 Bus parameters

5.712 Feed Fwd Loop 2 Block 26

Name		Feed Fwd Loop 2 Block 26	
Slot	Index	0x0A	0x3C
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.713 Feed Fwd Loop 2 Block 27

Name		Feed Fwd Loop 2 Block 27	
Slot	Index	0x0A	0x3D
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.714 Feed Fwd Loop 2 Block 28

Name		Feed Fwd Loop 2 Block 28	
Slot	Index	0x0A	0x3E
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.715 Feed Fwd Loop 2 Block 29

Name		Feed Fwd Loop 2 Block 29	
Slot	Index	0x0A	0x3F
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.716 Feed Fwd Loop 2 Block 30

Name		Feed Fwd Loop 2 Block 30	
Slot	Index	0x0A	0x40
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.717 Feed Fwd Loop 2 Block 31

Name		Feed Fwd Loop 2 Block 31	
Slot	Index	0x0A	0x41
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5 Bus parameters

5.718 Feed Fwd Loop 2 Block 32

Name		Feed Fwd Loop 2 Block 32	
Slot	Index	0x0A	0x42
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.719 Feed Fwd Loop 3 Block 1

Name		Feed Fwd Loop 3 Block 1	
Slot	Index	0x0A	0x45
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.720 Feed Fwd Loop 3 Block 2

Name		Feed Fwd Loop 3 Block 2	
Slot	Index	0x0A	0x46
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.721 Feed Fwd Loop 3 Block 3

Name		Feed Fwd Loop 3 Block 3	
Slot	Index	0x0A	0x47
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.722 Feed Fwd Loop 3 Block 4

Name		Feed Fwd Loop 3 Block 4	
Slot	Index	0x0A	0x48
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.723 Feed Fwd Loop 3 Block 5

Name		Feed Fwd Loop 3 Block 5	
Slot	Index	0x0A	0x49
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5 Bus parameters

5.724 Feed Fwd Loop 3 Block 6

Name		Feed Fwd Loop 3 Block 6	
Slot	Index	0x0A	0x4A
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.725 Feed Fwd Loop 3 Block 7

Name		Feed Fwd Loop 3 Block 7	
Slot	Index	0x0A	0x4B
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.726 Feed Fwd Loop 3 Block 8

Name		Feed Fwd Loop 3 Block 8	
Slot	Index	0x0A	0x4C
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.727 Feed Fwd Loop 3 Block 9

Name		Feed Fwd Loop 3 Block 9	
Slot	Index	0x0A	0x4D
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.728 Feed Fwd Loop 3 Block 10

Name		Feed Fwd Loop 3 Block 10	
Slot	Index	0x0A	0x4E
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.729 Feed Fwd Loop 3 Block 11

Name		Feed Fwd Loop 3 Block 11	
Slot	Index	0x0A	0x4F
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5 Bus parameters

5.730 Feed Fwd Loop 3 Block 12

Name		Feed Fwd Loop 3 Block 12	
Slot	Index	0x0A	0x50
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.731 Feed Fwd Loop 3 Block 13

Name		Feed Fwd Loop 3 Block 13	
Slot	Index	0x0A	0x51
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.732 Feed Fwd Loop 3 Block 14

Name		Feed Fwd Loop 3 Block 14	
Slot	Index	0x0A	0x52
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.733 Feed Fwd Loop 3 Block 15

Name		Feed Fwd Loop 3 Block 15	
Slot	Index	0x0A	0x53
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.734 Feed Fwd Loop 3 Block 16

Name		Feed Fwd Loop 3 Block 16	
Slot	Index	0x0A	0x54
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.735 Feed Fwd Loop 3 Block 17

Name		Feed Fwd Loop 3 Block 17	
Slot	Index	0x0A	0x55
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5 Bus parameters

5.736 Feed Fwd Loop 3 Block 18

Name		Feed Fwd Loop 3 Block 18	
Slot	Index	0x0A	0x56
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.737 Feed Fwd Loop 3 Block 19

Name		Feed Fwd Loop 3 Block 19	
Slot	Index	0x0A	0x57
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.738 Feed Fwd Loop 3 Block 20

Name		Feed Fwd Loop 3 Block 20	
Slot	Index	0x0A	0x58
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.739 Feed Fwd Loop 3 Block 21

Name		Feed Fwd Loop 3 Block 21	
Slot	Index	0x0A	0x59
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.740 Feed Fwd Loop 3 Block 22

Name		Feed Fwd Loop 3 Block 22	
Slot	Index	0x0A	0x5A
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.741 Feed Fwd Loop 3 Block 23

Name		Feed Fwd Loop 3 Block 23	
Slot	Index	0x0A	0x5B
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5 Bus parameters

5.742 Feed Fwd Loop 3 Block 24

Name		Feed Fwd Loop 3 Block 24	
Slot	Index	0x0A	0x5C
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.743 Feed Fwd Loop 3 Block 25

Name		Feed Fwd Loop 3 Block 25	
Slot	Index	0x0A	0x5D
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.744 Feed Fwd Loop 3 Block 26

Name		Feed Fwd Loop 3 Block 26	
Slot	Index	0x0A	0x5E
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.745 Feed Fwd Loop 3 Block 27

Name		Feed Fwd Loop 3 Block 27	
Slot	Index	0x0A	0x5F
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.746 Feed Fwd Loop 3 Block 28

Name		Feed Fwd Loop 3 Block 28	
Slot	Index	0x0A	0x60
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.747 Feed Fwd Loop 3 Block 29

Name		Feed Fwd Loop 3 Block 29	
Slot	Index	0x0A	0x61
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5 Bus parameters

5.748 Feed Fwd Loop 3 Block 30

Name		Feed Fwd Loop 3 Block 30	
Slot	Index	0x0A	0x62
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.749 Feed Fwd Loop 3 Block 31

Name		Feed Fwd Loop 3 Block 31	
Slot	Index	0x0A	0x63
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.750 Feed Fwd Loop 3 Block 32

Name		Feed Fwd Loop 3 Block 32	
Slot	Index	0x0A	0x64
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	1,00
Scale	Offset	250,00	0,00

5.751 Flag1 Debounce

Name		Flag1 Debounce	
Slot	Index	0x0F	0x43
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.752 Flag1 Window

Name		Flag1 Window	
Slot	Index	0x0F	0x3B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.753 Flag2 Debounce

Name		Flag2 Debounce	
Slot	Index	0x0F	0x44
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5 Bus parameters

5.754 Flag2 Window

Name		Flag2 Window	
Slot	Index	0x0F	0x3C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.755 Flag3 Debounce

Name		Flag3 Debounce	
Slot	Index	0x0F	0x45
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.756 Flag3 Window

Name		Flag3 Window	
Slot	Index	0x0F	0x3D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.757 Flag4 Debounce

Name		Flag4 Debounce	
Slot	Index	0x0F	0x46
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.758 Flag4 Window

Name		Flag4 Window	
Slot	Index	0x0F	0x3E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.759 Flag5 Debounce

Name		Flag5 Debounce	
Slot	Index	0x0F	0x47
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5 Bus parameters

5.760 Flag5 Window

Name		Flag5 Window	
Slot	Index	0x0F	0x3F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.761 Flag6 Debounce

Name		Flag6 Debounce	
Slot	Index	0x0F	0x48
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.762 Flag6 Window

Name		Flag6 Window	
Slot	Index	0x0F	0x40
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.763 Flag7 Debounce

Name		Flag7 Debounce	
Slot	Index	0x0F	0x49
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.764 Flag7 Window

Name		Flag7 Window	
Slot	Index	0x0F	0x41
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.765 Flag8 Debounce

Name		Flag8 Debounce	
Slot	Index	0x10	0x7F
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5 Bus parameters

5.766 Flag8 Window

Name		Flag8 Window	
Slot	Index	0x10	0x75
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.767 Flag9 Debounce

Name		Flag9 Debounce	
Slot	Index	0x10	0x80
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.768 Flag9 Window

Name		Flag9 Window	
Slot	Index	0x10	0x76
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.769 Flag10 Debounce

Name		Flag10 Debounce	
Slot	Index	0x10	0x81
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.770 Flag10 Window

Name		Flag10 Window	
Slot	Index	0x10	0x77
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.771 Flag11 Debounce

Name		Flag11 Debounce	
Slot	Index	0x10	0x82
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5 Bus parameters

5.772 Flag11 Window

Name		Flag11 Window	
Slot	Index	0x10	0x78
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.773 Flag12 Debounce

Name		Flag12 Debounce	
Slot	Index	0x10	0x83
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.774 Flag12 Window

Name		Flag12 Window	
Slot	Index	0x10	0x79
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.775 Flag13 Debounce

Name		Flag13 Debounce	
Slot	Index	0x10	0x84
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.776 Flag13 Window

Name		Flag13 Window	
Slot	Index	0x10	0x7A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.777 Flag14 Debounce

Name		Flag14 Debounce	
Slot	Index	0x10	0x85
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5 Bus parameters

5.778 Flag14 Window

Name		Flag14 Window	
Slot	Index	0x10	0x7B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.779 Flag15 Debounce

Name		Flag15 Debounce	
Slot	Index	0x10	0x86
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.780 Flag15 Window

Name		Flag15 Window	
Slot	Index	0x10	0x7C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.781 Flag16 Debounce

Name		Flag16 Debounce	
Slot	Index	0x10	0x87
Bytes	Units	2	s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0,01	60,00
Scale	Offset	500,00	0,00

5.782 Flag16 Window

Name		Flag16 Window	
Slot	Index	0x10	0x7D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.783 Gain - Valve 1

Name		Gain - Valve 1	
Slot	Index	0x10	0x1E
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-10,00	10,00
Scale	Offset	128,00	0,00

5 Bus parameters

5.784 Gain - Valve 2

Name		Gain - Valve 2	
Slot	Index	0x10	0x1F
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-10,00	10,00
Scale	Offset	128,00	0,00

5.785 Gain - Valve 3

Name		Gain - Valve 3	
Slot	Index	0x10	0x20
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-10,00	10,00
Scale	Offset	128,00	0,00

5.786 Gain + Valve 1

Name		Gain + Valve 1	
Slot	Index	0x10	0x21
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-10,00	10,00
Scale	Offset	128,00	0,00

5.787 Gain + Valve 2

Name		Gain + Valve 2	
Slot	Index	0x10	0x22
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-10,00	10,00
Scale	Offset	128,00	0,00

5.788 Gain + Valve 3

Name		Gain + Valve 3	
Slot	Index	0x10	0x23
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-10,00	10,00
Scale	Offset	128,00	0,00

5.789 I Loop 1 Block 1

Name		I Loop 1 Block 1	
Slot	Index	0x05	0x01
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5 Bus parameters

5.790 I Loop 1 Block 2

Name		I Loop 1 Block 2	
Slot	Index	0x05	0x02
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.791 I Loop 1 Block 3

Name		I Loop 1 Block 3	
Slot	Index	0x05	0x03
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.792 I Loop 1 Block 4

Name		I Loop 1 Block 4	
Slot	Index	0x05	0x04
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.793 I Loop 1 Block 5

Name		I Loop 1 Block 5	
Slot	Index	0x05	0x05
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.794 I Loop 1 Block 6

Name		I Loop 1 Block 6	
Slot	Index	0x05	0x06
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.795 I Loop 1 Block 7

Name		I Loop 1 Block 7	
Slot	Index	0x05	0x07
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5 Bus parameters

5.796 I Loop 1 Block 8

Name		I Loop 1 Block 8	
Slot	Index	0x05	0x08
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.797 I Loop 1 Block 9

Name		I Loop 1 Block 9	
Slot	Index	0x05	0x09
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.798 I Loop 1 Block 10

Name		I Loop 1 Block 10	
Slot	Index	0x05	0x0A
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.799 I Loop 1 Block 11

Name		I Loop 1 Block 11	
Slot	Index	0x05	0x0B
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.800 I Loop 1 Block 12

Name		I Loop 1 Block 12	
Slot	Index	0x05	0x0C
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.801 I Loop 1 Block 13

Name		I Loop 1 Block 13	
Slot	Index	0x05	0x0D
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5 Bus parameters

5.802 I Loop 1 Block 14

Name		I Loop 1 Block 14	
Slot	Index	0x05	0x0E
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.803 I Loop 1 Block 15

Name		I Loop 1 Block 15	
Slot	Index	0x05	0x0F
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.804 I Loop 1 Block 16

Name		I Loop 1 Block 16	
Slot	Index	0x05	0x10
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.805 I Loop 1 Block 17

Name		I Loop 1 Block 17	
Slot	Index	0x05	0x11
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.806 I Loop 1 Block 18

Name		I Loop 1 Block 18	
Slot	Index	0x05	0x12
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.807 I Loop 1 Block 19

Name		I Loop 1 Block 19	
Slot	Index	0x05	0x13
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5 Bus parameters

5.808 I Loop 1 Block 20

Name		I Loop 1 Block 20	
Slot	Index	0x05	0x14
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.809 I Loop 1 Block 21

Name		I Loop 1 Block 21	
Slot	Index	0x05	0x15
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.810 I Loop 1 Block 22

Name		I Loop 1 Block 22	
Slot	Index	0x05	0x16
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.811 I Loop 1 Block 23

Name		I Loop 1 Block 23	
Slot	Index	0x05	0x17
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.812 I Loop 1 Block 24

Name		I Loop 1 Block 24	
Slot	Index	0x05	0x18
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.813 I Loop 1 Block 25

Name		I Loop 1 Block 25	
Slot	Index	0x05	0x19
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5 Bus parameters

5.814 I Loop 1 Block 26

Name		I Loop 1 Block 26	
Slot	Index	0x05	0x1A
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.815 I Loop 1 Block 27

Name		I Loop 1 Block 27	
Slot	Index	0x05	0x1B
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.816 I Loop 1 Block 28

Name		I Loop 1 Block 28	
Slot	Index	0x05	0x1C
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.817 I Loop 1 Block 29

Name		I Loop 1 Block 29	
Slot	Index	0x05	0x1D
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.818 I Loop 1 Block 30

Name		I Loop 1 Block 30	
Slot	Index	0x05	0x1E
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.819 I Loop 1 Block 31

Name		I Loop 1 Block 31	
Slot	Index	0x05	0x1F
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5 Bus parameters

5.820 I Loop 1 Block 32

Name		I Loop 1 Block 32	
Slot	Index	0x05	0x20
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.821 I Loop 2 Block 1

Name		I Loop 2 Block 1	
Slot	Index	0x05	0x23
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.822 I Loop 2 Block 2

Name		I Loop 2 Block 2	
Slot	Index	0x05	0x24
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.823 I Loop 2 Block 3

Name		I Loop 2 Block 3	
Slot	Index	0x05	0x25
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.824 I Loop 2 Block 4

Name		I Loop 2 Block 4	
Slot	Index	0x05	0x26
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.825 I Loop 2 Block 5

Name		I Loop 2 Block 5	
Slot	Index	0x05	0x27
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5 Bus parameters

5.826 I Loop 2 Block 6

Name		I Loop 2 Block 6	
Slot	Index	0x05	0x28
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.827 I Loop 2 Block 7

Name		I Loop 2 Block 7	
Slot	Index	0x05	0x29
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.828 I Loop 2 Block 8

Name		I Loop 2 Block 8	
Slot	Index	0x05	0x2A
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.829 I Loop 2 Block 9

Name		I Loop 2 Block 9	
Slot	Index	0x05	0x2B
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.830 I Loop 2 Block 10

Name		I Loop 2 Block 10	
Slot	Index	0x05	0x2C
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.831 I Loop 2 Block 11

Name		I Loop 2 Block 11	
Slot	Index	0x05	0x2D
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5 Bus parameters

5.832 I Loop 2 Block 12

Name		I Loop 2 Block 12	
Slot	Index	0x05	0x2E
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.833 I Loop 2 Block 13

Name		I Loop 2 Block 13	
Slot	Index	0x05	0x2F
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.834 I Loop 2 Block 14

Name		I Loop 2 Block 14	
Slot	Index	0x05	0x30
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.835 I Loop 2 Block 15

Name		I Loop 2 Block 15	
Slot	Index	0x05	0x31
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.836 I Loop 2 Block 16

Name		I Loop 2 Block 16	
Slot	Index	0x05	0x32
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.837 I Loop 2 Block 17

Name		I Loop 2 Block 17	
Slot	Index	0x05	0x33
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5 Bus parameters

5.838 I Loop 2 Block 18

Name		I Loop 2 Block 18	
Slot	Index	0x05	0x34
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.839 I Loop 2 Block 19

Name		I Loop 2 Block 19	
Slot	Index	0x05	0x35
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.840 I Loop 2 Block 20

Name		I Loop 2 Block 20	
Slot	Index	0x05	0x36
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.841 I Loop 2 Block 21

Name		I Loop 2 Block 21	
Slot	Index	0x05	0x37
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.842 I Loop 2 Block 22

Name		I Loop 2 Block 22	
Slot	Index	0x05	0x38
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.843 I Loop 2 Block 23

Name		I Loop 2 Block 23	
Slot	Index	0x05	0x39
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5 Bus parameters

5.844 I Loop 2 Block 24

Name		I Loop 2 Block 24	
Slot	Index	0x05	0x3A
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.845 I Loop 2 Block 25

Name		I Loop 2 Block 25	
Slot	Index	0x05	0x3B
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.846 I Loop 2 Block 26

Name		I Loop 2 Block 26	
Slot	Index	0x05	0x3C
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.847 I Loop 2 Block 27

Name		I Loop 2 Block 27	
Slot	Index	0x05	0x3D
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.848 I Loop 2 Block 28

Name		I Loop 2 Block 28	
Slot	Index	0x05	0x3E
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.849 I Loop 2 Block 29

Name		I Loop 2 Block 29	
Slot	Index	0x05	0x3F
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5 Bus parameters

5.850 I Loop 2 Block 30

Name		I Loop 2 Block 30	
Slot	Index	0x05	0x40
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.851 I Loop 2 Block 31

Name		I Loop 2 Block 31	
Slot	Index	0x05	0x41
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.852 I Loop 2 Block 32

Name		I Loop 2 Block 32	
Slot	Index	0x05	0x42
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.853 I Loop 3 Block 1

Name		I Loop 3 Block 1	
Slot	Index	0x05	0x45
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.854 I Loop 3 Block 2

Name		I Loop 3 Block 2	
Slot	Index	0x05	0x46
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.855 I Loop 3 Block 3

Name		I Loop 3 Block 3	
Slot	Index	0x05	0x47
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5 Bus parameters

5.856 I Loop 3 Block 4

Name		I Loop 3 Block 4	
Slot	Index	0x05	0x48
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.857 I Loop 3 Block 5

Name		I Loop 3 Block 5	
Slot	Index	0x05	0x49
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.858 I Loop 3 Block 6

Name		I Loop 3 Block 6	
Slot	Index	0x05	0x4A
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.859 I Loop 3 Block 7

Name		I Loop 3 Block 7	
Slot	Index	0x05	0x4B
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.860 I Loop 3 Block 8

Name		I Loop 3 Block 8	
Slot	Index	0x05	0x4C
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.861 I Loop 3 Block 9

Name		I Loop 3 Block 9	
Slot	Index	0x05	0x4D
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5 Bus parameters

5.862 I Loop 3 Block 10

Name		I Loop 3 Block 10	
Slot	Index	0x05	0x4E
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.863 I Loop 3 Block 11

Name		I Loop 3 Block 11	
Slot	Index	0x05	0x4F
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.864 I Loop 3 Block 12

Name		I Loop 3 Block 12	
Slot	Index	0x05	0x50
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.865 I Loop 3 Block 13

Name		I Loop 3 Block 13	
Slot	Index	0x05	0x51
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.866 I Loop 3 Block 14

Name		I Loop 3 Block 14	
Slot	Index	0x05	0x52
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.867 I Loop 3 Block 15

Name		I Loop 3 Block 15	
Slot	Index	0x05	0x53
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5 Bus parameters

5.868 I Loop 3 Block 16

Name		I Loop 3 Block 16	
Slot	Index	0x05	0x54
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.869 I Loop 3 Block 17

Name		I Loop 3 Block 17	
Slot	Index	0x05	0x55
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.870 I Loop 3 Block 18

Name		I Loop 3 Block 18	
Slot	Index	0x05	0x56
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.871 I Loop 3 Block 19

Name		I Loop 3 Block 19	
Slot	Index	0x05	0x57
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.872 I Loop 3 Block 20

Name		I Loop 3 Block 20	
Slot	Index	0x05	0x58
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.873 I Loop 3 Block 21

Name		I Loop 3 Block 21	
Slot	Index	0x05	0x59
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5 Bus parameters

5.874 I Loop 3 Block 22

Name		I Loop 3 Block 22	
Slot	Index	0x05	0x5A
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.875 I Loop 3 Block 23

Name		I Loop 3 Block 23	
Slot	Index	0x05	0x5B
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.876 I Loop 3 Block 24

Name		I Loop 3 Block 24	
Slot	Index	0x05	0x5C
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.877 I Loop 3 Block 25

Name		I Loop 3 Block 25	
Slot	Index	0x05	0x5D
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.878 I Loop 3 Block 26

Name		I Loop 3 Block 26	
Slot	Index	0x05	0x5E
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.879 I Loop 3 Block 27

Name		I Loop 3 Block 27	
Slot	Index	0x05	0x5F
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5 Bus parameters

5.880 I Loop 3 Block 28

Name		I Loop 3 Block 28	
Slot	Index	0x05	0x60
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.881 I Loop 3 Block 29

Name		I Loop 3 Block 29	
Slot	Index	0x05	0x61
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.882 I Loop 3 Block 30

Name		I Loop 3 Block 30	
Slot	Index	0x05	0x62
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.883 I Loop 3 Block 31

Name		I Loop 3 Block 31	
Slot	Index	0x05	0x63
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.884 I Loop 3 Block 32

Name		I Loop 3 Block 32	
Slot	Index	0x05	0x64
Bytes	Units	2	ms
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	30000
Scale	Offset	1	0

5.885 I on |CMD-LFB|< Loop 1 Block 1

Name		I on CMD-LFB < Loop 1 Block 1	
Slot	Index	0x06	0x01
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.886 I on |CMD-LFB|< Loop 1 Block 2

Name		I on CMD-LFB < Loop 1 Block 2	
Slot	Index	0x06	0x02
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.887 I on |CMD-LFB|< Loop 1 Block 3

Name		I on CMD-LFB < Loop 1 Block 3	
Slot	Index	0x06	0x03
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.888 I on |CMD-LFB|< Loop 1 Block 4

Name		I on CMD-LFB < Loop 1 Block 4	
Slot	Index	0x06	0x04
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.889 I on |CMD-LFB|< Loop 1 Block 5

Name		I on CMD-LFB < Loop 1 Block 5	
Slot	Index	0x06	0x05
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.890 I on |CMD-LFB|< Loop 1 Block 6

Name		I on CMD-LFB < Loop 1 Block 6	
Slot	Index	0x06	0x06
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.891 I on |CMD-LFB|< Loop 1 Block 7

Name		I on CMD-LFB < Loop 1 Block 7	
Slot	Index	0x06	0x07
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.892 I on |CMD-LFB|< Loop 1 Block 8

Name		I on CMD-LFB < Loop 1 Block 8	
Slot	Index	0x06	0x08
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.893 I on |CMD-LFB|< Loop 1 Block 9

Name		I on CMD-LFB < Loop 1 Block 9	
Slot	Index	0x06	0x09
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.894 I on |CMD-LFB|< Loop 1 Block 10

Name		I on CMD-LFB < Loop 1 Block 10	
Slot	Index	0x06	0x0A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.895 I on |CMD-LFB|< Loop 1 Block 11

Name		I on CMD-LFB < Loop 1 Block 11	
Slot	Index	0x06	0x0B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.896 I on |CMD-LFB|< Loop 1 Block 12

Name		I on CMD-LFB < Loop 1 Block 12	
Slot	Index	0x06	0x0C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.897 I on |CMD-LFB|< Loop 1 Block 13

Name		I on CMD-LFB < Loop 1 Block 13	
Slot	Index	0x06	0x0D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.898 I on |CMD-LFB|< Loop 1 Block 14

Name		I on CMD-LFB < Loop 1 Block 14	
Slot	Index	0x06	0x0E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.899 I on |CMD-LFB|< Loop 1 Block 15

Name		I on CMD-LFB < Loop 1 Block 15	
Slot	Index	0x06	0x0F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.900 I on |CMD-LFB|< Loop 1 Block 16

Name		I on CMD-LFB < Loop 1 Block 16	
Slot	Index	0x06	0x10
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.901 I on |CMD-LFB|< Loop 1 Block 17

Name		I on CMD-LFB < Loop 1 Block 17	
Slot	Index	0x06	0x11
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.902 I on |CMD-LFB|< Loop 1 Block 18

Name		I on CMD-LFB < Loop 1 Block 18	
Slot	Index	0x06	0x12
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.903 I on |CMD-LFB|< Loop 1 Block 19

Name		I on CMD-LFB < Loop 1 Block 19	
Slot	Index	0x06	0x13
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.904 I on |CMD-LFB|< Loop 1 Block 20

Name		I on CMD-LFB < Loop 1 Block 20	
Slot	Index	0x06	0x14
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.905 I on |CMD-LFB|< Loop 1 Block 21

Name		I on CMD-LFB < Loop 1 Block 21	
Slot	Index	0x06	0x15
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.906 I on |CMD-LFB|< Loop 1 Block 22

Name		I on CMD-LFB < Loop 1 Block 22	
Slot	Index	0x06	0x16
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.907 I on |CMD-LFB|< Loop 1 Block 23

Name		I on CMD-LFB < Loop 1 Block 23	
Slot	Index	0x06	0x17
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.908 I on |CMD-LFB|< Loop 1 Block 24

Name		I on CMD-LFB < Loop 1 Block 24	
Slot	Index	0x06	0x18
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.909 I on |CMD-LFB|< Loop 1 Block 25

Name		I on CMD-LFB < Loop 1 Block 25	
Slot	Index	0x06	0x19
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.910 I on |CMD-LFB|< Loop 1 Block 26

Name		I on CMD-LFB < Loop 1 Block 26	
Slot	Index	0x06	0x1A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.911 I on |CMD-LFB|< Loop 1 Block 27

Name		I on CMD-LFB < Loop 1 Block 27	
Slot	Index	0x06	0x1B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.912 I on |CMD-LFB|< Loop 1 Block 28

Name		I on CMD-LFB < Loop 1 Block 28	
Slot	Index	0x06	0x1C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.913 I on |CMD-LFB|< Loop 1 Block 29

Name		I on CMD-LFB < Loop 1 Block 29	
Slot	Index	0x06	0x1D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.914 I on |CMD-LFB|< Loop 1 Block 30

Name		I on CMD-LFB < Loop 1 Block 30	
Slot	Index	0x06	0x1E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.915 I on |CMD-LFB|< Loop 1 Block 31

Name		I on CMD-LFB < Loop 1 Block 31	
Slot	Index	0x06	0x1F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.916 I on |CMD-LFB|< Loop 1 Block 32

Name		I on CMD-LFB < Loop 1 Block 32	
Slot	Index	0x06	0x20
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.917 I on |CMD-LFB|< Loop 2 Block 1

Name		I on CMD-LFB < Loop 2 Block 1	
Slot	Index	0x06	0x23
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.918 I on |CMD-LFB|< Loop 2 Block 2

Name		I on CMD-LFB < Loop 2 Block 2	
Slot	Index	0x06	0x24
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.919 I on |CMD-LFB|< Loop 2 Block 3

Name		I on CMD-LFB < Loop 2 Block 3	
Slot	Index	0x06	0x25
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.920 I on |CMD-LFB|< Loop 2 Block 4

Name		I on CMD-LFB < Loop 2 Block 4	
Slot	Index	0x06	0x26
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.921 I on |CMD-LFB|< Loop 2 Block 5

Name		I on CMD-LFB < Loop 2 Block 5	
Slot	Index	0x06	0x27
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.922 I on |CMD-LFB|< Loop 2 Block 6

Name		I on CMD-LFB < Loop 2 Block 6	
Slot	Index	0x06	0x28
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.923 I on |CMD-LFB|< Loop 2 Block 7

Name		I on CMD-LFB < Loop 2 Block 7	
Slot	Index	0x06	0x29
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.924 I on |CMD-LFB|< Loop 2 Block 8

Name		I on CMD-LFB < Loop 2 Block 8	
Slot	Index	0x06	0x2A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.925 I on |CMD-LFB|< Loop 2 Block 9

Name		I on CMD-LFB < Loop 2 Block 9	
Slot	Index	0x06	0x2B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.926 I on |CMD-LFB|< Loop 2 Block 10

Name		I on CMD-LFB < Loop 2 Block 10	
Slot	Index	0x06	0x2C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.927 I on |CMD-LFB|< Loop 2 Block 11

Name		I on CMD-LFB < Loop 2 Block 11	
Slot	Index	0x06	0x2D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.928 I on |CMD-LFB|< Loop 2 Block 12

Name		I on CMD-LFB < Loop 2 Block 12	
Slot	Index	0x06	0x2E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.929 I on |CMD-LFB|< Loop 2 Block 13

Name		I on CMD-LFB < Loop 2 Block 13	
Slot	Index	0x06	0x2F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.930 I on |CMD-LFB|< Loop 2 Block 14

Name		I on CMD-LFB < Loop 2 Block 14	
Slot	Index	0x06	0x30
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.931 I on |CMD-LFB|< Loop 2 Block 15

Name		I on CMD-LFB < Loop 2 Block 15	
Slot	Index	0x06	0x31
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.932 I on |CMD-LFB|< Loop 2 Block 16

Name		I on CMD-LFB < Loop 2 Block 16	
Slot	Index	0x06	0x32
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.933 I on |CMD-LFB|< Loop 2 Block 17

Name		I on CMD-LFB < Loop 2 Block 17	
Slot	Index	0x06	0x33
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.934 I on |CMD-LFB|< Loop 2 Block 18

Name		I on CMD-LFB < Loop 2 Block 18	
Slot	Index	0x06	0x34
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.935 I on |CMD-LFB|< Loop 2 Block 19

Name		I on CMD-LFB < Loop 2 Block 19	
Slot	Index	0x06	0x35
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.936 I on |CMD-LFB|< Loop 2 Block 20

Name		I on CMD-LFB < Loop 2 Block 20	
Slot	Index	0x06	0x36
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.937 I on |CMD-LFB|< Loop 2 Block 21

Name		I on CMD-LFB < Loop 2 Block 21	
Slot	Index	0x06	0x37
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.938 I on |CMD-LFB|< Loop 2 Block 22

Name		I on CMD-LFB < Loop 2 Block 22	
Slot	Index	0x06	0x38
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.939 I on |CMD-LFB|< Loop 2 Block 23

Name		I on CMD-LFB < Loop 2 Block 23	
Slot	Index	0x06	0x39
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.940 I on |CMD-LFB|< Loop 2 Block 24

Name		I on CMD-LFB < Loop 2 Block 24	
Slot	Index	0x06	0x3A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.941 I on |CMD-LFB|< Loop 2 Block 25

Name		I on CMD-LFB < Loop 2 Block 25	
Slot	Index	0x06	0x3B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.942 I on |CMD-LFB|< Loop 2 Block 26

Name		I on CMD-LFB < Loop 2 Block 26	
Slot	Index	0x06	0x3C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.943 I on |CMD-LFB|< Loop 2 Block 27

Name		I on CMD-LFB < Loop 2 Block 27	
Slot	Index	0x06	0x3D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.944 I on |CMD-LFB|< Loop 2 Block 28

Name		I on CMD-LFB < Loop 2 Block 28	
Slot	Index	0x06	0x3E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.945 I on |CMD-LFB|< Loop 2 Block 29

Name		I on CMD-LFB < Loop 2 Block 29	
Slot	Index	0x06	0x3F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.946 I on |CMD-LFB|< Loop 2 Block 30

Name		I on CMD-LFB < Loop 2 Block 30	
Slot	Index	0x06	0x40
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.947 I on |CMD-LFB|< Loop 2 Block 31

Name		I on CMD-LFB < Loop 2 Block 31	
Slot	Index	0x06	0x41
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.948 I on |CMD-LFB|< Loop 2 Block 32

Name		I on CMD-LFB < Loop 2 Block 32	
Slot	Index	0x06	0x42
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.949 I on |CMD-LFB|< Loop 3 Block 1

Name		I on CMD-LFB < Loop 3 Block 1	
Slot	Index	0x06	0x45
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.950 I on |CMD-LFB|< Loop 3 Block 2

Name		I on CMD-LFB < Loop 3 Block 2	
Slot	Index	0x06	0x46
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.951 I on |CMD-LFB|< Loop 3 Block 3

Name		I on CMD-LFB < Loop 3 Block 3	
Slot	Index	0x06	0x47
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.952 I on |CMD-LFB|< Loop 3 Block 4

Name		I on CMD-LFB < Loop 3 Block 4	
Slot	Index	0x06	0x48
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.953 I on |CMD-LFB|< Loop 3 Block 5

Name		I on CMD-LFB < Loop 3 Block 5	
Slot	Index	0x06	0x49
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.954 I on |CMD-LFB|< Loop 3 Block 6

Name		I on CMD-LFB < Loop 3 Block 6	
Slot	Index	0x06	0x4A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.955 I on |CMD-LFB|< Loop 3 Block 7

Name		I on CMD-LFB < Loop 3 Block 7	
Slot	Index	0x06	0x4B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.956 I on |CMD-LFB|< Loop 3 Block 8

Name		I on CMD-LFB < Loop 3 Block 8	
Slot	Index	0x06	0x4C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.957 I on |CMD-LFB|< Loop 3 Block 9

Name		I on CMD-LFB < Loop 3 Block 9	
Slot	Index	0x06	0x4D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.958 I on |CMD-LFB|< Loop 3 Block 10

Name		I on CMD-LFB < Loop 3 Block 10	
Slot	Index	0x06	0x4E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.959 I on |CMD-LFB|< Loop 3 Block 11

Name		I on CMD-LFB < Loop 3 Block 11	
Slot	Index	0x06	0x4F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.960 I on |CMD-LFB|< Loop 3 Block 12

Name		I on CMD-LFB < Loop 3 Block 12	
Slot	Index	0x06	0x50
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.961 I on |CMD-LFB|< Loop 3 Block 13

Name		I on CMD-LFB < Loop 3 Block 13	
Slot	Index	0x06	0x51
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.962 I on |CMD-LFB|< Loop 3 Block 14

Name		I on CMD-LFB < Loop 3 Block 14	
Slot	Index	0x06	0x52
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.963 I on |CMD-LFB|< Loop 3 Block 15

Name		I on CMD-LFB < Loop 3 Block 15	
Slot	Index	0x06	0x53
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.964 I on |CMD-LFB|< Loop 3 Block 16

Name		I on CMD-LFB < Loop 3 Block 16	
Slot	Index	0x06	0x54
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.965 I on |CMD-LFB|< Loop 3 Block 17

Name		I on CMD-LFB < Loop 3 Block 17	
Slot	Index	0x06	0x55
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.966 I on |CMD-LFB|< Loop 3 Block 18

Name		I on CMD-LFB < Loop 3 Block 18	
Slot	Index	0x06	0x56
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.967 I on |CMD-LFB|< Loop 3 Block 19

Name		I on CMD-LFB < Loop 3 Block 19	
Slot	Index	0x06	0x57
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.968 I on |CMD-LFB|< Loop 3 Block 20

Name		I on CMD-LFB < Loop 3 Block 20	
Slot	Index	0x06	0x58
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.969 I on |CMD-LFB|< Loop 3 Block 21

Name		I on CMD-LFB < Loop 3 Block 21	
Slot	Index	0x06	0x59
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.970 I on |CMD-LFB|< Loop 3 Block 22

Name		I on CMD-LFB < Loop 3 Block 22	
Slot	Index	0x06	0x5A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.971 I on |CMD-LFB|< Loop 3 Block 23

Name		I on CMD-LFB < Loop 3 Block 23	
Slot	Index	0x06	0x5B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.972 I on |CMD-LFB|< Loop 3 Block 24

Name		I on CMD-LFB < Loop 3 Block 24	
Slot	Index	0x06	0x5C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.973 I on |CMD-LFB|< Loop 3 Block 25

Name		I on CMD-LFB < Loop 3 Block 25	
Slot	Index	0x06	0x5D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.974 I on |CMD-LFB|< Loop 3 Block 26

Name		I on CMD-LFB < Loop 3 Block 26	
Slot	Index	0x06	0x5E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.975 I on |CMD-LFB|< Loop 3 Block 27

Name		I on CMD-LFB < Loop 3 Block 27	
Slot	Index	0x06	0x5F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.976 I on |CMD-LFB|< Loop 3 Block 28

Name		I on CMD-LFB < Loop 3 Block 28	
Slot	Index	0x06	0x60
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.977 I on |CMD-LFB|< Loop 3 Block 29

Name		I on CMD-LFB < Loop 3 Block 29	
Slot	Index	0x06	0x61
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.978 I on |CMD-LFB|< Loop 3 Block 30

Name		I on CMD-LFB < Loop 3 Block 30	
Slot	Index	0x06	0x62
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.979 I on |CMD-LFB|< Loop 3 Block 31

Name		I on CMD-LFB < Loop 3 Block 31	
Slot	Index	0x06	0x63
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.980 I on |CMD-LFB|< Loop 3 Block 32

Name		I on CMD-LFB < Loop 3 Block 32	
Slot	Index	0x06	0x64
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.981 I on |CMD-LFB|> Loop 1 Block 1

Name		I on CMD-LFB > Loop 1 Block 1	
Slot	Index	0x06	0x67
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.982 I on |CMD-LFB|> Loop 1 Block 2

Name		I on CMD-LFB > Loop 1 Block 2	
Slot	Index	0x06	0x68
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.983 I on |CMD-LFB|> Loop 1 Block 3

Name		I on CMD-LFB > Loop 1 Block 3	
Slot	Index	0x06	0x69
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.984 I on |CMD-LFB|> Loop 1 Block 4

Name		I on CMD-LFB > Loop 1 Block 4	
Slot	Index	0x06	0x6A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.985 I on |CMD-LFB|> Loop 1 Block 5

Name		I on CMD-LFB > Loop 1 Block 5	
Slot	Index	0x06	0x6B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.986 I on |CMD-LFB|> Loop 1 Block 6

Name		I on CMD-LFB > Loop 1 Block 6	
Slot	Index	0x06	0x6C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.987 I on |CMD-LFB|> Loop 1 Block 7

Name		I on CMD-LFB > Loop 1 Block 7	
Slot	Index	0x06	0x6D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.988 I on |CMD-LFB|> Loop 1 Block 8

Name		I on CMD-LFB > Loop 1 Block 8	
Slot	Index	0x06	0x6E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.989 I on |CMD-LFB|> Loop 1 Block 9

Name		I on CMD-LFB > Loop 1 Block 9	
Slot	Index	0x06	0x6F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.990 I on |CMD-LFB|> Loop 1 Block 10

Name		I on CMD-LFB > Loop 1 Block 10	
Slot	Index	0x06	0x70
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.991 I on |CMD-LFB|> Loop 1 Block 11

Name		I on CMD-LFB > Loop 1 Block 11	
Slot	Index	0x06	0x71
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.992 I on |CMD-LFB|> Loop 1 Block 12

Name		I on CMD-LFB > Loop 1 Block 12	
Slot	Index	0x06	0x72
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.993 I on |CMD-LFB|> Loop 1 Block 13

Name		I on CMD-LFB > Loop 1 Block 13	
Slot	Index	0x06	0x73
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.994 I on |CMD-LFB|> Loop 1 Block 14

Name		I on CMD-LFB > Loop 1 Block 14	
Slot	Index	0x06	0x74
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.995 I on |CMD-LFB|> Loop 1 Block 15

Name		I on CMD-LFB > Loop 1 Block 15	
Slot	Index	0x06	0x75
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.996 I on |CMD-LFB|> Loop 1 Block 16

Name		I on CMD-LFB > Loop 1 Block 16	
Slot	Index	0x06	0x76
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.997 I on |CMD-LFB|> Loop 1 Block 17

Name		I on CMD-LFB > Loop 1 Block 17	
Slot	Index	0x06	0x77
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.998 I on |CMD-LFB|> Loop 1 Block 18

Name		I on CMD-LFB > Loop 1 Block 18	
Slot	Index	0x06	0x78
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.999 I on |CMD-LFB|> Loop 1 Block 19

Name		I on CMD-LFB > Loop 1 Block 19	
Slot	Index	0x06	0x79
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1000 I on |CMD-LFB|> Loop 1 Block 20

Name		I on CMD-LFB > Loop 1 Block 20	
Slot	Index	0x06	0x7A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1001 I on |CMD-LFB|> Loop 1 Block 21

Name		I on CMD-LFB > Loop 1 Block 21	
Slot	Index	0x06	0x7B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1002 I on |CMD-LFB|> Loop 1 Block 22

Name		I on CMD-LFB > Loop 1 Block 22	
Slot	Index	0x06	0x7C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1003 I on |CMD-LFB|> Loop 1 Block 23

Name		I on CMD-LFB > Loop 1 Block 23	
Slot	Index	0x06	0x7D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1004 I on |CMD-LFB|> Loop 1 Block 24

Name		I on CMD-LFB > Loop 1 Block 24	
Slot	Index	0x06	0x7E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1005 I on |CMD-LFB|> Loop 1 Block 25

Name		I on CMD-LFB > Loop 1 Block 25	
Slot	Index	0x06	0x7F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1006 I on |CMD-LFB|> Loop 1 Block 26

Name		I on CMD-LFB > Loop 1 Block 26	
Slot	Index	0x06	0x80
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1007 I on |CMD-LFB|> Loop 1 Block 27

Name		I on CMD-LFB > Loop 1 Block 27	
Slot	Index	0x06	0x81
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1008 I on |CMD-LFB|> Loop 1 Block 28

Name		I on CMD-LFB > Loop 1 Block 28	
Slot	Index	0x06	0x82
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1009 I on |CMD-LFB|> Loop 1 Block 29

Name		I on CMD-LFB > Loop 1 Block 29	
Slot	Index	0x06	0x83
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1010 I on |CMD-LFB|> Loop 1 Block 30

Name		I on CMD-LFB > Loop 1 Block 30	
Slot	Index	0x06	0x84
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1011 I on |CMD-LFB|> Loop 1 Block 31

Name		I on CMD-LFB > Loop 1 Block 31	
Slot	Index	0x06	0x85
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1012 I on |CMD-LFB|> Loop 1 Block 32

Name		I on CMD-LFB > Loop 1 Block 32	
Slot	Index	0x06	0x86
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1013 I on |CMD-LFB|> Loop 2 Block 1

Name		I on CMD-LFB > Loop 2 Block 1	
Slot	Index	0x06	0x89
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1014 I on |CMD-LFB|> Loop 2 Block 2

Name		I on CMD-LFB > Loop 2 Block 2	
Slot	Index	0x06	0x8A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1015 I on |CMD-LFB|> Loop 2 Block 3

Name		I on CMD-LFB > Loop 2 Block 3	
Slot	Index	0x06	0x8B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1016 I on |CMD-LFB|> Loop 2 Block 4

Name		I on CMD-LFB > Loop 2 Block 4	
Slot	Index	0x06	0x8C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1017 I on |CMD-LFB|> Loop 2 Block 5

Name		I on CMD-LFB > Loop 2 Block 5	
Slot	Index	0x06	0x8D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1018 I on |CMD-LFB|> Loop 2 Block 6

Name		I on CMD-LFB > Loop 2 Block 6	
Slot	Index	0x06	0x8E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1019 I on |CMD-LFB|> Loop 2 Block 7

Name		I on CMD-LFB > Loop 2 Block 7	
Slot	Index	0x06	0x8F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1020 I on |CMD-LFB|> Loop 2 Block 8

Name		I on CMD-LFB > Loop 2 Block 8	
Slot	Index	0x06	0x90
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1021 I on |CMD-LFB|> Loop 2 Block 9

Name		I on CMD-LFB > Loop 2 Block 9	
Slot	Index	0x06	0x91
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1022 I on |CMD-LFB|> Loop 2 Block 10

Name		I on CMD-LFB > Loop 2 Block 10	
Slot	Index	0x06	0x92
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1023 I on |CMD-LFB|> Loop 2 Block 11

Name		I on CMD-LFB > Loop 2 Block 11	
Slot	Index	0x06	0x93
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1024 I on |CMD-LFB|> Loop 2 Block 12

Name		I on CMD-LFB > Loop 2 Block 12	
Slot	Index	0x06	0x94
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1025 I on |CMD-LFB|> Loop 2 Block 13

Name		I on CMD-LFB > Loop 2 Block 13	
Slot	Index	0x06	0x95
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1026 I on |CMD-LFB|> Loop 2 Block 14

Name		I on CMD-LFB > Loop 2 Block 14	
Slot	Index	0x06	0x96
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1027 I on |CMD-LFB|> Loop 2 Block 15

Name		I on CMD-LFB > Loop 2 Block 15	
Slot	Index	0x06	0x97
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1028 I on |CMD-LFB|> Loop 2 Block 16

Name		I on CMD-LFB > Loop 2 Block 16	
Slot	Index	0x06	0x98
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1029 I on |CMD-LFB|> Loop 2 Block 17

Name		I on CMD-LFB > Loop 2 Block 17	
Slot	Index	0x06	0x99
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1030 I on |CMD-LFB|> Loop 2 Block 18

Name		I on CMD-LFB > Loop 2 Block 18	
Slot	Index	0x06	0x9A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1031 I on |CMD-LFB|> Loop 2 Block 19

Name		I on CMD-LFB > Loop 2 Block 19	
Slot	Index	0x06	0x9B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1032 I on |CMD-LFB|> Loop 2 Block 20

Name		I on CMD-LFB > Loop 2 Block 20	
Slot	Index	0x06	0x9C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1033 I on |CMD-LFB|> Loop 2 Block 21

Name		I on CMD-LFB > Loop 2 Block 21	
Slot	Index	0x06	0x9D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1034 I on |CMD-LFB|> Loop 2 Block 22

Name		I on CMD-LFB > Loop 2 Block 22	
Slot	Index	0x06	0x9E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1035 I on |CMD-LFB|> Loop 2 Block 23

Name		I on CMD-LFB > Loop 2 Block 23	
Slot	Index	0x06	0x9F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1036 I on |CMD-LFB|> Loop 2 Block 24

Name		I on CMD-LFB > Loop 2 Block 24	
Slot	Index	0x06	0xA0
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1037 I on |CMD-LFB|> Loop 2 Block 25

Name		I on CMD-LFB > Loop 2 Block 25	
Slot	Index	0x06	0xA1
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1038 I on |CMD-LFB|> Loop 2 Block 26

Name		I on CMD-LFB > Loop 2 Block 26	
Slot	Index	0x06	0xA2
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1039 I on |CMD-LFB|> Loop 2 Block 27

Name		I on CMD-LFB > Loop 2 Block 27	
Slot	Index	0x06	0xA3
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1040 I on |CMD-LFB|> Loop 2 Block 28

Name		I on CMD-LFB > Loop 2 Block 28	
Slot	Index	0x06	0xA4
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1041 I on |CMD-LFB|> Loop 2 Block 29

Name		I on CMD-LFB > Loop 2 Block 29	
Slot	Index	0x06	0xA5
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1042 I on |CMD-LFB|> Loop 2 Block 30

Name		I on CMD-LFB > Loop 2 Block 30	
Slot	Index	0x06	0xA6
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1043 I on |CMD-LFB|> Loop 2 Block 31

Name		I on CMD-LFB > Loop 2 Block 31	
Slot	Index	0x06	0xA7
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1044 I on |CMD-LFB|> Loop 2 Block 32

Name		I on CMD-LFB > Loop 2 Block 32	
Slot	Index	0x06	0xA8
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1045 I on |CMD-LFB|> Loop 3 Block 1

Name		I on CMD-LFB > Loop 3 Block 1	
Slot	Index	0x06	0xAB
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1046 I on |CMD-LFB|> Loop 3 Block 2

Name		I on CMD-LFB > Loop 3 Block 2	
Slot	Index	0x06	0xAC
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1047 I on |CMD-LFB|> Loop 3 Block 3

Name		I on CMD-LFB > Loop 3 Block 3	
Slot	Index	0x06	0xAD
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1048 I on |CMD-LFB|> Loop 3 Block 4

Name		I on CMD-LFB > Loop 3 Block 4	
Slot	Index	0x06	0xAE
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1049 I on |CMD-LFB|> Loop 3 Block 5

Name		I on CMD-LFB > Loop 3 Block 5	
Slot	Index	0x06	0xAF
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1050 I on |CMD-LFB|> Loop 3 Block 6

Name		I on CMD-LFB > Loop 3 Block 6	
Slot	Index	0x06	0xB0
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1051 I on |CMD-LFB|> Loop 3 Block 7

Name		I on CMD-LFB > Loop 3 Block 7	
Slot	Index	0x06	0xB1
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1052 I on |CMD-LFB|> Loop 3 Block 8

Name		I on CMD-LFB > Loop 3 Block 8	
Slot	Index	0x06	0xB2
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1053 I on |CMD-LFB|> Loop 3 Block 9

Name		I on CMD-LFB > Loop 3 Block 9	
Slot	Index	0x06	0xB3
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1054 I on |CMD-LFB|> Loop 3 Block 10

Name		I on CMD-LFB > Loop 3 Block 10	
Slot	Index	0x06	0xB4
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1055 I on |CMD-LFB|> Loop 3 Block 11

Name		I on CMD-LFB > Loop 3 Block 11	
Slot	Index	0x06	0xB5
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1056 I on |CMD-LFB|> Loop 3 Block 12

Name		I on CMD-LFB > Loop 3 Block 12	
Slot	Index	0x06	0xB6
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1057 I on |CMD-LFB|> Loop 3 Block 13

Name		I on CMD-LFB > Loop 3 Block 13	
Slot	Index	0x06	0xB7
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1058 I on |CMD-LFB|> Loop 3 Block 14

Name		I on CMD-LFB > Loop 3 Block 14	
Slot	Index	0x06	0xB8
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1059 I on |CMD-LFB|> Loop 3 Block 15

Name		I on CMD-LFB > Loop 3 Block 15	
Slot	Index	0x06	0xB9
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1060 I on |CMD-LFB|> Loop 3 Block 16

Name		I on CMD-LFB > Loop 3 Block 16	
Slot	Index	0x06	0xBA
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1061 I on |CMD-LFB|> Loop 3 Block 17

Name		I on CMD-LFB > Loop 3 Block 17	
Slot	Index	0x06	0xBB
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1062 I on |CMD-LFB|> Loop 3 Block 18

Name		I on CMD-LFB > Loop 3 Block 18	
Slot	Index	0x06	0xBC
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1063 I on |CMD-LFB|> Loop 3 Block 19

Name		I on CMD-LFB > Loop 3 Block 19	
Slot	Index	0x06	0xBD
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1064 I on |CMD-LFB|> Loop 3 Block 20

Name		I on CMD-LFB > Loop 3 Block 20	
Slot	Index	0x06	0xBE
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1065 I on |CMD-LFB|> Loop 3 Block 21

Name		I on CMD-LFB > Loop 3 Block 21	
Slot	Index	0x06	0xBF
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1066 I on |CMD-LFB|> Loop 3 Block 22

Name		I on CMD-LFB > Loop 3 Block 22	
Slot	Index	0x06	0xC0
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1067 I on |CMD-LFB|> Loop 3 Block 23

Name		I on CMD-LFB > Loop 3 Block 23	
Slot	Index	0x06	0xC1
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1068 I on |CMD-LFB|> Loop 3 Block 24

Name		I on CMD-LFB > Loop 3 Block 24	
Slot	Index	0x06	0xC2
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1069 I on |CMD-LFB|> Loop 3 Block 25

Name		I on CMD-LFB > Loop 3 Block 25	
Slot	Index	0x06	0xC3
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1070 I on |CMD-LFB|> Loop 3 Block 26

Name		I on CMD-LFB > Loop 3 Block 26	
Slot	Index	0x06	0xC4
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1071 I on |CMD-LFB|> Loop 3 Block 27

Name		I on CMD-LFB > Loop 3 Block 27	
Slot	Index	0x06	0xC5
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1072 I on |CMD-LFB|> Loop 3 Block 28

Name		I on CMD-LFB > Loop 3 Block 28	
Slot	Index	0x06	0xC6
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1073 I on |CMD-LFB|> Loop 3 Block 29

Name		I on CMD-LFB > Loop 3 Block 29	
Slot	Index	0x06	0xC7
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1074 I on |CMD-LFB|> Loop 3 Block 30

Name		I on CMD-LFB > Loop 3 Block 30	
Slot	Index	0x06	0xC8
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1075 I on |CMD-LFB|> Loop 3 Block 31

Name		I on CMD-LFB > Loop 3 Block 31	
Slot	Index	0x06	0xC9
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1076 I on |CMD-LFB|> Loop 3 Block 32

Name		I on CMD-LFB > Loop 3 Block 32	
Slot	Index	0x06	0xCA
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1077 Internal Flag

Name		Internal Flag	
Slot	Index	0x0D	0x71
Bytes	Units	2	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	65535
Scale	Offset	1	0
Description		Internal Flag 1 = 0x0001 Internal Flag 2 = 0x0002 Internal Flag 3 = 0x0004 Internal Flag 4 = 0x0008 Internal Flag 5 = 0x0010 Internal Flag 6 = 0x0020 Internal Flag 7 = 0x0040 Internal Flag 8 = 0x0080 Internal Flag 9 = 0x0100 Internal Flag 10 = 0x0200 Internal Flag 11 = 0x0400 Internal Flag 12 = 0x0800 Internal Flag 13 = 0x1000 Internal Flag 14 = 0x2000 Internal Flag 15 = 0x4000 Internal Flag 16 = 0x8000	

5.1078 LC1

Name		LC1	
Slot	Index	0x11	0x04
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1079 LC1-LFB1

Name		LC1-LFB1	
Slot	Index	0x11	0x09
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1080 LC2

Name		LC2	
Slot	Index	0x11	0x0E
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1081 LC2-LFB2

Name		LC2-LFB2	
Slot	Index	0x11	0x13
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1082 LC3

Name		LC3	
Slot	Index	0x11	0x18
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1083 LC3-LFB3

Name		LC3-LFB3	
Slot	Index	0x11	0x1D
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1084 LFB1

Name		LFB1	
Slot	Index	0x11	0x08
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1085 LFB2

Name		LFB2	
Slot	Index	0x11	0x12
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1086 LFB3

Name		LFB3	
Slot	Index	0x11	0x1C
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1087 Limit - Valve 1

Name		Limit - Valve 1	
Slot	Index	0x10	0x2D
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	100,0
Scale	Offset	-327,7	0,0

5 Bus parameters

5.1088 Limit - Valve 2

Name		Limit - Valve 2	
Slot	Index	0x10	0x2E
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	100,0
Scale	Offset	-327,7	0,0

5.1089 Limit - Valve 3

Name		Limit - Valve 3	
Slot	Index	0x10	0x2F
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	100,0
Scale	Offset	-327,7	0,0

5.1090 Limit + Valve 1

Name		Limit + Valve 1	
Slot	Index	0x10	0x2A
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	100,0
Scale	Offset	327,7	0,0

5.1091 Limit + Valve 2

Name		Limit + Valve 2	
Slot	Index	0x10	0x2B
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	100,0
Scale	Offset	327,7	0,0

5.1092 Limit + Valve 3

Name		Limit + Valve 3	
Slot	Index	0x10	0x2C
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	100,0
Scale	Offset	327,7	0,0

5.1093 Limit I-Control Loop 1 Block 1

Name		Limit I-Control Loop 1 Block 1	
Slot	Index	0x09	0x67
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1094 Limit I-Control Loop 1 Block 2

Name		Limit I-Control Loop 1 Block 2	
Slot	Index	0x09	0x68
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1095 Limit I-Control Loop 1 Block 3

Name		Limit I-Control Loop 1 Block 3	
Slot	Index	0x09	0x69
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1096 Limit I-Control Loop 1 Block 4

Name		Limit I-Control Loop 1 Block 4	
Slot	Index	0x09	0x6A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1097 Limit I-Control Loop 1 Block 5

Name		Limit I-Control Loop 1 Block 5	
Slot	Index	0x09	0x6B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1098 Limit I-Control Loop 1 Block 6

Name		Limit I-Control Loop 1 Block 6	
Slot	Index	0x09	0x6C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1099 Limit I-Control Loop 1 Block 7

Name		Limit I-Control Loop 1 Block 7	
Slot	Index	0x09	0x6D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1100 Limit I-Control Loop 1 Block 8

Name		Limit I-Control Loop 1 Block 8	
Slot	Index	0x09	0x6E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1101 Limit I-Control Loop 1 Block 9

Name		Limit I-Control Loop 1 Block 9	
Slot	Index	0x09	0x6F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1102 Limit I-Control Loop 1 Block 10

Name		Limit I-Control Loop 1 Block 10	
Slot	Index	0x09	0x70
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1103 Limit I-Control Loop 1 Block 11

Name		Limit I-Control Loop 1 Block 11	
Slot	Index	0x09	0x71
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1104 Limit I-Control Loop 1 Block 12

Name		Limit I-Control Loop 1 Block 12	
Slot	Index	0x09	0x72
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1105 Limit I-Control Loop 1 Block 13

Name		Limit I-Control Loop 1 Block 13	
Slot	Index	0x09	0x73
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1106 Limit I-Control Loop 1 Block 14

Name		Limit I-Control Loop 1 Block 14	
Slot	Index	0x09	0x74
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1107 Limit I-Control Loop 1 Block 15

Name		Limit I-Control Loop 1 Block 15	
Slot	Index	0x09	0x75
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1108 Limit I-Control Loop 1 Block 16

Name		Limit I-Control Loop 1 Block 16	
Slot	Index	0x09	0x76
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1109 Limit I-Control Loop 1 Block 17

Name		Limit I-Control Loop 1 Block 17	
Slot	Index	0x09	0x77
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1110 Limit I-Control Loop 1 Block 18

Name		Limit I-Control Loop 1 Block 18	
Slot	Index	0x09	0x78
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1111 Limit I-Control Loop 1 Block 19

Name		Limit I-Control Loop 1 Block 19	
Slot	Index	0x09	0x79
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1112 Limit I-Control Loop 1 Block 20

Name		Limit I-Control Loop 1 Block 20	
Slot	Index	0x09	0x7A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1113 Limit I-Control Loop 1 Block 21

Name		Limit I-Control Loop 1 Block 21	
Slot	Index	0x09	0x7B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1114 Limit I-Control Loop 1 Block 22

Name		Limit I-Control Loop 1 Block 22	
Slot	Index	0x09	0x7C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1115 Limit I-Control Loop 1 Block 23

Name		Limit I-Control Loop 1 Block 23	
Slot	Index	0x09	0x7D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1116 Limit I-Control Loop 1 Block 24

Name		Limit I-Control Loop 1 Block 24	
Slot	Index	0x09	0x7E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1117 Limit I-Control Loop 1 Block 25

Name		Limit I-Control Loop 1 Block 25	
Slot	Index	0x09	0x7F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1118 Limit I-Control Loop 1 Block 26

Name		Limit I-Control Loop 1 Block 26	
Slot	Index	0x09	0x80
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1119 Limit I-Control Loop 1 Block 27

Name		Limit I-Control Loop 1 Block 27	
Slot	Index	0x09	0x81
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1120 Limit I-Control Loop 1 Block 28

Name		Limit I-Control Loop 1 Block 28	
Slot	Index	0x09	0x82
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1121 Limit I-Control Loop 1 Block 29

Name		Limit I-Control Loop 1 Block 29	
Slot	Index	0x09	0x83
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1122 Limit I-Control Loop 1 Block 30

Name		Limit I-Control Loop 1 Block 30	
Slot	Index	0x09	0x84
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1123 Limit I-Control Loop 1 Block 31

Name		Limit I-Control Loop 1 Block 31	
Slot	Index	0x09	0x85
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1124 Limit I-Control Loop 1 Block 32

Name		Limit I-Control Loop 1 Block 32	
Slot	Index	0x09	0x86
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1125 Limit I-Control Loop 2 Block 1

Name		Limit I-Control Loop 2 Block 1	
Slot	Index	0x09	0x89
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1126 Limit I-Control Loop 2 Block 2

Name		Limit I-Control Loop 2 Block 2	
Slot	Index	0x09	0x8A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1127 Limit I-Control Loop 2 Block 3

Name		Limit I-Control Loop 2 Block 3	
Slot	Index	0x09	0x8B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1128 Limit I-Control Loop 2 Block 4

Name		Limit I-Control Loop 2 Block 4	
Slot	Index	0x09	0x8C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1129 Limit I-Control Loop 2 Block 5

Name		Limit I-Control Loop 2 Block 5	
Slot	Index	0x09	0x8D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1130 Limit I-Control Loop 2 Block 6

Name		Limit I-Control Loop 2 Block 6	
Slot	Index	0x09	0x8E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1131 Limit I-Control Loop 2 Block 7

Name		Limit I-Control Loop 2 Block 7	
Slot	Index	0x09	0x8F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1132 Limit I-Control Loop 2 Block 8

Name		Limit I-Control Loop 2 Block 8	
Slot	Index	0x09	0x90
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1133 Limit I-Control Loop 2 Block 9

Name		Limit I-Control Loop 2 Block 9	
Slot	Index	0x09	0x91
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1134 Limit I-Control Loop 2 Block 10

Name		Limit I-Control Loop 2 Block 10	
Slot	Index	0x09	0x92
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1135 Limit I-Control Loop 2 Block 11

Name		Limit I-Control Loop 2 Block 11	
Slot	Index	0x09	0x93
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1136 Limit I-Control Loop 2 Block 12

Name		Limit I-Control Loop 2 Block 12	
Slot	Index	0x09	0x94
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1137 Limit I-Control Loop 2 Block 13

Name		Limit I-Control Loop 2 Block 13	
Slot	Index	0x09	0x95
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1138 Limit I-Control Loop 2 Block 14

Name		Limit I-Control Loop 2 Block 14	
Slot	Index	0x09	0x96
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1139 Limit I-Control Loop 2 Block 15

Name		Limit I-Control Loop 2 Block 15	
Slot	Index	0x09	0x97
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1140 Limit I-Control Loop 2 Block 16

Name		Limit I-Control Loop 2 Block 16	
Slot	Index	0x09	0x98
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1141 Limit I-Control Loop 2 Block 17

Name		Limit I-Control Loop 2 Block 17	
Slot	Index	0x09	0x99
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1142 Limit I-Control Loop 2 Block 18

Name		Limit I-Control Loop 2 Block 18	
Slot	Index	0x09	0x9A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1143 Limit I-Control Loop 2 Block 19

Name		Limit I-Control Loop 2 Block 19	
Slot	Index	0x09	0x9B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1144 Limit I-Control Loop 2 Block 20

Name		Limit I-Control Loop 2 Block 20	
Slot	Index	0x09	0x9C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1145 Limit I-Control Loop 2 Block 21

Name		Limit I-Control Loop 2 Block 21	
Slot	Index	0x09	0x9D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1146 Limit I-Control Loop 2 Block 22

Name		Limit I-Control Loop 2 Block 22	
Slot	Index	0x09	0x9E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1147 Limit I-Control Loop 2 Block 23

Name		Limit I-Control Loop 2 Block 23	
Slot	Index	0x09	0x9F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1148 Limit I-Control Loop 2 Block 24

Name		Limit I-Control Loop 2 Block 24	
Slot	Index	0x09	0xA0
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1149 Limit I-Control Loop 2 Block 25

Name		Limit I-Control Loop 2 Block 25	
Slot	Index	0x09	0xA1
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1150 Limit I-Control Loop 2 Block 26

Name		Limit I-Control Loop 2 Block 26	
Slot	Index	0x09	0xA2
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1151 Limit I-Control Loop 2 Block 27

Name		Limit I-Control Loop 2 Block 27	
Slot	Index	0x09	0xA3
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1152 Limit I-Control Loop 2 Block 28

Name		Limit I-Control Loop 2 Block 28	
Slot	Index	0x09	0xA4
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1153 Limit I-Control Loop 2 Block 29

Name		Limit I-Control Loop 2 Block 29	
Slot	Index	0x09	0xA5
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1154 Limit I-Control Loop 2 Block 30

Name		Limit I-Control Loop 2 Block 30	
Slot	Index	0x09	0xA6
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1155 Limit I-Control Loop 2 Block 31

Name		Limit I-Control Loop 2 Block 31	
Slot	Index	0x09	0xA7
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1156 Limit I-Control Loop 2 Block 32

Name		Limit I-Control Loop 2 Block 32	
Slot	Index	0x09	0xA8
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1157 Limit I-Control Loop 3 Block 1

Name		Limit I-Control Loop 3 Block 1	
Slot	Index	0x09	0xAB
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1158 Limit I-Control Loop 3 Block 2

Name		Limit I-Control Loop 3 Block 2	
Slot	Index	0x09	0xAC
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1159 Limit I-Control Loop 3 Block 3

Name		Limit I-Control Loop 3 Block 3	
Slot	Index	0x09	0xAD
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1160 Limit I-Control Loop 3 Block 4

Name		Limit I-Control Loop 3 Block 4	
Slot	Index	0x09	0xAE
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1161 Limit I-Control Loop 3 Block 5

Name		Limit I-Control Loop 3 Block 5	
Slot	Index	0x09	0xAF
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1162 Limit I-Control Loop 3 Block 6

Name		Limit I-Control Loop 3 Block 6	
Slot	Index	0x09	0xB0
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1163 Limit I-Control Loop 3 Block 7

Name		Limit I-Control Loop 3 Block 7	
Slot	Index	0x09	0xB1
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1164 Limit I-Control Loop 3 Block 8

Name		Limit I-Control Loop 3 Block 8	
Slot	Index	0x09	0xB2
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1165 Limit I-Control Loop 3 Block 9

Name		Limit I-Control Loop 3 Block 9	
Slot	Index	0x09	0xB3
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1166 Limit I-Control Loop 3 Block 10

Name		Limit I-Control Loop 3 Block 10	
Slot	Index	0x09	0xB4
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1167 Limit I-Control Loop 3 Block 11

Name		Limit I-Control Loop 3 Block 11	
Slot	Index	0x09	0xB5
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1168 Limit I-Control Loop 3 Block 12

Name		Limit I-Control Loop 3 Block 12	
Slot	Index	0x09	0xB6
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1169 Limit I-Control Loop 3 Block 13

Name		Limit I-Control Loop 3 Block 13	
Slot	Index	0x09	0xB7
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1170 Limit I-Control Loop 3 Block 14

Name		Limit I-Control Loop 3 Block 14	
Slot	Index	0x09	0xB8
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1171 Limit I-Control Loop 3 Block 15

Name		Limit I-Control Loop 3 Block 15	
Slot	Index	0x09	0xB9
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1172 Limit I-Control Loop 3 Block 16

Name		Limit I-Control Loop 3 Block 16	
Slot	Index	0x09	0xBA
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1173 Limit I-Control Loop 3 Block 17

Name		Limit I-Control Loop 3 Block 17	
Slot	Index	0x09	0xBB
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1174 Limit I-Control Loop 3 Block 18

Name		Limit I-Control Loop 3 Block 18	
Slot	Index	0x09	0xBC
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1175 Limit I-Control Loop 3 Block 19

Name		Limit I-Control Loop 3 Block 19	
Slot	Index	0x09	0xBD
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1176 Limit I-Control Loop 3 Block 20

Name		Limit I-Control Loop 3 Block 20	
Slot	Index	0x09	0xBE
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1177 Limit I-Control Loop 3 Block 21

Name		Limit I-Control Loop 3 Block 21	
Slot	Index	0x09	0xBF
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1178 Limit I-Control Loop 3 Block 22

Name		Limit I-Control Loop 3 Block 22	
Slot	Index	0x09	0xC0
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1179 Limit I-Control Loop 3 Block 23

Name		Limit I-Control Loop 3 Block 23	
Slot	Index	0x09	0xC1
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1180 Limit I-Control Loop 3 Block 24

Name		Limit I-Control Loop 3 Block 24	
Slot	Index	0x09	0xC2
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1181 Limit I-Control Loop 3 Block 25

Name		Limit I-Control Loop 3 Block 25	
Slot	Index	0x09	0xC3
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1182 Limit I-Control Loop 3 Block 26

Name		Limit I-Control Loop 3 Block 26	
Slot	Index	0x09	0xC4
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1183 Limit I-Control Loop 3 Block 27

Name		Limit I-Control Loop 3 Block 27	
Slot	Index	0x09	0xC5
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1184 Limit I-Control Loop 3 Block 28

Name		Limit I-Control Loop 3 Block 28	
Slot	Index	0x09	0xC6
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1185 Limit I-Control Loop 3 Block 29

Name		Limit I-Control Loop 3 Block 29	
Slot	Index	0x09	0xC7
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1186 Limit I-Control Loop 3 Block 30

Name		Limit I-Control Loop 3 Block 30	
Slot	Index	0x09	0xC8
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1187 Limit I-Control Loop 3 Block 31

Name		Limit I-Control Loop 3 Block 31	
Slot	Index	0x09	0xC9
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1188 Limit I-Control Loop 3 Block 32

Name		Limit I-Control Loop 3 Block 32	
Slot	Index	0x09	0xCA
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	50000,00
Scale	Offset	327,67	0,00

5.1189 LO1

Name		LO1	
Slot	Index	0x11	0x0A
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1190 LO2

Name		LO2	
Slot	Index	0x11	0x14
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1191 LO3

Name		LO3	
Slot	Index	0x11	0x1E
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1192 LS1 Loop 1 Block 1

Name		LS1 Loop 1 Block 1	
Slot	Index	0x0B	0x01
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1193 LS1 Loop 1 Block 2

Name		LS1 Loop 1 Block 2	
Slot	Index	0x0B	0x02
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1194 LS1 Loop 1 Block 3

Name		LS1 Loop 1 Block 3	
Slot	Index	0x0B	0x03
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1195 LS1 Loop 1 Block 4

Name		LS1 Loop 1 Block 4	
Slot	Index	0x0B	0x04
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1196 LS1 Loop 1 Block 5

Name		LS1 Loop 1 Block 5	
Slot	Index	0x0B	0x05
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1197 LS1 Loop 1 Block 6

Name		LS1 Loop 1 Block 6	
Slot	Index	0x0B	0x06
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1198 LS1 Loop 1 Block 7

Name		LS1 Loop 1 Block 7	
Slot	Index	0x0B	0x07
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1199 LS1 Loop 1 Block 8

Name		LS1 Loop 1 Block 8	
Slot	Index	0x0B	0x08
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1200 LS1 Loop 1 Block 9

Name		LS1 Loop 1 Block 9	
Slot	Index	0x0B	0x09
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1201 LS1 Loop 1 Block 10

Name		LS1 Loop 1 Block 10	
Slot	Index	0x0B	0x0A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1202 LS1 Loop 1 Block 11

Name		LS1 Loop 1 Block 11	
Slot	Index	0x0B	0x0B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1203 LS1 Loop 1 Block 12

Name		LS1 Loop 1 Block 12	
Slot	Index	0x0B	0x0C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1204 LS1 Loop 1 Block 13

Name		LS1 Loop 1 Block 13	
Slot	Index	0x0B	0x0D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1205 LS1 Loop 1 Block 14

Name		LS1 Loop 1 Block 14	
Slot	Index	0x0B	0x0E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1206 LS1 Loop 1 Block 15

Name		LS1 Loop 1 Block 15	
Slot	Index	0x0B	0x0F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1207 LS1 Loop 1 Block 16

Name		LS1 Loop 1 Block 16	
Slot	Index	0x0B	0x10
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1208 LS1 Loop 1 Block 17

Name		LS1 Loop 1 Block 17	
Slot	Index	0x0B	0x11
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1209 LS1 Loop 1 Block 18

Name		LS1 Loop 1 Block 18	
Slot	Index	0x0B	0x12
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1210 LS1 Loop 1 Block 19

Name		LS1 Loop 1 Block 19	
Slot	Index	0x0B	0x13
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1211 LS1 Loop 1 Block 20

Name		LS1 Loop 1 Block 20	
Slot	Index	0x0B	0x14
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1212 LS1 Loop 1 Block 21

Name		LS1 Loop 1 Block 21	
Slot	Index	0x0B	0x15
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1213 LS1 Loop 1 Block 22

Name		LS1 Loop 1 Block 22	
Slot	Index	0x0B	0x16
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1214 LS1 Loop 1 Block 23

Name		LS1 Loop 1 Block 23	
Slot	Index	0x0B	0x17
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1215 LS1 Loop 1 Block 24

Name		LS1 Loop 1 Block 24	
Slot	Index	0x0B	0x18
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1216 LS1 Loop 1 Block 25

Name		LS1 Loop 1 Block 25	
Slot	Index	0x0B	0x19
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1217 LS1 Loop 1 Block 26

Name		LS1 Loop 1 Block 26	
Slot	Index	0x0B	0x1A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1218 LS1 Loop 1 Block 27

Name		LS1 Loop 1 Block 27	
Slot	Index	0x0B	0x1B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1219 LS1 Loop 1 Block 28

Name		LS1 Loop 1 Block 28	
Slot	Index	0x0B	0x1C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1220 LS1 Loop 1 Block 29

Name		LS1 Loop 1 Block 29	
Slot	Index	0x0B	0x1D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1221 LS1 Loop 1 Block 30

Name		LS1 Loop 1 Block 30	
Slot	Index	0x0B	0x1E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1222 LS1 Loop 1 Block 31

Name		LS1 Loop 1 Block 31	
Slot	Index	0x0B	0x1F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1223 LS1 Loop 1 Block 32

Name		LS1 Loop 1 Block 32	
Slot	Index	0x0B	0x20
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1224 LS2 Loop 2 Block 1

Name		LS2 Loop 2 Block 1	
Slot	Index	0x0B	0x23
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1225 LS2 Loop 2 Block 2

Name		LS2 Loop 2 Block 2	
Slot	Index	0x0B	0x24
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1226 LS2 Loop 2 Block 3

Name		LS2 Loop 2 Block 3	
Slot	Index	0x0B	0x25
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1227 LS2 Loop 2 Block 4

Name		LS2 Loop 2 Block 4	
Slot	Index	0x0B	0x26
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1228 LS2 Loop 2 Block 5

Name		LS2 Loop 2 Block 5	
Slot	Index	0x0B	0x27
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1229 LS2 Loop 2 Block 6

Name		LS2 Loop 2 Block 6	
Slot	Index	0x0B	0x28
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1230 LS2 Loop 2 Block 7

Name		LS2 Loop 2 Block 7	
Slot	Index	0x0B	0x29
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1231 LS2 Loop 2 Block 8

Name		LS2 Loop 2 Block 8	
Slot	Index	0x0B	0x2A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1232 LS2 Loop 2 Block 9

Name		LS2 Loop 2 Block 9	
Slot	Index	0x0B	0x2B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1233 LS2 Loop 2 Block 10

Name		LS2 Loop 2 Block 10	
Slot	Index	0x0B	0x2C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1234 LS2 Loop 2 Block 11

Name		LS2 Loop 2 Block 11	
Slot	Index	0x0B	0x2D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1235 LS2 Loop 2 Block 12

Name		LS2 Loop 2 Block 12	
Slot	Index	0x0B	0x2E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1236 LS2 Loop 2 Block 13

Name		LS2 Loop 2 Block 13	
Slot	Index	0x0B	0x2F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1237 LS2 Loop 2 Block 14

Name		LS2 Loop 2 Block 14	
Slot	Index	0x0B	0x30
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1238 LS2 Loop 2 Block 15

Name		LS2 Loop 2 Block 15	
Slot	Index	0x0B	0x31
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1239 LS2 Loop 2 Block 16

Name		LS2 Loop 2 Block 16	
Slot	Index	0x0B	0x32
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1240 LS2 Loop 2 Block 17

Name		LS2 Loop 2 Block 17	
Slot	Index	0x0B	0x33
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1241 LS2 Loop 2 Block 18

Name		LS2 Loop 2 Block 18	
Slot	Index	0x0B	0x34
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1242 LS2 Loop 2 Block 19

Name		LS2 Loop 2 Block 19	
Slot	Index	0x0B	0x35
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1243 LS2 Loop 2 Block 20

Name		LS2 Loop 2 Block 20	
Slot	Index	0x0B	0x36
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1244 LS2 Loop 2 Block 21

Name		LS2 Loop 2 Block 21	
Slot	Index	0x0B	0x37
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1245 LS2 Loop 2 Block 22

Name		LS2 Loop 2 Block 22	
Slot	Index	0x0B	0x38
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1246 LS2 Loop 2 Block 23

Name		LS2 Loop 2 Block 23	
Slot	Index	0x0B	0x39
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1247 LS2 Loop 2 Block 24

Name		LS2 Loop 2 Block 24	
Slot	Index	0x0B	0x3A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1248 LS2 Loop 2 Block 25

Name		LS2 Loop 2 Block 25	
Slot	Index	0x0B	0x3B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1249 LS2 Loop 2 Block 26

Name		LS2 Loop 2 Block 26	
Slot	Index	0x0B	0x3C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1250 LS2 Loop 2 Block 27

Name		LS2 Loop 2 Block 27	
Slot	Index	0x0B	0x3D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1251 LS2 Loop 2 Block 28

Name		LS2 Loop 2 Block 28	
Slot	Index	0x0B	0x3E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1252 LS2 Loop 2 Block 29

Name		LS2 Loop 2 Block 29	
Slot	Index	0x0B	0x3F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1253 LS2 Loop 2 Block 30

Name		LS2 Loop 2 Block 30	
Slot	Index	0x0B	0x40
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1254 LS2 Loop 2 Block 31

Name		LS2 Loop 2 Block 31	
Slot	Index	0x0B	0x41
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1255 LS2 Loop 2 Block 32

Name		LS2 Loop 2 Block 32	
Slot	Index	0x0B	0x42
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1256 LS3 Loop 3 Block 1

Name		LS3 Loop 3 Block 1	
Slot	Index	0x0B	0x45
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1257 LS3 Loop 3 Block 2

Name		LS3 Loop 3 Block 2	
Slot	Index	0x0B	0x46
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1258 LS3 Loop 3 Block 3

Name		LS3 Loop 3 Block 3	
Slot	Index	0x0B	0x47
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1259 LS3 Loop 3 Block 4

Name		LS3 Loop 3 Block 4	
Slot	Index	0x0B	0x48
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1260 LS3 Loop 3 Block 5

Name		LS3 Loop 3 Block 5	
Slot	Index	0x0B	0x49
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1261 LS3 Loop 3 Block 6

Name		LS3 Loop 3 Block 6	
Slot	Index	0x0B	0x4A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1262 LS3 Loop 3 Block 7

Name		LS3 Loop 3 Block 7	
Slot	Index	0x0B	0x4B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1263 LS3 Loop 3 Block 8

Name		LS3 Loop 3 Block 8	
Slot	Index	0x0B	0x4C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1264 LS3 Loop 3 Block 9

Name		LS3 Loop 3 Block 9	
Slot	Index	0x0B	0x4D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1265 LS3 Loop 3 Block 10

Name		LS3 Loop 3 Block 10	
Slot	Index	0x0B	0x4E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1266 LS3 Loop 3 Block 11

Name		LS3 Loop 3 Block 11	
Slot	Index	0x0B	0x4F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1267 LS3 Loop 3 Block 12

Name		LS3 Loop 3 Block 12	
Slot	Index	0x0B	0x50
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1268 LS3 Loop 3 Block 13

Name		LS3 Loop 3 Block 13	
Slot	Index	0x0B	0x51
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1269 LS3 Loop 3 Block 14

Name		LS3 Loop 3 Block 14	
Slot	Index	0x0B	0x52
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1270 LS3 Loop 3 Block 15

Name		LS3 Loop 3 Block 15	
Slot	Index	0x0B	0x53
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1271 LS3 Loop 3 Block 16

Name		LS3 Loop 3 Block 16	
Slot	Index	0x0B	0x54
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1272 LS3 Loop 3 Block 17

Name		LS3 Loop 3 Block 17	
Slot	Index	0x0B	0x55
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1273 LS3 Loop 3 Block 18

Name		LS3 Loop 3 Block 18	
Slot	Index	0x0B	0x56
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1274 LS3 Loop 3 Block 19

Name		LS3 Loop 3 Block 19	
Slot	Index	0x0B	0x57
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1275 LS3 Loop 3 Block 20

Name		LS3 Loop 3 Block 20	
Slot	Index	0x0B	0x58
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1276 LS3 Loop 3 Block 21

Name		LS3 Loop 3 Block 21	
Slot	Index	0x0B	0x59
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1277 LS3 Loop 3 Block 22

Name		LS3 Loop 3 Block 22	
Slot	Index	0x0B	0x5A
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1278 LS3 Loop 3 Block 23

Name		LS3 Loop 3 Block 23	
Slot	Index	0x0B	0x5B
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1279 LS3 Loop 3 Block 24

Name		LS3 Loop 3 Block 24	
Slot	Index	0x0B	0x5C
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1280 LS3 Loop 3 Block 25

Name		LS3 Loop 3 Block 25	
Slot	Index	0x0B	0x5D
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1281 LS3 Loop 3 Block 26

Name		LS3 Loop 3 Block 26	
Slot	Index	0x0B	0x5E
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1282 LS3 Loop 3 Block 27

Name		LS3 Loop 3 Block 27	
Slot	Index	0x0B	0x5F
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1283 LS3 Loop 3 Block 28

Name		LS3 Loop 3 Block 28	
Slot	Index	0x0B	0x60
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1284 LS3 Loop 3 Block 29

Name		LS3 Loop 3 Block 29	
Slot	Index	0x0B	0x61
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1285 LS3 Loop 3 Block 30

Name		LS3 Loop 3 Block 30	
Slot	Index	0x0B	0x62
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1286 LS3 Loop 3 Block 31

Name		LS3 Loop 3 Block 31	
Slot	Index	0x0B	0x63
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1287 LS3 Loop 3 Block 32

Name		LS3 Loop 3 Block 32	
Slot	Index	0x0B	0x64
Bytes	Units	4	Unit
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1288 Offset AO1

Name		Offset AO1	
Slot	Index	0x0F	0xA8
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-100,0	100,0
Scale	Offset	327,7	0,0

5.1289 Offset AO2

Name		Offset AO2	
Slot	Index	0x0F	0xA9
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-100,0	100,0
Scale	Offset	327,7	0,0

5.1290 Offset AO3

Name		Offset AO3	
Slot	Index	0x0F	0xAA
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-100,0	100,0
Scale	Offset	327,7	0,0

5.1291 Offset Valve 1

Name		Offset Valve 1	
Slot	Index	0x11	0x27
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-100,00	100,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1292 Offset Valve 2

Name		Offset Valve 2	
Slot	Index	0x10	0x28
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-100,00	100,00
Scale	Offset	327,67	0,00

5.1293 Offset Valve 3

Name		Offset Valve 3	
Slot	Index	0x10	0x29
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-100,00	100,00
Scale	Offset	327,67	0,00

5.1294 OUT1

Name		OUT1	
Slot	Index	0x11	0x1F
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1295 OUT2

Name		OUT2	
Slot	Index	0x11	0x20
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1296 OUT3

Name		OUT3	
Slot	Index	0x11	0x21
Bytes	Units	4	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-50000,00	50000,00
Scale	Offset	327,67	0,00

5.1297 P Loop 1 Block 1

Name		P Loop 1 Block 1	
Slot	Index	0x04	0x01
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5 Bus parameters

5.1298 P Loop 1 Block 2

Name		P Loop 1 Block 2	
Slot	Index	0x04	0x02
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1299 P Loop 1 Block 3

Name		P Loop 1 Block 3	
Slot	Index	0x04	0x03
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1300 P Loop 1 Block 4

Name		P Loop 1 Block 4	
Slot	Index	0x04	0x04
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1301 P Loop 1 Block 5

Name		P Loop 1 Block 5	
Slot	Index	0x04	0x05
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1302 P Loop 1 Block 6

Name		P Loop 1 Block 6	
Slot	Index	0x04	0x06
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1303 P Loop 1 Block 7

Name		P Loop 1 Block 7	
Slot	Index	0x04	0x07
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5 Bus parameters

5.1304 P Loop 1 Block 8

Name		P Loop 1 Block 8	
Slot	Index	0x04	0x08
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1305 P Loop 1 Block 9

Name		P Loop 1 Block 9	
Slot	Index	0x04	0x09
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1306 P Loop 1 Block 10

Name		P Loop 1 Block 10	
Slot	Index	0x04	0x0A
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1307 P Loop 1 Block 11

Name		P Loop 1 Block 11	
Slot	Index	0x04	0x0B
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1308 P Loop 1 Block 12

Name		P Loop 1 Block 12	
Slot	Index	0x04	0x0C
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1309 P Loop 1 Block 13

Name		P Loop 1 Block 13	
Slot	Index	0x04	0x0D
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5 Bus parameters

5.1310 P Loop 1 Block 14

Name		P Loop 1 Block 14	
Slot	Index	0x04	0x0E
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1311 P Loop 1 Block 15

Name		P Loop 1 Block 15	
Slot	Index	0x04	0x0F
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1312 P Loop 1 Block 16

Name		P Loop 1 Block 16	
Slot	Index	0x04	0x10
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1313 P Loop 1 Block 17

Name		P Loop 1 Block 17	
Slot	Index	0x04	0x11
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1314 P Loop 1 Block 18

Name		P Loop 1 Block 18	
Slot	Index	0x04	0x12
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1315 P Loop 1 Block 19

Name		P Loop 1 Block 19	
Slot	Index	0x04	0x13
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5 Bus parameters

5.1316 P Loop 1 Block 20

Name		P Loop 1 Block 20	
Slot	Index	0x04	0x14
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1317 P Loop 1 Block 21

Name		P Loop 1 Block 21	
Slot	Index	0x04	0x15
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1318 P Loop 1 Block 22

Name		P Loop 1 Block 22	
Slot	Index	0x04	0x16
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1319 P Loop 1 Block 23

Name		P Loop 1 Block 23	
Slot	Index	0x04	0x17
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1320 P Loop 1 Block 24

Name		P Loop 1 Block 24	
Slot	Index	0x04	0x18
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1321 P Loop 1 Block 25

Name		P Loop 1 Block 25	
Slot	Index	0x04	0x19
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5 Bus parameters

5.1322 P Loop 1 Block 26

Name		P Loop 1 Block 26	
Slot	Index	0x04	0x1A
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1323 P Loop 1 Block 27

Name		P Loop 1 Block 27	
Slot	Index	0x04	0x1B
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1324 P Loop 1 Block 28

Name		P Loop 1 Block 28	
Slot	Index	0x04	0x1C
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1325 P Loop 1 Block 29

Name		P Loop 1 Block 29	
Slot	Index	0x04	0x1D
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1326 P Loop 1 Block 30

Name		P Loop 1 Block 30	
Slot	Index	0x04	0x1E
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1327 P Loop 1 Block 31

Name		P Loop 1 Block 31	
Slot	Index	0x04	0x1F
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5 Bus parameters

5.1328 P Loop 1 Block 32

Name		P Loop 1 Block 32	
Slot	Index	0x04	0x20
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1329 P Loop 2 Block 1

Name		P Loop 2 Block 1	
Slot	Index	0x04	0x23
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1330 P Loop 2 Block 2

Name		P Loop 2 Block 2	
Slot	Index	0x04	0x24
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1331 P Loop 2 Block 3

Name		P Loop 2 Block 3	
Slot	Index	0x04	0x25
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1332 P Loop 2 Block 4

Name		P Loop 2 Block 4	
Slot	Index	0x04	0x26
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1333 P Loop 2 Block 5

Name		P Loop 2 Block 5	
Slot	Index	0x04	0x27
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5 Bus parameters

5.1334 P Loop 2 Block 6

Name		P Loop 2 Block 6	
Slot	Index	0x04	0x28
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1335 P Loop 2 Block 7

Name		P Loop 2 Block 7	
Slot	Index	0x04	0x29
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1336 P Loop 2 Block 8

Name		P Loop 2 Block 8	
Slot	Index	0x04	0x2A
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1337 P Loop 2 Block 9

Name		P Loop 2 Block 9	
Slot	Index	0x04	0x2B
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1338 P Loop 2 Block 10

Name		P Loop 2 Block 10	
Slot	Index	0x04	0x2C
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1339 P Loop 2 Block 11

Name		P Loop 2 Block 11	
Slot	Index	0x04	0x2D
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5 Bus parameters

5.1340 P Loop 2 Block 12

Name		P Loop 2 Block 12	
Slot	Index	0x04	0x2E
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1341 P Loop 2 Block 13

Name		P Loop 2 Block 13	
Slot	Index	0x04	0x2F
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1342 P Loop 2 Block 14

Name		P Loop 2 Block 14	
Slot	Index	0x04	0x30
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1343 P Loop 2 Block 15

Name		P Loop 2 Block 15	
Slot	Index	0x04	0x31
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1344 P Loop 2 Block 16

Name		P Loop 2 Block 16	
Slot	Index	0x04	0x32
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1345 P Loop 2 Block 17

Name		P Loop 2 Block 17	
Slot	Index	0x04	0x33
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5 Bus parameters

5.1346 P Loop 2 Block 18

Name		P Loop 2 Block 18	
Slot	Index	0x04	0x34
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1347 P Loop 2 Block 19

Name		P Loop 2 Block 19	
Slot	Index	0x04	0x35
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1348 P Loop 2 Block 20

Name		P Loop 2 Block 20	
Slot	Index	0x04	0x36
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1349 P Loop 2 Block 21

Name		P Loop 2 Block 21	
Slot	Index	0x04	0x37
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1350 P Loop 2 Block 22

Name		P Loop 2 Block 22	
Slot	Index	0x04	0x38
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1351 P Loop 2 Block 23

Name		P Loop 2 Block 23	
Slot	Index	0x04	0x39
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5 Bus parameters

5.1352 P Loop 2 Block 24

Name		P Loop 2 Block 24	
Slot	Index	0x04	0x3A
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1353 P Loop 2 Block 25

Name		P Loop 2 Block 25	
Slot	Index	0x04	0x3B
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1354 P Loop 2 Block 26

Name		P Loop 2 Block 26	
Slot	Index	0x04	0x3C
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1355 P Loop 2 Block 27

Name		P Loop 2 Block 27	
Slot	Index	0x04	0x3D
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1356 P Loop 2 Block 28

Name		P Loop 2 Block 28	
Slot	Index	0x04	0x3E
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1357 P Loop 2 Block 29

Name		P Loop 2 Block 29	
Slot	Index	0x04	0x3F
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5 Bus parameters

5.1358 P Loop 2 Block 30

Name		P Loop 2 Block 30	
Slot	Index	0x04	0x40
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1359 P Loop 2 Block 31

Name		P Loop 2 Block 31	
Slot	Index	0x04	0x41
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1360 P Loop 2 Block 32

Name		P Loop 2 Block 32	
Slot	Index	0x04	0x42
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1361 P Loop 3 Block 1

Name		P Loop 3 Block 1	
Slot	Index	0x04	0x45
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1362 P Loop 3 Block 2

Name		P Loop 3 Block 2	
Slot	Index	0x04	0x46
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1363 P Loop 3 Block 3

Name		P Loop 3 Block 3	
Slot	Index	0x04	0x47
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5 Bus parameters

5.1364 P Loop 3 Block 4

Name		P Loop 3 Block 4	
Slot	Index	0x04	0x48
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1365 P Loop 3 Block 5

Name		P Loop 3 Block 5	
Slot	Index	0x04	0x49
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1366 P Loop 3 Block 6

Name		P Loop 3 Block 6	
Slot	Index	0x04	0x4A
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1367 P Loop 3 Block 7

Name		P Loop 3 Block 7	
Slot	Index	0x04	0x4B
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1368 P Loop 3 Block 8

Name		P Loop 3 Block 8	
Slot	Index	0x04	0x4C
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1369 P Loop 3 Block 9

Name		P Loop 3 Block 9	
Slot	Index	0x04	0x4D
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5 Bus parameters

5.1370 P Loop 3 Block 10

Name		P Loop 3 Block 10	
Slot	Index	0x04	0x4E
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1371 P Loop 3 Block 11

Name		P Loop 3 Block 11	
Slot	Index	0x04	0x4F
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1372 P Loop 3 Block 12

Name		P Loop 3 Block 12	
Slot	Index	0x04	0x50
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1373 P Loop 3 Block 13

Name		P Loop 3 Block 13	
Slot	Index	0x04	0x51
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1374 P Loop 3 Block 14

Name		P Loop 3 Block 14	
Slot	Index	0x04	0x52
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1375 P Loop 3 Block 15

Name		P Loop 3 Block 15	
Slot	Index	0x04	0x53
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5 Bus parameters

5.1376 P Loop 3 Block 16

Name		P Loop 3 Block 16	
Slot	Index	0x04	0x54
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1377 P Loop 3 Block 17

Name		P Loop 3 Block 17	
Slot	Index	0x04	0x55
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1378 P Loop 3 Block 18

Name		P Loop 3 Block 18	
Slot	Index	0x04	0x56
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1379 P Loop 3 Block 19

Name		P Loop 3 Block 19	
Slot	Index	0x04	0x57
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1380 P Loop 3 Block 20

Name		P Loop 3 Block 20	
Slot	Index	0x04	0x58
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1381 P Loop 3 Block 21

Name		P Loop 3 Block 21	
Slot	Index	0x04	0x59
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5 Bus parameters

5.1382 P Loop 3 Block 22

Name		P Loop 3 Block 22	
Slot	Index	0x04	0x5A
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1383 P Loop 3 Block 23

Name		P Loop 3 Block 23	
Slot	Index	0x04	0x5B
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1384 P Loop 3 Block 24

Name		P Loop 3 Block 24	
Slot	Index	0x04	0x5C
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1385 P Loop 3 Block 25

Name		P Loop 3 Block 25	
Slot	Index	0x04	0x5D
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1386 P Loop 3 Block 26

Name		P Loop 3 Block 26	
Slot	Index	0x04	0x5E
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1387 P Loop 3 Block 27

Name		P Loop 3 Block 27	
Slot	Index	0x04	0x5F
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5 Bus parameters

5.1388 P Loop 3 Block 28

Name		P Loop 3 Block 28	
Slot	Index	0x04	0x60
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1389 P Loop 3 Block 29

Name		P Loop 3 Block 29	
Slot	Index	0x04	0x61
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1390 P Loop 3 Block 30

Name		P Loop 3 Block 30	
Slot	Index	0x04	0x62
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1391 P Loop 3 Block 31

Name		P Loop 3 Block 31	
Slot	Index	0x04	0x63
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1392 P Loop 3 Block 32

Name		P Loop 3 Block 32	
Slot	Index	0x04	0x64
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	99,90
Scale	Offset	128,00	0,00

5.1393 Ratio FB1-1:FB1-2

Name		Ratio FB1-1:FB1-2	
Slot	Index	0x13	0x1A
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-31,900	31,900
Scale	Offset	1024,013	0,000

5 Bus parameters

5.1394 Ratio FB2-1:FB2-2

Name		Ratio FB2-1:FB2-2	
Slot	Index	0x13	0x1C
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-31,900	31,900
Scale	Offset	1024,013	0,000

5.1395 Ratio FB3-1:FB3-2

Name		Ratio FB3-1:FB3-2	
Slot	Index	0x13	0x1E
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		-31,900	31,900
Scale	Offset	1024,013	0,000

5.1396 Residual- Valve 1

Name		Residual- Valve 1	
Slot	Index	0x10	0x3C
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	100,0
Scale	Offset	327,7	0,0

5.1397 Residual- Valve 2

Name		Residual- Valve 2	
Slot	Index	0x10	0x3D
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	100,0
Scale	Offset	327,7	0,0

5.1398 Residual- Valve 3

Name		Residual- Valve 3	
Slot	Index	0x10	0x3E
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	100,0
Scale	Offset	327,7	0,0

5.1399 Residual+ Valve 1

Name		Residual+ Valve 1	
Slot	Index	0x10	0x39
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	100,0
Scale	Offset	327,7	0,0

5 Bus parameters

5.1400 Residual+ Valve 2

Name		Residual+ Valve 2	
Slot	Index	0x10	0x3A
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	100,0
Scale	Offset	327,7	0,0

5.1401 Residual+ Valve 3

Name		Residual+ Valve 3	
Slot	Index	0x10	0x3B
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,0	100,0
Scale	Offset	327,7	0,0

5.1402 set dig. FB to zero

Name		set dig. FB to zero	
Slot	Index	0x0D	0x78
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	1
Scale	Offset	1	0
Description		Highbyte = SSI 1 encoder / Incremental 0 = no action 1 = set FB to 0 Lowbyte = SSI 2 encoder / Incremental 0 = no action 1 = set FB to 0	

5.1403 Status

Name		Status	
Slot	Index	0x0D	0x68
Bytes	Units	2	
Access		Read Only	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0	4294967295
Scale	Offset	1	0
Description		Highbyte = Error Flags Bits 15 = Error Error 8 Bits 14 = Error Error 7 Bits 13 = Error Error 6 Bits 12 = Error Error 5 Bits 11 = Error Error 4 Bits 10 = Error Error 3 Bits 09 = Error Error 2 Bits 08 = Error Error 1 Lowbyte = fault number No Fault = 255 A1 Stop = 0 A12 Stop = 1 A13 Stop = 2 A14 Stop = 3 A15 Stop = 4 A16 Stop = 5 SSI2 Stop = 13 INC Encoder A = 14 INC Encoder B = 15 Timeout Stop = 16 SSI Stop = 17 Trigger Stop = 18 LC1<>LFB1 Stop = 19 LC2<>LFB2 Stop = 20 LC3<>LFB3 Stop = 21 Checksum memory = 22 No Configuration = 23 Bus Stop = 24 +/-10V, 5V Source = 25 DO1 Short = 26 DO2 Short = 27 DO3 Short = 28 DO4 Short = 29 DO5 Short = 30	

5 Bus parameters

	DO6 Short = 31 DO7 Short = 32 DO8 Short = 33 Max Counter Freq = 34 Local Bus Stop = 52

5.1404 Step - Valve 1

Name		Step - Valve 1	
Slot	Index	0x10	0x36
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100,00
Scale	Offset	327,67	0,00

5.1405 Step - Valve 2

Name		Step - Valve 2	
Slot	Index	0x10	0x37
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100,00
Scale	Offset	327,67	0,00

5.1406 Step - Valve 3

Name		Step - Valve 3	
Slot	Index	0x10	0x38
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100,00
Scale	Offset	327,67	0,00

5.1407 Step + Valve 1

Name		Step + Valve 1	
Slot	Index	0x10	0x33
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100,00
Scale	Offset	327,67	0,00

5.1408 Step + Valve 2

Name		Step + Valve 2	
Slot	Index	0x10	0x34
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100,00
Scale	Offset	327,67	0,00

5 Bus parameters

5.1409 Step + Valve 3

Name		Step + Valve 3	
Slot	Index	0x10	0x35
Bytes	Units	2	%
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100,00
Scale	Offset	327,67	0,00

5.1410 Stop CMD Loop 1 Block 1

Name		Stop CMD Loop 1 Block 1	
Slot	Index	0x01	0x67
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1411 Stop CMD Loop 1 Block 2

Name		Stop CMD Loop 1 Block 2	
Slot	Index	0x01	0x68
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1412 Stop CMD Loop 1 Block 3

Name		Stop CMD Loop 1 Block 3	
Slot	Index	0x01	0x69
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1413 Stop CMD Loop 1 Block 4

Name		Stop CMD Loop 1 Block 4	
Slot	Index	0x01	0x6A
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1414 Stop CMD Loop 1 Block 5

Name		Stop CMD Loop 1 Block 5	
Slot	Index	0x01	0x6B
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5 Bus parameters

5.1415 Stop CMD Loop 1 Block 6

Name		Stop CMD Loop 1 Block 6	
Slot	Index	0x01	0x6C
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1416 Stop CMD Loop 1 Block 7

Name		Stop CMD Loop 1 Block 7	
Slot	Index	0x01	0x6D
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1417 Stop CMD Loop 1 Block 8

Name		Stop CMD Loop 1 Block 8	
Slot	Index	0x01	0x6E
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1418 Stop CMD Loop 1 Block 9

Name		Stop CMD Loop 1 Block 9	
Slot	Index	0x01	0x6F
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1419 Stop CMD Loop 1 Block 10

Name		Stop CMD Loop 1 Block 10	
Slot	Index	0x01	0x70
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1420 Stop CMD Loop 1 Block 11

Name		Stop CMD Loop 1 Block 11	
Slot	Index	0x01	0x71
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5 Bus parameters

5.1421 Stop CMD Loop 1 Block 12

Name		Stop CMD Loop 1 Block 12	
Slot	Index	0x01	0x72
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1422 Stop CMD Loop 1 Block 13

Name		Stop CMD Loop 1 Block 13	
Slot	Index	0x01	0x73
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1423 Stop CMD Loop 1 Block 14

Name		Stop CMD Loop 1 Block 14	
Slot	Index	0x01	0x74
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1424 Stop CMD Loop 1 Block 15

Name		Stop CMD Loop 1 Block 15	
Slot	Index	0x01	0x75
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1425 Stop CMD Loop 1 Block 16

Name		Stop CMD Loop 1 Block 16	
Slot	Index	0x01	0x76
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1426 Stop CMD Loop 1 Block 17

Name		Stop CMD Loop 1 Block 17	
Slot	Index	0x01	0x77
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5 Bus parameters

5.1427 Stop CMD Loop 1 Block 18

Name		Stop CMD Loop 1 Block 18	
Slot	Index	0x01	0x78
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1428 Stop CMD Loop 1 Block 19

Name		Stop CMD Loop 1 Block 19	
Slot	Index	0x01	0x79
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1429 Stop CMD Loop 1 Block 20

Name		Stop CMD Loop 1 Block 20	
Slot	Index	0x01	0x7A
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1430 Stop CMD Loop 1 Block 21

Name		Stop CMD Loop 1 Block 21	
Slot	Index	0x01	0x7B
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1431 Stop CMD Loop 1 Block 22

Name		Stop CMD Loop 1 Block 22	
Slot	Index	0x01	0x7C
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1432 Stop CMD Loop 1 Block 23

Name		Stop CMD Loop 1 Block 23	
Slot	Index	0x01	0x7D
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5 Bus parameters

5.1433 Stop CMD Loop 1 Block 24

Name		Stop CMD Loop 1 Block 24	
Slot	Index	0x01	0x7E
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1434 Stop CMD Loop 1 Block 25

Name		Stop CMD Loop 1 Block 25	
Slot	Index	0x01	0x7F
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1435 Stop CMD Loop 1 Block 26

Name		Stop CMD Loop 1 Block 26	
Slot	Index	0x01	0x80
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1436 Stop CMD Loop 1 Block 27

Name		Stop CMD Loop 1 Block 27	
Slot	Index	0x01	0x81
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1437 Stop CMD Loop 1 Block 28

Name		Stop CMD Loop 1 Block 28	
Slot	Index	0x01	0x82
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1438 Stop CMD Loop 1 Block 29

Name		Stop CMD Loop 1 Block 29	
Slot	Index	0x01	0x83
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5 Bus parameters

5.1439 Stop CMD Loop 1 Block 30

Name		Stop CMD Loop 1 Block 30	
Slot	Index	0x01	0x84
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1440 Stop CMD Loop 1 Block 31

Name		Stop CMD Loop 1 Block 31	
Slot	Index	0x01	0x85
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1441 Stop CMD Loop 1 Block 32

Name		Stop CMD Loop 1 Block 32	
Slot	Index	0x01	0x86
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1442 Stop CMD Loop 2 Block 1

Name		Stop CMD Loop 2 Block 1	
Slot	Index	0x01	0x89
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1443 Stop CMD Loop 2 Block 2

Name		Stop CMD Loop 2 Block 2	
Slot	Index	0x01	0x8A
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1444 Stop CMD Loop 2 Block 3

Name		Stop CMD Loop 2 Block 3	
Slot	Index	0x01	0x8B
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5 Bus parameters

5.1445 Stop CMD Loop 2 Block 4

Name		Stop CMD Loop 2 Block 4	
Slot	Index	0x01	0x8C
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1446 Stop CMD Loop 2 Block 5

Name		Stop CMD Loop 2 Block 5	
Slot	Index	0x01	0x8D
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1447 Stop CMD Loop 2 Block 6

Name		Stop CMD Loop 2 Block 6	
Slot	Index	0x01	0x8E
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1448 Stop CMD Loop 2 Block 7

Name		Stop CMD Loop 2 Block 7	
Slot	Index	0x01	0x8F
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1449 Stop CMD Loop 2 Block 8

Name		Stop CMD Loop 2 Block 8	
Slot	Index	0x01	0x90
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1450 Stop CMD Loop 2 Block 9

Name		Stop CMD Loop 2 Block 9	
Slot	Index	0x01	0x91
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5 Bus parameters

5.1451 Stop CMD Loop 2 Block 10

Name		Stop CMD Loop 2 Block 10	
Slot	Index	0x01	0x92
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1452 Stop CMD Loop 2 Block 11

Name		Stop CMD Loop 2 Block 11	
Slot	Index	0x01	0x93
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1453 Stop CMD Loop 2 Block 12

Name		Stop CMD Loop 2 Block 12	
Slot	Index	0x01	0x94
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1454 Stop CMD Loop 2 Block 13

Name		Stop CMD Loop 2 Block 13	
Slot	Index	0x01	0x95
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1455 Stop CMD Loop 2 Block 14

Name		Stop CMD Loop 2 Block 14	
Slot	Index	0x01	0x96
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1456 Stop CMD Loop 2 Block 15

Name		Stop CMD Loop 2 Block 15	
Slot	Index	0x01	0x97
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5 Bus parameters

5.1457 Stop CMD Loop 2 Block 16

Name		Stop CMD Loop 2 Block 16	
Slot	Index	0x01	0x98
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1458 Stop CMD Loop 2 Block 17

Name		Stop CMD Loop 2 Block 17	
Slot	Index	0x01	0x99
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1459 Stop CMD Loop 2 Block 18

Name		Stop CMD Loop 2 Block 18	
Slot	Index	0x01	0x9A
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1460 Stop CMD Loop 2 Block 19

Name		Stop CMD Loop 2 Block 19	
Slot	Index	0x01	0x9B
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1461 Stop CMD Loop 2 Block 20

Name		Stop CMD Loop 2 Block 20	
Slot	Index	0x01	0x9C
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1462 Stop CMD Loop 2 Block 21

Name		Stop CMD Loop 2 Block 21	
Slot	Index	0x01	0x9D
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5 Bus parameters

5.1463 Stop CMD Loop 2 Block 22

Name		Stop CMD Loop 2 Block 22	
Slot	Index	0x01	0x9E
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1464 Stop CMD Loop 2 Block 23

Name		Stop CMD Loop 2 Block 23	
Slot	Index	0x01	0x9F
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1465 Stop CMD Loop 2 Block 24

Name		Stop CMD Loop 2 Block 24	
Slot	Index	0x01	0xA0
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1466 Stop CMD Loop 2 Block 25

Name		Stop CMD Loop 2 Block 25	
Slot	Index	0x01	0xA1
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1467 Stop CMD Loop 2 Block 26

Name		Stop CMD Loop 2 Block 26	
Slot	Index	0x01	0xA2
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1468 Stop CMD Loop 2 Block 27

Name		Stop CMD Loop 2 Block 27	
Slot	Index	0x01	0xA3
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5 Bus parameters

5.1469 Stop CMD Loop 2 Block 28

Name		Stop CMD Loop 2 Block 28	
Slot	Index	0x01	0xA4
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1470 Stop CMD Loop 2 Block 29

Name		Stop CMD Loop 2 Block 29	
Slot	Index	0x01	0xA5
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1471 Stop CMD Loop 2 Block 30

Name		Stop CMD Loop 2 Block 30	
Slot	Index	0x01	0xA6
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1472 Stop CMD Loop 2 Block 31

Name		Stop CMD Loop 2 Block 31	
Slot	Index	0x01	0xA7
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1473 Stop CMD Loop 2 Block 32

Name		Stop CMD Loop 2 Block 32	
Slot	Index	0x01	0xA8
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1474 Stop CMD Loop 3 Block 1

Name		Stop CMD Loop 3 Block 1	
Slot	Index	0x01	0xAB
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5 Bus parameters

5.1475 Stop CMD Loop 3 Block 2

Name		Stop CMD Loop 3 Block 2	
Slot	Index	0x01	0xAC
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1476 Stop CMD Loop 3 Block 3

Name		Stop CMD Loop 3 Block 3	
Slot	Index	0x01	0xAD
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1477 Stop CMD Loop 3 Block 4

Name		Stop CMD Loop 3 Block 4	
Slot	Index	0x01	0xAE
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1478 Stop CMD Loop 3 Block 5

Name		Stop CMD Loop 3 Block 5	
Slot	Index	0x01	0xAF
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1479 Stop CMD Loop 3 Block 6

Name		Stop CMD Loop 3 Block 6	
Slot	Index	0x01	0xB0
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1480 Stop CMD Loop 3 Block 7

Name		Stop CMD Loop 3 Block 7	
Slot	Index	0x01	0xB1
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5 Bus parameters

5.1481 Stop CMD Loop 3 Block 8

Name		Stop CMD Loop 3 Block 8	
Slot	Index	0x01	0xB2
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1482 Stop CMD Loop 3 Block 9

Name		Stop CMD Loop 3 Block 9	
Slot	Index	0x01	0xB3
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1483 Stop CMD Loop 3 Block 10

Name		Stop CMD Loop 3 Block 10	
Slot	Index	0x01	0xB4
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1484 Stop CMD Loop 3 Block 11

Name		Stop CMD Loop 3 Block 11	
Slot	Index	0x01	0xB5
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1485 Stop CMD Loop 3 Block 12

Name		Stop CMD Loop 3 Block 12	
Slot	Index	0x01	0xB6
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1486 Stop CMD Loop 3 Block 13

Name		Stop CMD Loop 3 Block 13	
Slot	Index	0x01	0xB7
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5 Bus parameters

5.1487 Stop CMD Loop 3 Block 14

Name		Stop CMD Loop 3 Block 14	
Slot	Index	0x01	0xB8
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1488 Stop CMD Loop 3 Block 15

Name		Stop CMD Loop 3 Block 15	
Slot	Index	0x01	0xB9
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1489 Stop CMD Loop 3 Block 16

Name		Stop CMD Loop 3 Block 16	
Slot	Index	0x01	0xBA
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1490 Stop CMD Loop 3 Block 17

Name		Stop CMD Loop 3 Block 17	
Slot	Index	0x01	0xBB
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1491 Stop CMD Loop 3 Block 18

Name		Stop CMD Loop 3 Block 18	
Slot	Index	0x01	0xBC
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1492 Stop CMD Loop 3 Block 19

Name		Stop CMD Loop 3 Block 19	
Slot	Index	0x01	0xBD
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5 Bus parameters

5.1493 Stop CMD Loop 3 Block 20

Name		Stop CMD Loop 3 Block 20	
Slot	Index	0x01	0xBE
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1494 Stop CMD Loop 3 Block 21

Name		Stop CMD Loop 3 Block 21	
Slot	Index	0x01	0xBF
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1495 Stop CMD Loop 3 Block 22

Name		Stop CMD Loop 3 Block 22	
Slot	Index	0x01	0xC0
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1496 Stop CMD Loop 3 Block 23

Name		Stop CMD Loop 3 Block 23	
Slot	Index	0x01	0xC1
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1497 Stop CMD Loop 3 Block 24

Name		Stop CMD Loop 3 Block 24	
Slot	Index	0x01	0xC2
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1498 Stop CMD Loop 3 Block 25

Name		Stop CMD Loop 3 Block 25	
Slot	Index	0x01	0xC3
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5 Bus parameters

5.1499 Stop CMD Loop 3 Block 26

Name		Stop CMD Loop 3 Block 26	
Slot	Index	0x01	0xC4
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1500 Stop CMD Loop 3 Block 27

Name		Stop CMD Loop 3 Block 27	
Slot	Index	0x01	0xC5
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1501 Stop CMD Loop 3 Block 28

Name		Stop CMD Loop 3 Block 28	
Slot	Index	0x01	0xC6
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1502 Stop CMD Loop 3 Block 29

Name		Stop CMD Loop 3 Block 29	
Slot	Index	0x01	0xC7
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1503 Stop CMD Loop 3 Block 30

Name		Stop CMD Loop 3 Block 30	
Slot	Index	0x01	0xC8
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1504 Stop CMD Loop 3 Block 31

Name		Stop CMD Loop 3 Block 31	
Slot	Index	0x01	0xC9
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5 Bus parameters

5.1505 Stop CMD Loop 3 Block 32

Name		Stop CMD Loop 3 Block 32	
Slot	Index	0x01	0xCA
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		not available	
Min./Max. Value		0	1
Scale	Offset	1	0

5.1506 T1 Lag Loop 1 Block 1

Name		T1 Lag Loop 1 Block 1	
Slot	Index	0x09	0x01
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1507 T1 Lag Loop 1 Block 2

Name		T1 Lag Loop 1 Block 2	
Slot	Index	0x09	0x02
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1508 T1 Lag Loop 1 Block 3

Name		T1 Lag Loop 1 Block 3	
Slot	Index	0x09	0x03
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1509 T1 Lag Loop 1 Block 4

Name		T1 Lag Loop 1 Block 4	
Slot	Index	0x09	0x04
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1510 T1 Lag Loop 1 Block 5

Name		T1 Lag Loop 1 Block 5	
Slot	Index	0x09	0x05
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5 Bus parameters

5.1511 T1 Lag Loop 1 Block 6

Name		T1 Lag Loop 1 Block 6	
Slot	Index	0x09	0x06
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1512 T1 Lag Loop 1 Block 7

Name		T1 Lag Loop 1 Block 7	
Slot	Index	0x09	0x07
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1513 T1 Lag Loop 1 Block 8

Name		T1 Lag Loop 1 Block 8	
Slot	Index	0x09	0x08
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1514 T1 Lag Loop 1 Block 9

Name		T1 Lag Loop 1 Block 9	
Slot	Index	0x09	0x09
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1515 T1 Lag Loop 1 Block 10

Name		T1 Lag Loop 1 Block 10	
Slot	Index	0x09	0x0A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1516 T1 Lag Loop 1 Block 11

Name		T1 Lag Loop 1 Block 11	
Slot	Index	0x09	0x0B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5 Bus parameters

5.1517 T1 Lag Loop 1 Block 12

Name		T1 Lag Loop 1 Block 12	
Slot	Index	0x09	0x0C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1518 T1 Lag Loop 1 Block 13

Name		T1 Lag Loop 1 Block 13	
Slot	Index	0x09	0x0D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1519 T1 Lag Loop 1 Block 14

Name		T1 Lag Loop 1 Block 14	
Slot	Index	0x09	0x0E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1520 T1 Lag Loop 1 Block 15

Name		T1 Lag Loop 1 Block 15	
Slot	Index	0x09	0x0F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1521 T1 Lag Loop 1 Block 16

Name		T1 Lag Loop 1 Block 16	
Slot	Index	0x09	0x10
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1522 T1 Lag Loop 1 Block 17

Name		T1 Lag Loop 1 Block 17	
Slot	Index	0x09	0x11
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5 Bus parameters

5.1523 T1 Lag Loop 1 Block 18

Name		T1 Lag Loop 1 Block 18	
Slot	Index	0x09	0x12
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1524 T1 Lag Loop 1 Block 19

Name		T1 Lag Loop 1 Block 19	
Slot	Index	0x09	0x13
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1525 T1 Lag Loop 1 Block 20

Name		T1 Lag Loop 1 Block 20	
Slot	Index	0x09	0x14
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1526 T1 Lag Loop 1 Block 21

Name		T1 Lag Loop 1 Block 21	
Slot	Index	0x09	0x15
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1527 T1 Lag Loop 1 Block 22

Name		T1 Lag Loop 1 Block 22	
Slot	Index	0x09	0x16
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1528 T1 Lag Loop 1 Block 23

Name		T1 Lag Loop 1 Block 23	
Slot	Index	0x09	0x17
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5 Bus parameters

5.1529 T1 Lag Loop 1 Block 24

Name		T1 Lag Loop 1 Block 24	
Slot	Index	0x09	0x18
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1530 T1 Lag Loop 1 Block 25

Name		T1 Lag Loop 1 Block 25	
Slot	Index	0x09	0x19
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1531 T1 Lag Loop 1 Block 26

Name		T1 Lag Loop 1 Block 26	
Slot	Index	0x09	0x1A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1532 T1 Lag Loop 1 Block 27

Name		T1 Lag Loop 1 Block 27	
Slot	Index	0x09	0x1B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1533 T1 Lag Loop 1 Block 28

Name		T1 Lag Loop 1 Block 28	
Slot	Index	0x09	0x1C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1534 T1 Lag Loop 1 Block 29

Name		T1 Lag Loop 1 Block 29	
Slot	Index	0x09	0x1D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5 Bus parameters

5.1535 T1 Lag Loop 1 Block 30

Name		T1 Lag Loop 1 Block 30	
Slot	Index	0x09	0x1E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1536 T1 Lag Loop 1 Block 31

Name		T1 Lag Loop 1 Block 31	
Slot	Index	0x09	0x1F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1537 T1 Lag Loop 1 Block 32

Name		T1 Lag Loop 1 Block 32	
Slot	Index	0x09	0x20
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1538 T1 Lag Loop 2 Block 1

Name		T1 Lag Loop 2 Block 1	
Slot	Index	0x09	0x23
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1539 T1 Lag Loop 2 Block 2

Name		T1 Lag Loop 2 Block 2	
Slot	Index	0x09	0x24
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1540 T1 Lag Loop 2 Block 3

Name		T1 Lag Loop 2 Block 3	
Slot	Index	0x09	0x25
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5 Bus parameters

5.1541 T1 Lag Loop 2 Block 4

Name		T1 Lag Loop 2 Block 4	
Slot	Index	0x09	0x26
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1542 T1 Lag Loop 2 Block 5

Name		T1 Lag Loop 2 Block 5	
Slot	Index	0x09	0x27
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1543 T1 Lag Loop 2 Block 6

Name		T1 Lag Loop 2 Block 6	
Slot	Index	0x09	0x28
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1544 T1 Lag Loop 2 Block 7

Name		T1 Lag Loop 2 Block 7	
Slot	Index	0x09	0x29
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1545 T1 Lag Loop 2 Block 8

Name		T1 Lag Loop 2 Block 8	
Slot	Index	0x09	0x2A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1546 T1 Lag Loop 2 Block 9

Name		T1 Lag Loop 2 Block 9	
Slot	Index	0x09	0x2B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5 Bus parameters

5.1547 T1 Lag Loop 2 Block 10

Name		T1 Lag Loop 2 Block 10	
Slot	Index	0x09	0x2C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1548 T1 Lag Loop 2 Block 11

Name		T1 Lag Loop 2 Block 11	
Slot	Index	0x09	0x2D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1549 T1 Lag Loop 2 Block 12

Name		T1 Lag Loop 2 Block 12	
Slot	Index	0x09	0x2E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1550 T1 Lag Loop 2 Block 13

Name		T1 Lag Loop 2 Block 13	
Slot	Index	0x09	0x2F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1551 T1 Lag Loop 2 Block 14

Name		T1 Lag Loop 2 Block 14	
Slot	Index	0x09	0x30
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1552 T1 Lag Loop 2 Block 15

Name		T1 Lag Loop 2 Block 15	
Slot	Index	0x09	0x31
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5 Bus parameters

5.1553 T1 Lag Loop 2 Block 16

Name		T1 Lag Loop 2 Block 16	
Slot	Index	0x09	0x32
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1554 T1 Lag Loop 2 Block 17

Name		T1 Lag Loop 2 Block 17	
Slot	Index	0x09	0x33
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1555 T1 Lag Loop 2 Block 18

Name		T1 Lag Loop 2 Block 18	
Slot	Index	0x09	0x34
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1556 T1 Lag Loop 2 Block 19

Name		T1 Lag Loop 2 Block 19	
Slot	Index	0x09	0x35
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1557 T1 Lag Loop 2 Block 20

Name		T1 Lag Loop 2 Block 20	
Slot	Index	0x09	0x36
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1558 T1 Lag Loop 2 Block 21

Name		T1 Lag Loop 2 Block 21	
Slot	Index	0x09	0x37
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5 Bus parameters

5.1559 T1 Lag Loop 2 Block 22

Name		T1 Lag Loop 2 Block 22	
Slot	Index	0x09	0x38
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1560 T1 Lag Loop 2 Block 23

Name		T1 Lag Loop 2 Block 23	
Slot	Index	0x09	0x39
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1561 T1 Lag Loop 2 Block 24

Name		T1 Lag Loop 2 Block 24	
Slot	Index	0x09	0x3A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1562 T1 Lag Loop 2 Block 25

Name		T1 Lag Loop 2 Block 25	
Slot	Index	0x09	0x3B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1563 T1 Lag Loop 2 Block 26

Name		T1 Lag Loop 2 Block 26	
Slot	Index	0x09	0x3C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1564 T1 Lag Loop 2 Block 27

Name		T1 Lag Loop 2 Block 27	
Slot	Index	0x09	0x3D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5 Bus parameters

5.1565 T1 Lag Loop 2 Block 28

Name		T1 Lag Loop 2 Block 28	
Slot	Index	0x09	0x3E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1566 T1 Lag Loop 2 Block 29

Name		T1 Lag Loop 2 Block 29	
Slot	Index	0x09	0x3F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1567 T1 Lag Loop 2 Block 30

Name		T1 Lag Loop 2 Block 30	
Slot	Index	0x09	0x40
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1568 T1 Lag Loop 2 Block 31

Name		T1 Lag Loop 2 Block 31	
Slot	Index	0x09	0x41
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1569 T1 Lag Loop 2 Block 32

Name		T1 Lag Loop 2 Block 32	
Slot	Index	0x09	0x42
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1570 T1 Lag Loop 3 Block 1

Name		T1 Lag Loop 3 Block 1	
Slot	Index	0x09	0x45
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5 Bus parameters

5.1571 T1 Lag Loop 3 Block 2

Name		T1 Lag Loop 3 Block 2	
Slot	Index	0x09	0x46
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1572 T1 Lag Loop 3 Block 3

Name		T1 Lag Loop 3 Block 3	
Slot	Index	0x09	0x47
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1573 T1 Lag Loop 3 Block 4

Name		T1 Lag Loop 3 Block 4	
Slot	Index	0x09	0x48
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1574 T1 Lag Loop 3 Block 5

Name		T1 Lag Loop 3 Block 5	
Slot	Index	0x09	0x49
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1575 T1 Lag Loop 3 Block 6

Name		T1 Lag Loop 3 Block 6	
Slot	Index	0x09	0x4A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1576 T1 Lag Loop 3 Block 7

Name		T1 Lag Loop 3 Block 7	
Slot	Index	0x09	0x4B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5 Bus parameters

5.1577 T1 Lag Loop 3 Block 8

Name		T1 Lag Loop 3 Block 8	
Slot	Index	0x09	0x4C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1578 T1 Lag Loop 3 Block 9

Name		T1 Lag Loop 3 Block 9	
Slot	Index	0x09	0x4D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1579 T1 Lag Loop 3 Block 10

Name		T1 Lag Loop 3 Block 10	
Slot	Index	0x09	0x4E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1580 T1 Lag Loop 3 Block 11

Name		T1 Lag Loop 3 Block 11	
Slot	Index	0x09	0x4F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1581 T1 Lag Loop 3 Block 12

Name		T1 Lag Loop 3 Block 12	
Slot	Index	0x09	0x50
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1582 T1 Lag Loop 3 Block 13

Name		T1 Lag Loop 3 Block 13	
Slot	Index	0x09	0x51
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5 Bus parameters

5.1583 T1 Lag Loop 3 Block 14

Name		T1 Lag Loop 3 Block 14	
Slot	Index	0x09	0x52
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1584 T1 Lag Loop 3 Block 15

Name		T1 Lag Loop 3 Block 15	
Slot	Index	0x09	0x53
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1585 T1 Lag Loop 3 Block 16

Name		T1 Lag Loop 3 Block 16	
Slot	Index	0x09	0x54
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1586 T1 Lag Loop 3 Block 17

Name		T1 Lag Loop 3 Block 17	
Slot	Index	0x09	0x55
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1587 T1 Lag Loop 3 Block 18

Name		T1 Lag Loop 3 Block 18	
Slot	Index	0x09	0x56
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1588 T1 Lag Loop 3 Block 19

Name		T1 Lag Loop 3 Block 19	
Slot	Index	0x09	0x57
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5 Bus parameters

5.1589 T1 Lag Loop 3 Block 20

Name		T1 Lag Loop 3 Block 20	
Slot	Index	0x09	0x58
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1590 T1 Lag Loop 3 Block 21

Name		T1 Lag Loop 3 Block 21	
Slot	Index	0x09	0x59
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1591 T1 Lag Loop 3 Block 22

Name		T1 Lag Loop 3 Block 22	
Slot	Index	0x09	0x5A
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1592 T1 Lag Loop 3 Block 23

Name		T1 Lag Loop 3 Block 23	
Slot	Index	0x09	0x5B
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1593 T1 Lag Loop 3 Block 24

Name		T1 Lag Loop 3 Block 24	
Slot	Index	0x09	0x5C
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1594 T1 Lag Loop 3 Block 25

Name		T1 Lag Loop 3 Block 25	
Slot	Index	0x09	0x5D
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5 Bus parameters

5.1595 T1 Lag Loop 3 Block 26

Name		T1 Lag Loop 3 Block 26	
Slot	Index	0x09	0x5E
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1596 T1 Lag Loop 3 Block 27

Name		T1 Lag Loop 3 Block 27	
Slot	Index	0x09	0x5F
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1597 T1 Lag Loop 3 Block 28

Name		T1 Lag Loop 3 Block 28	
Slot	Index	0x09	0x60
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1598 T1 Lag Loop 3 Block 29

Name		T1 Lag Loop 3 Block 29	
Slot	Index	0x09	0x61
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1599 T1 Lag Loop 3 Block 30

Name		T1 Lag Loop 3 Block 30	
Slot	Index	0x09	0x62
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1600 T1 Lag Loop 3 Block 31

Name		T1 Lag Loop 3 Block 31	
Slot	Index	0x09	0x63
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5 Bus parameters

5.1601 T1 Lag Loop 3 Block 32

Name		T1 Lag Loop 3 Block 32	
Slot	Index	0x09	0x64
Bytes	Units	2	Hz
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		1	640
Scale	Offset	1	0

5.1602 Table 1 Block

Name		Table 1 Block	
Slot	Index	0x01	0xD8
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		Not available	
Min./Max. Value		0	0xFF FF FF FF
Scale	Offset	1	0
Description		Bit 0 = Block 1 Bit 1 = Block 2 Bit 2 = Block 3 ...	

5.1603 Table 1 Input

Name		Table 1 Input	
Slot	Index	0x01	0xD4
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		Not available	
Min./Max. Value		0	35
Scale	Offset	1	0
Description		0 = C1-1 1 = C1-2 2 = C2-1 3 = C2-2 4 = C3-1 5 = C3-2 6 = FB1-1 7 = FB1-2 8 = FB2-1 9 = FB2-2 10 = FB3-1 11 = FB3-2 12 = C1 13 = C2 14 = C3 15 = FB1 16 = FB2 17 = FB3 18 = LC1 19 = LC2 20 = LC3 21 = CMD1 22 = CMD2 23 = CMD3 24 = LFB1 25 = LFB2 26 = LFB3 27 = LC1-LFB1 28 = LC2-LFB2 29 = LC3-LFB3 30 = LO1 31 = LO2 32 = LO3 33 = OUT1 34 = OUT2 35 = OUT3	

5 Bus parameters

5.1604 Table 1 Max

Name		Table 1 Max	
Slot	Index	0x01	0xE2
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		Not available	
Min./Max. Value		-50000	50000
Scale	Offset	327,67	0

5.1605 Table 1 Min

Name		Table 1 Min	
Slot	Index	0x01	0xE0
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		Not available	
Min./Max. Value		-50000	50000
Scale	Offset	327,67	0

5.1606 Table 1 Play Rate

Name		Table 1 Play Rate	
Slot	Index	0x01	0xDE
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		Not available	
Min./Max. Value		2	2000
Scale	Offset	1	0

5.1607 Table 1 Play Units

Name		Table 1 Play Units	
Slot	Index	0x01	0xD2
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		Not available	
Min./Max. Value		0	3
Scale	Offset	1	0
Description		0 = ms 1 = s 2 = min 3 = Units	

5.1608 Table 1 Save

Name		Table 1 Save	
Slot	Index	0x01	0xDA
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		Not available	
Min./Max. Value		0xFF FF	0x1F 01
Scale	Offset	1	0
Description		0xFF FF = OFF 0x00 00 = Block 1 Start 0x00 01 = Block 1 End 0x01 00 = Block 2 Start ...	

5 Bus parameters

5.1609 Table 1 Source

Name		Table 1 Source	
Slot	Index	0x01	0xD6
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		Not available	
Min./Max. Value		0	36
Scale	Offset	1	0
Description	0 = C1-1 1 = C1-2 2 = C2-1 3 = C2-2 4 = C3-1 5 = C3-2 6 = FB1-1 7 = FB1-2 8 = FB2-1 9 = FB2-2 10 = FB3-1 11 = FB3-2 12 = C1 13 = C2 14 = C3 15 = FB1 16 = FB2 17 = FB3 18 = LC1 19 = LC2 20 = LC3 21 = CMD1 22 = CMD2 23 = CMD3 24 = LFB1 25 = LFB2 26 = LFB3 27 = LC1-LFB1 28 = LC2-LFB2 29 = LC3-LFB3 30 = LO1 31 = LO2 32 = LO3 33 = OUT1 34 = OUT2 35 = OUT3 36 = TIME		

5.1610 Table 1 Store Rate

Name		Table 1 Store Rate	
Slot	Index	0x01	0xDC
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		Not available	
Min./Max. Value		2	2000
Scale	Offset	1	0

5.1611 Table 1 Store Units

Name		Table 1 Store Units	
Slot	Index	0x01	0xD0
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		Not available	
Min./Max. Value		0	3
Scale	Offset	1	0
Description		0 = ms 1 = s 2 = min 3 = Units	

5.1612 Table 2 Block

Name		Table 2 Block	
Slot	Index	0x01	0xD9
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		Not available	
Min./Max. Value		0	0xFF FF FF FF
Scale	Offset	1	0
Description		Bit 0 = Block 1 Bit 1 = Block 2 Bit 2 = Block 3 ...	

5 Bus parameters

5.1613 Table 2 Input

Name		Table 2 Input	
Slot	Index	0x01	0xD5
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		Not available	
Min./Max. Value		0	35
Scale	Offset	1	0
Description	0 = C1-1 1 = C1-2 2 = C2-1 3 = C2-2 4 = C3-1 5 = C3-2 6 = FB1-1 7 = FB1-2 8 = FB2-1 9 = FB2-2 10 = FB3-1 11 = FB3-2 12 = C1 13 = C2 14 = C3 15 = FB1 16 = FB2 17 = FB3 18 = LC1 19 = LC2 20 = LC3 21 = CMD1 22 = CMD2 23 = CMD3 24 = LFB1 25 = LFB2 26 = LFB3 27 = LC1-LFB1 28 = LC2-LFB2 29 = LC3-LFB3 30 = LO1 31 = LO2 32 = LO3 33 = OUT1 34 = OUT2 35 = OUT3		

5.1614 Table 2 Max

Name		Table 2 Max	
Slot	Index	0x01	0xE3
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		Not available	
Min./Max. Value		-50000	50000
Scale	Offset	327,67	0

5.1615 Table 2 Min

Name		Table 2 Min	
Slot	Index	0x01	0xE1
Bytes	Units	4	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		Not available	
Min./Max. Value		-50000	50000
Scale	Offset	327,67	0

5.1616 Table 2 Play Rate

Name		Table 2 Play Rate	
Slot	Index	0x01	0xDF
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		Not available	
Min./Max. Value		2	2000
Scale	Offset	1	0

5 Bus parameters

5.1617 Table 2 Play Units

Name		Table 2 Play Units	
Slot	Index	0x01	0xD3
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		Not available	
Min./Max. Value		0	3
Scale	Offset	1	0
Description		0 = ms 1 = s 2 = min 3 = Units	

5.1618 Table 2 Save

Name		Table 2 Save	
Slot	Index	0x01	0xDB
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		Not available	
Min./Max. Value		0xFF FF	0x1F 01
Scale	Offset	1	0
Description		0xFF FF = OFF 0x00 00 = Block 1 Start 0x00 01 = Block 1 End 0x01 00 = Block 2 Start ...	

5.1619 Table 2 Source

Name		Table 2 Source	
Slot	Index	0x01	0xD7
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		Not available	
Min./Max. Value		0	36
Scale	Offset	1	0
Description	0 = C1-1 1 = C1-2 2 = C2-1 3 = C2-2 4 = C3-1 5 = C3-2 6 = FB1-1 7 = FB1-2 8 = FB2-1 9 = FB2-2 10 = FB3-1 11 = FB3-2 12 = C1 13 = C2 14 = C3 15 = FB1 16 = FB2 17 = FB3 18 = LC1 19 = LC2 20 = LC3 21 = CMD1 22 = CMD2 23 = CMD3 24 = LFB1 25 = LFB2 26 = LFB3 27 = LC1-LFB1 28 = LC2-LFB2 29 = LC3-LFB3 30 = LO1 31 = LO2 32 = LO3 33 = OUT1 34 = OUT2 35 = OUT3 36 = TIME		

5 Bus parameters

5.1620 Table 2 Store Rate

Name		Table 2 Store Rate	
Slot	Index	0x01	0xDD
Bytes	Units	2	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		Not available	
Min./Max. Value		2	2000
Scale	Offset	1	0

5.1621 Table 2 Store Units

Name		Table 2 Store Units	
Slot	Index	0x01	0xD1
Bytes	Units	1	
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		Not available	
Min./Max. Value		0	3
Scale	Offset	1	0
Description		0 = ms 1 = s 2 = min 3 = Units	

5.1622 Units to 100% Loop 1

Name		Units to 100% Loop 1	
Slot	Index	0x10	0x07
Bytes	Units	4	100% OUT
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		available	
Min./Max. Value		0,0	50000,0
Scale	Offset	327,7	0,0

5.1623 Units to 100% Loop 2

Name		Units to 100% Loop 2	
Slot	Index	0x10	0x08
Bytes	Units	4	100% OUT
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		available	
Min./Max. Value		0,0	50000,0
Scale	Offset	327,7	0,0

5.1624 Units to 100% Loop 3

Name		Units to 100% Loop 3	
Slot	Index	0x10	0x09
Bytes	Units	4	100% OUT
Access		Read/Write	
Value Acceptance		only with deactivated enabling	
Busmanager		available	
Min./Max. Value		0,0	50000,0
Scale	Offset	327,7	0,0

5.1625 Velocity- Loop 1 Block 1

Name		Velocity- Loop 1 Block 1	
Slot	Index	0x05	0x67
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1626 Velocity- Loop 1 Block 2

Name		Velocity- Loop 1 Block 2	
Slot	Index	0x05	0x68
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1627 Velocity- Loop 1 Block 3

Name		Velocity- Loop 1 Block 3	
Slot	Index	0x05	0x69
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1628 Velocity- Loop 1 Block 4

Name		Velocity- Loop 1 Block 4	
Slot	Index	0x05	0x6A
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1629 Velocity- Loop 1 Block 5

Name		Velocity- Loop 1 Block 5	
Slot	Index	0x05	0x6B
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1630 Velocity- Loop 1 Block 6

Name		Velocity- Loop 1 Block 6	
Slot	Index	0x05	0x6C
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1631 Velocity- Loop 1 Block 7

Name		Velocity- Loop 1 Block 7	
Slot	Index	0x05	0x6D
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1632 Velocity- Loop 1 Block 8

Name		Velocity- Loop 1 Block 8	
Slot	Index	0x05	0x6E
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1633 Velocity- Loop 1 Block 9

Name		Velocity- Loop 1 Block 9	
Slot	Index	0x05	0x6F
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1634 Velocity- Loop 1 Block 10

Name		Velocity- Loop 1 Block 10	
Slot	Index	0x05	0x70
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1635 Velocity- Loop 1 Block 11

Name		Velocity- Loop 1 Block 11	
Slot	Index	0x05	0x71
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1636 Velocity- Loop 1 Block 12

Name		Velocity- Loop 1 Block 12	
Slot	Index	0x05	0x72
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1637 Velocity- Loop 1 Block 13

Name		Velocity- Loop 1 Block 13	
Slot	Index	0x05	0x73
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1638 Velocity- Loop 1 Block 14

Name		Velocity- Loop 1 Block 14	
Slot	Index	0x05	0x74
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1639 Velocity- Loop 1 Block 15

Name		Velocity- Loop 1 Block 15	
Slot	Index	0x05	0x75
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1640 Velocity- Loop 1 Block 16

Name		Velocity- Loop 1 Block 16	
Slot	Index	0x05	0x76
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1641 Velocity- Loop 1 Block 17

Name		Velocity- Loop 1 Block 17	
Slot	Index	0x05	0x77
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1642 Velocity- Loop 1 Block 18

Name		Velocity- Loop 1 Block 18	
Slot	Index	0x05	0x78
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1643 Velocity- Loop 1 Block 19

Name		Velocity- Loop 1 Block 19	
Slot	Index	0x05	0x79
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1644 Velocity- Loop 1 Block 20

Name		Velocity- Loop 1 Block 20	
Slot	Index	0x05	0x7A
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1645 Velocity- Loop 1 Block 21

Name		Velocity- Loop 1 Block 21	
Slot	Index	0x05	0x7B
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1646 Velocity- Loop 1 Block 22

Name		Velocity- Loop 1 Block 22	
Slot	Index	0x05	0x7C
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1647 Velocity- Loop 1 Block 23

Name		Velocity- Loop 1 Block 23	
Slot	Index	0x05	0x7D
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1648 Velocity- Loop 1 Block 24

Name		Velocity- Loop 1 Block 24	
Slot	Index	0x05	0x7E
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1649 Velocity- Loop 1 Block 25

Name		Velocity- Loop 1 Block 25	
Slot	Index	0x05	0x7F
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1650 Velocity- Loop 1 Block 26

Name		Velocity- Loop 1 Block 26	
Slot	Index	0x05	0x80
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1651 Velocity- Loop 1 Block 27

Name		Velocity- Loop 1 Block 27	
Slot	Index	0x05	0x81
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1652 Velocity- Loop 1 Block 28

Name		Velocity- Loop 1 Block 28	
Slot	Index	0x05	0x82
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1653 Velocity- Loop 1 Block 29

Name		Velocity- Loop 1 Block 29	
Slot	Index	0x05	0x83
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1654 Velocity- Loop 1 Block 30

Name		Velocity- Loop 1 Block 30	
Slot	Index	0x05	0x84
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1655 Velocity- Loop 1 Block 31

Name		Velocity- Loop 1 Block 31	
Slot	Index	0x05	0x85
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1656 Velocity- Loop 1 Block 32

Name		Velocity- Loop 1 Block 32	
Slot	Index	0x05	0x86
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1657 Velocity- Loop 2 Block 1

Name		Velocity- Loop 2 Block 1	
Slot	Index	0x05	0x89
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1658 Velocity- Loop 2 Block 2

Name		Velocity- Loop 2 Block 2	
Slot	Index	0x05	0x8A
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1659 Velocity- Loop 2 Block 3

Name		Velocity- Loop 2 Block 3	
Slot	Index	0x05	0x8B
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1660 Velocity- Loop 2 Block 4

Name		Velocity- Loop 2 Block 4	
Slot	Index	0x05	0x8C
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1661 Velocity- Loop 2 Block 5

Name		Velocity- Loop 2 Block 5	
Slot	Index	0x05	0x8D
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1662 Velocity- Loop 2 Block 6

Name		Velocity- Loop 2 Block 6	
Slot	Index	0x05	0x8E
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1663 Velocity- Loop 2 Block 7

Name		Velocity- Loop 2 Block 7	
Slot	Index	0x05	0x8F
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1664 Velocity- Loop 2 Block 8

Name		Velocity- Loop 2 Block 8	
Slot	Index	0x05	0x90
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1665 Velocity- Loop 2 Block 9

Name		Velocity- Loop 2 Block 9	
Slot	Index	0x05	0x91
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1666 Velocity- Loop 2 Block 10

Name		Velocity- Loop 2 Block 10	
Slot	Index	0x05	0x92
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1667 Velocity- Loop 2 Block 11

Name		Velocity- Loop 2 Block 11	
Slot	Index	0x05	0x93
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1668 Velocity- Loop 2 Block 12

Name		Velocity- Loop 2 Block 12	
Slot	Index	0x05	0x94
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1669 Velocity- Loop 2 Block 13

Name		Velocity- Loop 2 Block 13	
Slot	Index	0x05	0x95
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1670 Velocity- Loop 2 Block 14

Name		Velocity- Loop 2 Block 14	
Slot	Index	0x05	0x96
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1671 Velocity- Loop 2 Block 15

Name		Velocity- Loop 2 Block 15	
Slot	Index	0x05	0x97
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1672 Velocity- Loop 2 Block 16

Name		Velocity- Loop 2 Block 16	
Slot	Index	0x05	0x98
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1673 Velocity- Loop 2 Block 17

Name		Velocity- Loop 2 Block 17	
Slot	Index	0x05	0x99
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1674 Velocity- Loop 2 Block 18

Name		Velocity- Loop 2 Block 18	
Slot	Index	0x05	0x9A
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1675 Velocity- Loop 2 Block 19

Name		Velocity- Loop 2 Block 19	
Slot	Index	0x05	0x9B
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1676 Velocity- Loop 2 Block 20

Name		Velocity- Loop 2 Block 20	
Slot	Index	0x05	0x9C
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1677 Velocity- Loop 2 Block 21

Name		Velocity- Loop 2 Block 21	
Slot	Index	0x05	0x9D
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1678 Velocity- Loop 2 Block 22

Name		Velocity- Loop 2 Block 22	
Slot	Index	0x05	0x9E
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1679 Velocity- Loop 2 Block 23

Name		Velocity- Loop 2 Block 23	
Slot	Index	0x05	0x9F
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1680 Velocity- Loop 2 Block 24

Name		Velocity- Loop 2 Block 24	
Slot	Index	0x05	0xA0
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1681 Velocity- Loop 2 Block 25

Name		Velocity- Loop 2 Block 25	
Slot	Index	0x05	0xA1
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1682 Velocity- Loop 2 Block 26

Name		Velocity- Loop 2 Block 26	
Slot	Index	0x05	0xA2
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1683 Velocity- Loop 2 Block 27

Name		Velocity- Loop 2 Block 27	
Slot	Index	0x05	0xA3
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1684 Velocity- Loop 2 Block 28

Name		Velocity- Loop 2 Block 28	
Slot	Index	0x05	0xA4
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1685 Velocity- Loop 2 Block 29

Name		Velocity- Loop 2 Block 29	
Slot	Index	0x05	0xA5
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1686 Velocity- Loop 2 Block 30

Name		Velocity- Loop 2 Block 30	
Slot	Index	0x05	0xA6
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1687 Velocity- Loop 2 Block 31

Name		Velocity- Loop 2 Block 31	
Slot	Index	0x05	0xA7
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1688 Velocity- Loop 2 Block 32

Name		Velocity- Loop 2 Block 32	
Slot	Index	0x05	0xA8
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1689 Velocity- Loop 3 Block 1

Name		Velocity- Loop 3 Block 1	
Slot	Index	0x05	0xAB
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1690 Velocity- Loop 3 Block 2

Name		Velocity- Loop 3 Block 2	
Slot	Index	0x05	0xAC
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1691 Velocity- Loop 3 Block 3

Name		Velocity- Loop 3 Block 3	
Slot	Index	0x05	0xAD
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1692 Velocity- Loop 3 Block 4

Name		Velocity- Loop 3 Block 4	
Slot	Index	0x05	0xAE
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1693 Velocity- Loop 3 Block 5

Name		Velocity- Loop 3 Block 5	
Slot	Index	0x05	0xAF
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1694 Velocity- Loop 3 Block 6

Name		Velocity- Loop 3 Block 6	
Slot	Index	0x05	0xB0
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1695 Velocity- Loop 3 Block 7

Name		Velocity- Loop 3 Block 7	
Slot	Index	0x05	0xB1
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1696 Velocity- Loop 3 Block 8

Name		Velocity- Loop 3 Block 8	
Slot	Index	0x05	0xB2
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1697 Velocity- Loop 3 Block 9

Name		Velocity- Loop 3 Block 9	
Slot	Index	0x05	0xB3
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1698 Velocity- Loop 3 Block 10

Name		Velocity- Loop 3 Block 10	
Slot	Index	0x05	0xB4
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1699 Velocity- Loop 3 Block 11

Name		Velocity- Loop 3 Block 11	
Slot	Index	0x05	0xB5
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1700 Velocity- Loop 3 Block 12

Name		Velocity- Loop 3 Block 12	
Slot	Index	0x05	0xB6
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1701 Velocity- Loop 3 Block 13

Name		Velocity- Loop 3 Block 13	
Slot	Index	0x05	0xB7
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1702 Velocity- Loop 3 Block 14

Name		Velocity- Loop 3 Block 14	
Slot	Index	0x05	0xB8
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1703 Velocity- Loop 3 Block 15

Name		Velocity- Loop 3 Block 15	
Slot	Index	0x05	0xB9
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1704 Velocity- Loop 3 Block 16

Name		Velocity- Loop 3 Block 16	
Slot	Index	0x05	0xBA
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1705 Velocity- Loop 3 Block 17

Name		Velocity- Loop 3 Block 17	
Slot	Index	0x05	0xBB
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1706 Velocity- Loop 3 Block 18

Name		Velocity- Loop 3 Block 18	
Slot	Index	0x05	0xBC
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1707 Velocity- Loop 3 Block 19

Name		Velocity- Loop 3 Block 19	
Slot	Index	0x05	0xBD
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1708 Velocity- Loop 3 Block 20

Name		Velocity- Loop 3 Block 20	
Slot	Index	0x05	0xBE
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1709 Velocity- Loop 3 Block 21

Name		Velocity- Loop 3 Block 21	
Slot	Index	0x05	0xBF
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1710 Velocity- Loop 3 Block 22

Name		Velocity- Loop 3 Block 22	
Slot	Index	0x05	0xC0
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1711 Velocity- Loop 3 Block 23

Name		Velocity- Loop 3 Block 23	
Slot	Index	0x05	0xC1
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1712 Velocity- Loop 3 Block 24

Name		Velocity- Loop 3 Block 24	
Slot	Index	0x05	0xC2
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1713 Velocity- Loop 3 Block 25

Name		Velocity- Loop 3 Block 25	
Slot	Index	0x05	0xC3
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1714 Velocity- Loop 3 Block 26

Name		Velocity- Loop 3 Block 26	
Slot	Index	0x05	0xC4
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1715 Velocity- Loop 3 Block 27

Name		Velocity- Loop 3 Block 27	
Slot	Index	0x05	0xC5
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1716 Velocity- Loop 3 Block 28

Name		Velocity- Loop 3 Block 28	
Slot	Index	0x05	0xC6
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1717 Velocity- Loop 3 Block 29

Name		Velocity- Loop 3 Block 29	
Slot	Index	0x05	0xC7
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1718 Velocity- Loop 3 Block 30

Name		Velocity- Loop 3 Block 30	
Slot	Index	0x05	0xC8
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1719 Velocity- Loop 3 Block 31

Name		Velocity- Loop 3 Block 31	
Slot	Index	0x05	0xC9
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1720 Velocity- Loop 3 Block 32

Name		Velocity- Loop 3 Block 32	
Slot	Index	0x05	0xCA
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1721 Velocity+ Loop 1 Block 1

Name		Velocity+ Loop 1 Block 1	
Slot	Index	0x04	0x67
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1722 Velocity+ Loop 1 Block 2

Name		Velocity+ Loop 1 Block 2	
Slot	Index	0x04	0x68
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1723 Velocity+ Loop 1 Block 3

Name		Velocity+ Loop 1 Block 3	
Slot	Index	0x04	0x69
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1724 Velocity+ Loop 1 Block 4

Name		Velocity+ Loop 1 Block 4	
Slot	Index	0x04	0x6A
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1725 Velocity+ Loop 1 Block 5

Name		Velocity+ Loop 1 Block 5	
Slot	Index	0x04	0x6B
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1726 Velocity+ Loop 1 Block 6

Name		Velocity+ Loop 1 Block 6	
Slot	Index	0x04	0x6C
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1727 Velocity+ Loop 1 Block 7

Name		Velocity+ Loop 1 Block 7	
Slot	Index	0x04	0x6D
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1728 Velocity+ Loop 1 Block 8

Name		Velocity+ Loop 1 Block 8	
Slot	Index	0x04	0x6E
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1729 Velocity+ Loop 1 Block 9

Name		Velocity+ Loop 1 Block 9	
Slot	Index	0x04	0x6F
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1730 Velocity+ Loop 1 Block 10

Name		Velocity+ Loop 1 Block 10	
Slot	Index	0x04	0x70
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1731 Velocity+ Loop 1 Block 11

Name		Velocity+ Loop 1 Block 11	
Slot	Index	0x04	0x71
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1732 Velocity+ Loop 1 Block 12

Name		Velocity+ Loop 1 Block 12	
Slot	Index	0x04	0x72
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1733 Velocity+ Loop 1 Block 13

Name		Velocity+ Loop 1 Block 13	
Slot	Index	0x04	0x73
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1734 Velocity+ Loop 1 Block 14

Name		Velocity+ Loop 1 Block 14	
Slot	Index	0x04	0x74
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1735 Velocity+ Loop 1 Block 15

Name		Velocity+ Loop 1 Block 15	
Slot	Index	0x04	0x75
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1736 Velocity+ Loop 1 Block 16

Name		Velocity+ Loop 1 Block 16	
Slot	Index	0x04	0x76
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1737 Velocity+ Loop 1 Block 17

Name		Velocity+ Loop 1 Block 17	
Slot	Index	0x04	0x77
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1738 Velocity+ Loop 1 Block 18

Name		Velocity+ Loop 1 Block 18	
Slot	Index	0x04	0x78
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1739 Velocity+ Loop 1 Block 19

Name		Velocity+ Loop 1 Block 19	
Slot	Index	0x04	0x79
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1740 Velocity+ Loop 1 Block 20

Name		Velocity+ Loop 1 Block 20	
Slot	Index	0x04	0x7A
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1741 Velocity+ Loop 1 Block 21

Name		Velocity+ Loop 1 Block 21	
Slot	Index	0x04	0x7B
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1742 Velocity+ Loop 1 Block 22

Name		Velocity+ Loop 1 Block 22	
Slot	Index	0x04	0x7C
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1743 Velocity+ Loop 1 Block 23

Name		Velocity+ Loop 1 Block 23	
Slot	Index	0x04	0x7D
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1744 Velocity+ Loop 1 Block 24

Name		Velocity+ Loop 1 Block 24	
Slot	Index	0x04	0x7E
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1745 Velocity+ Loop 1 Block 25

Name		Velocity+ Loop 1 Block 25	
Slot	Index	0x04	0x7F
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1746 Velocity+ Loop 1 Block 26

Name		Velocity+ Loop 1 Block 26	
Slot	Index	0x04	0x80
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1747 Velocity+ Loop 1 Block 27

Name		Velocity+ Loop 1 Block 27	
Slot	Index	0x04	0x81
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1748 Velocity+ Loop 1 Block 28

Name		Velocity+ Loop 1 Block 28	
Slot	Index	0x04	0x82
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1749 Velocity+ Loop 1 Block 29

Name		Velocity+ Loop 1 Block 29	
Slot	Index	0x04	0x83
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1750 Velocity+ Loop 1 Block 30

Name		Velocity+ Loop 1 Block 30	
Slot	Index	0x04	0x84
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1751 Velocity+ Loop 1 Block 31

Name		Velocity+ Loop 1 Block 31	
Slot	Index	0x04	0x85
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1752 Velocity+ Loop 1 Block 32

Name		Velocity+ Loop 1 Block 32	
Slot	Index	0x04	0x86
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1753 Velocity+ Loop 2 Block 1

Name		Velocity+ Loop 2 Block 1	
Slot	Index	0x04	0x89
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1754 Velocity+ Loop 2 Block 2

Name		Velocity+ Loop 2 Block 2	
Slot	Index	0x04	0x8A
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1755 Velocity+ Loop 2 Block 3

Name		Velocity+ Loop 2 Block 3	
Slot	Index	0x04	0x8B
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1756 Velocity+ Loop 2 Block 4

Name		Velocity+ Loop 2 Block 4	
Slot	Index	0x04	0x8C
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1757 Velocity+ Loop 2 Block 5

Name		Velocity+ Loop 2 Block 5	
Slot	Index	0x04	0x8D
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1758 Velocity+ Loop 2 Block 6

Name		Velocity+ Loop 2 Block 6	
Slot	Index	0x04	0x8E
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1759 Velocity+ Loop 2 Block 7

Name		Velocity+ Loop 2 Block 7	
Slot	Index	0x04	0x8F
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1760 Velocity+ Loop 2 Block 8

Name		Velocity+ Loop 2 Block 8	
Slot	Index	0x04	0x90
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1761 Velocity+ Loop 2 Block 9

Name		Velocity+ Loop 2 Block 9	
Slot	Index	0x04	0x91
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1762 Velocity+ Loop 2 Block 10

Name		Velocity+ Loop 2 Block 10	
Slot	Index	0x04	0x92
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1763 Velocity+ Loop 2 Block 11

Name		Velocity+ Loop 2 Block 11	
Slot	Index	0x04	0x93
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1764 Velocity+ Loop 2 Block 12

Name		Velocity+ Loop 2 Block 12	
Slot	Index	0x04	0x94
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1765 Velocity+ Loop 2 Block 13

Name		Velocity+ Loop 2 Block 13	
Slot	Index	0x04	0x95
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1766 Velocity+ Loop 2 Block 14

Name		Velocity+ Loop 2 Block 14	
Slot	Index	0x04	0x96
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1767 Velocity+ Loop 2 Block 15

Name		Velocity+ Loop 2 Block 15	
Slot	Index	0x04	0x97
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1768 Velocity+ Loop 2 Block 16

Name		Velocity+ Loop 2 Block 16	
Slot	Index	0x04	0x98
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1769 Velocity+ Loop 2 Block 17

Name		Velocity+ Loop 2 Block 17	
Slot	Index	0x04	0x99
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1770 Velocity+ Loop 2 Block 18

Name		Velocity+ Loop 2 Block 18	
Slot	Index	0x04	0x9A
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1771 Velocity+ Loop 2 Block 19

Name		Velocity+ Loop 2 Block 19	
Slot	Index	0x04	0x9B
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1772 Velocity+ Loop 2 Block 20

Name		Velocity+ Loop 2 Block 20	
Slot	Index	0x04	0x9C
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1773 Velocity+ Loop 2 Block 21

Name		Velocity+ Loop 2 Block 21	
Slot	Index	0x04	0x9D
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1774 Velocity+ Loop 2 Block 22

Name		Velocity+ Loop 2 Block 22	
Slot	Index	0x04	0x9E
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1775 Velocity+ Loop 2 Block 23

Name		Velocity+ Loop 2 Block 23	
Slot	Index	0x04	0x9F
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1776 Velocity+ Loop 2 Block 24

Name		Velocity+ Loop 2 Block 24	
Slot	Index	0x04	0xA0
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1777 Velocity+ Loop 2 Block 25

Name		Velocity+ Loop 2 Block 25	
Slot	Index	0x04	0xA1
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1778 Velocity+ Loop 2 Block 26

Name		Velocity+ Loop 2 Block 26	
Slot	Index	0x04	0xA2
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1779 Velocity+ Loop 2 Block 27

Name		Velocity+ Loop 2 Block 27	
Slot	Index	0x04	0xA3
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1780 Velocity+ Loop 2 Block 28

Name		Velocity+ Loop 2 Block 28	
Slot	Index	0x04	0xA4
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1781 Velocity+ Loop 2 Block 29

Name		Velocity+ Loop 2 Block 29	
Slot	Index	0x04	0xA5
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1782 Velocity+ Loop 2 Block 30

Name		Velocity+ Loop 2 Block 30	
Slot	Index	0x04	0xA6
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1783 Velocity+ Loop 2 Block 31

Name		Velocity+ Loop 2 Block 31	
Slot	Index	0x04	0xA7
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1784 Velocity+ Loop 2 Block 32

Name		Velocity+ Loop 2 Block 32	
Slot	Index	0x04	0xA8
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1785 Velocity+ Loop 3 Block 1

Name		Velocity+ Loop 3 Block 1	
Slot	Index	0x04	0xAB
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1786 Velocity+ Loop 3 Block 2

Name		Velocity+ Loop 3 Block 2	
Slot	Index	0x04	0xAC
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1787 Velocity+ Loop 3 Block 3

Name		Velocity+ Loop 3 Block 3	
Slot	Index	0x04	0xAD
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1788 Velocity+ Loop 3 Block 4

Name		Velocity+ Loop 3 Block 4	
Slot	Index	0x04	0xAE
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1789 Velocity+ Loop 3 Block 5

Name		Velocity+ Loop 3 Block 5	
Slot	Index	0x04	0xAF
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1790 Velocity+ Loop 3 Block 6

Name		Velocity+ Loop 3 Block 6	
Slot	Index	0x04	0xB0
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1791 Velocity+ Loop 3 Block 7

Name		Velocity+ Loop 3 Block 7	
Slot	Index	0x04	0xB1
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1792 Velocity+ Loop 3 Block 8

Name		Velocity+ Loop 3 Block 8	
Slot	Index	0x04	0xB2
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1793 Velocity+ Loop 3 Block 9

Name		Velocity+ Loop 3 Block 9	
Slot	Index	0x04	0xB3
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1794 Velocity+ Loop 3 Block 10

Name		Velocity+ Loop 3 Block 10	
Slot	Index	0x04	0xB4
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1795 Velocity+ Loop 3 Block 11

Name		Velocity+ Loop 3 Block 11	
Slot	Index	0x04	0xB5
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1796 Velocity+ Loop 3 Block 12

Name		Velocity+ Loop 3 Block 12	
Slot	Index	0x04	0xB6
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1797 Velocity+ Loop 3 Block 13

Name		Velocity+ Loop 3 Block 13	
Slot	Index	0x04	0xB7
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1798 Velocity+ Loop 3 Block 14

Name		Velocity+ Loop 3 Block 14	
Slot	Index	0x04	0xB8
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1799 Velocity+ Loop 3 Block 15

Name		Velocity+ Loop 3 Block 15	
Slot	Index	0x04	0xB9
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1800 Velocity+ Loop 3 Block 16

Name		Velocity+ Loop 3 Block 16	
Slot	Index	0x04	0xBA
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1801 Velocity+ Loop 3 Block 17

Name		Velocity+ Loop 3 Block 17	
Slot	Index	0x04	0xBB
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1802 Velocity+ Loop 3 Block 18

Name		Velocity+ Loop 3 Block 18	
Slot	Index	0x04	0xBC
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1803 Velocity+ Loop 3 Block 19

Name		Velocity+ Loop 3 Block 19	
Slot	Index	0x04	0xBD
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1804 Velocity+ Loop 3 Block 20

Name		Velocity+ Loop 3 Block 20	
Slot	Index	0x04	0xBE
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1805 Velocity+ Loop 3 Block 21

Name		Velocity+ Loop 3 Block 21	
Slot	Index	0x04	0xBF
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1806 Velocity+ Loop 3 Block 22

Name		Velocity+ Loop 3 Block 22	
Slot	Index	0x04	0xC0
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1807 Velocity+ Loop 3 Block 23

Name		Velocity+ Loop 3 Block 23	
Slot	Index	0x04	0xC1
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1808 Velocity+ Loop 3 Block 24

Name		Velocity+ Loop 3 Block 24	
Slot	Index	0x04	0xC2
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1809 Velocity+ Loop 3 Block 25

Name		Velocity+ Loop 3 Block 25	
Slot	Index	0x04	0xC3
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1810 Velocity+ Loop 3 Block 26

Name		Velocity+ Loop 3 Block 26	
Slot	Index	0x04	0xC4
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1811 Velocity+ Loop 3 Block 27

Name		Velocity+ Loop 3 Block 27	
Slot	Index	0x04	0xC5
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

5.1812 Velocity+ Loop 3 Block 28

Name		Velocity+ Loop 3 Block 28	
Slot	Index	0x04	0xC6
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1813 Velocity+ Loop 3 Block 29

Name		Velocity+ Loop 3 Block 29	
Slot	Index	0x04	0xC7
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1814 Velocity+ Loop 3 Block 30

Name		Velocity+ Loop 3 Block 30	
Slot	Index	0x04	0xC8
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1815 Velocity+ Loop 3 Block 31

Name		Velocity+ Loop 3 Block 31	
Slot	Index	0x04	0xC9
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5.1816 Velocity+ Loop 3 Block 32

Name		Velocity+ Loop 3 Block 32	
Slot	Index	0x04	0xCA
Bytes	Units	4	Unit/s
Access		Read/Write	
Value Acceptance		also with active enabling	
Busmanager		available	
Min./Max. Value		0,00	100000,00
Scale	Offset	167,77	0,00

5 Bus parameters

Bosch Rexroth AG
Hydraulics
Zum Eisengießer 1
97816 Lohr, Germany
info@boschrexroth.de
www.boschrexroth.com

© This document, as well as the data, specifications and other information set forth in it, are the exclusive property of Bosch Rexroth AG. It may not be reproduced or given to third parties without its consent.

The data specified above only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.

Printed in Germany
RE 30543-05-Z/04.12